


Teepee Tent Instructions Manual

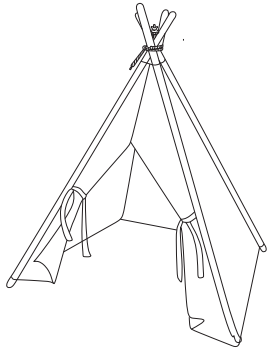


TIPS:


1. There may be wrinkles due to long-term folding when the tent is received. It can be more beautiful if it is ironed before use.

2. The number of A, C, F of the pentagon tent is 5, and the number of D is 10.


3.*H: Some types of teepee may not include reinforcement kits.

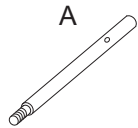

4 X Top Wood Poles

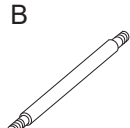


4 x Middle Wood Poles

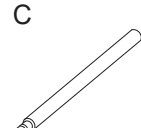

4 X Bottom Wood Poles



 
8 X Plastic Connectors




1 x Teepee Tent Fabric



4 x Anti-Skid Shoes

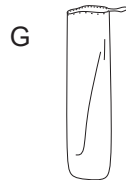

1 x Carry Bag

 

1 x Reinforcement Device

SAFETY WARNINGS-PLEASE READ CAREFULLY

- Use teepee on level ground, clear of stones or any sharp objects.
- Do not modify this product!
- Packaging is not a toy, please remove all packing before assembly. Keep it away from babies and children to avoid danger of suffocation.
- ONLY to be assembled by an adult!
- Teepee is not waterproof, DO NOT use for camping outdoors.
- NEVER LET A CHILD USE TEEPEE WITHOUT ADULT SUPERVISION!
- ALWAYS KEEP TEEPEE AWAY FROM OPEN FLAMES!

Wash Tips:





Machine washable (gentle mode) or Hand-wash, and Tumble dry (low). We suggest that you iron it after washing to avoid shrinkage. Since the fabric is cotton canvas, please ONLY wash it in cold water, avoid direct sunshine.

WARNING:
CHOKING HAZARD-Small parts.

NOT RECOMMENDED FOR CHILDREN UNDER 36 MONTHS
Safety standard: AS/nzs ISO 8124



Assembly Instructions

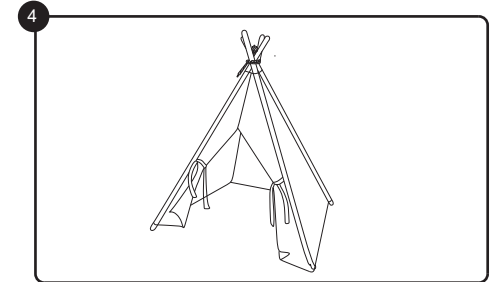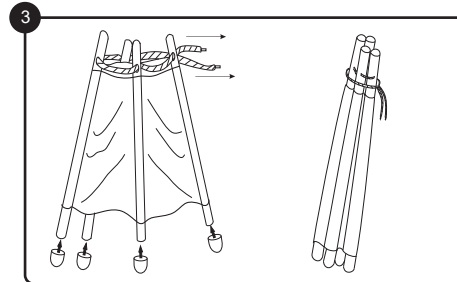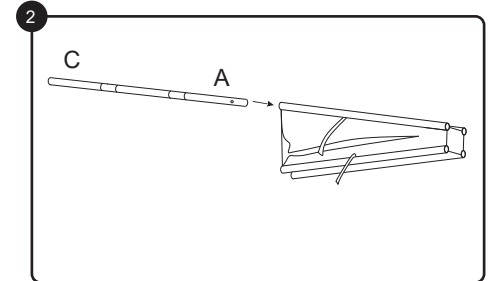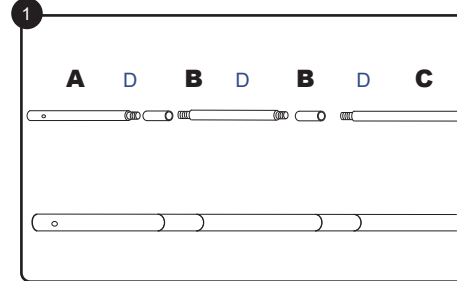

EN

1. Connect four wooden poles with connector together.
2. Then slide the poles into the teepee cloth cover.
3. Tie them together at the top with the cord. And put the Anti-Skid Shoes on the bottom of the pole.
4. Open the teepee like an umbrella (Properly adjust the wooden pole to ensure full opening).

FR

1. Connectez quatre poteaux en bois avec le connecteur ensemble.
2. Faites ensuite glisser les pôles dans la housse en tissu tipi.
3. Attachez-les ensemble en haut avec le cordon. Et placez les chaussures antidérapantes sous le poteau.
4. Ouvrez le tipi comme un parapluie (ajustez correctement le poteau en bois pour assurer une ouverture complète).

IT

1. Collegare insieme quattro pali di legno con connettore.
2. Quindi far scorrere i poli nella copertura del teepee.
3. Collegarli in alto con il cavo. E metti le scarpe antiscivolo sul fondo dell'asta.
4. Aprire il teepee come un ombrello (regolare correttamente l'asta di legno per garantire la completa apertura).

DE

1. Verbinden Sie vier Holzstangen mit Stecker miteinander.
2. Schieben Sie dann die Stangen in die Tipi-Stoffabdeckung.
3. Binden Sie sie oben mit der Schnur zusammen. Und legen Sie die Anti-Rutsch-Schuhe auf die Boden der Holzstange.
4. Öffnen Sie den Tipi wie einen Regenschirm (stellen Sie die Holzstange richtig ein, um eine vollständige Öffnung zu gewährleisten).

ES

1. Conecte cuatro postes de madera con el conector juntos.
2. Después deslice los postes en la cubierta de tela tipi.
3. Atarlos juntos en la parte superior con el cable. Y ponga los zapatos antideslizantes en la parte inferior del poste.
4. Abra el tipi como un paraguas (ajuste adecuadamente el poste de madera para asegurar una apertura total).

JP

1. 4つの木製のポールをコネクターで一緒に接続します。
2. 次に、ポールをテントの布カバーにスライドさせます。
3. 上部をコードで結びます。そして、滑り止め靴をポールの底に置きます。
4. 傘のようにテントのテントを開けます（完全に開くように木の棒を適切に調整します）。