

总长：720mm 正面 V380 Pro Smart Camera Product Manual(V2.3) Note: Please carefully follow along the device and steps for subsequent steps. Download Search for "V380 Pro" in the App store or scan the QR code below to download and install the V380 Pro APP. Scan the QR code to download the V380 Pro APP Reset the camera 1. Power on the camera. 2. Press and hold the reset button for several seconds, the camera will prompt "Restore factory initialization". Type1 Type2 Type3 Type4 Type5 Type6 Note: The position of the reset button is for reference only, depending on your device. Scan the QR code to configure the network How to connect your camera to the network via Wi-Fi Scan the QR code tag 1. Open V380 Pro APP to register your account and log in, click the "+" button on the home page. 2. Scan the QR code of the camera body tag with your phone. Note: Camera body tag is located on the bottom cover of the camera. My Home Scan the QR code below for Tutorial Videos when you need. If the camera body tag is damaged, you can scan the QR code below to configure the network. WiFi selection 1. Connect your mobile phone to 2.4GHz WiFi first. 2. Confirm the connected WiFi and enter the password. Wi-Fi connection Select the WiFi camera Enter the password Next Note: Please select WiFi camera. If you select the wrong camera, you will be prompted to select again. QR code configuration 1. The APP will generate the QR code and then use camera to scan the QR code. 2. After the camera identifies the QR code successfully, it will prompt "Configuration successful". Click "Next" and the "next" in the APP after hearing that tone. 3. After the connection is completed, it will prompt "WiFi connected". Adding completed 1. The APP automatically connects the camera. 2. After the camera is successfully networked, you can create groups for the camera and set the name. Wi-Fi connection Completed 反面 Hotspot configuration 1. Click "Can't find the QR code on the device?". 2. Select "Wi-Fi Smart Camera" > "Hotspot connection". Hotspot connection Next Android 1. Select WiFi and enter your WiFi password. 2. Select "Connect Wi-Fi Network" button and connect to the device hotspot (WPA2). 3. The device will automatically connect to WiFi after returning to the APP. Wi-Fi connection Next iOS 1. Enter your WiFi password. If you want to connect to other WiFi, please connect your mobile phone to the WiFi you need and then return to the APP to refresh. 2. Select "Connect Wi-Fi hotspot" button and connect to the device hotspot (WPA2). 3. The device will automatically connect to WiFi after returning to the APP. Wi-Fi connection Next Real-time preview The video camera can be viewed in the device file, and the real-time preview interface can be viewed by selecting the camera. My Home Video replay After connecting the camera to the APP, open the real-time preview interface, and click "Replay" in the function bar. Replay Video recording with Micro SD card Before installing the Micro SD card, please turn off the camera first, and then turn on the power after installation. Capacity camera supports up to 128G capacity of the TF card. The format of SD card should be FAT32. The format of Micro SD card should be FAT32. Settings In the device list, click (Recording settings). 1. Recording settings Continuous recording: Continuous recording will be performed during the working period of the camera. Event recording: Recording will be started only when the alarm is triggered. Record audio whether audio is included during recording. 2. Video quality setting * You can set the quality of video by yourself 1080P or 720P. FAQ Q: The camera can't connect to WiFi. A: 1. The wrong password is a common cause of connection failure. Please confirm whether the password entered is correct. 2. Please confirm that the camera WiFi is 2.4GHz. Please use a 2.4GHz Smart dual-band router, please select 2.4GHz WiFi. 3. The WiFi router should not contain special symbols and should not be hidden. The restrictions such as WPA isolation and WiFi router protection of the router cannot be opened. Q: There is a prompt "Device offline" in the device list. A: 1. Please restart the camera and confirm that the camera can start normally and connect to WiFi. 2. Please turn off the main functions of the router, broadcast, WiFi router protection, the address binding, etc. to support remote access, which requires the router to connect to WiFi. 3. If the router is replaced or the WiFi password is changed, please restart the camera and reconfigure the network. Attentions • The camera only supports 2.4GHz WiFi. Please confirm that the WiFi connected by the mobile phone is 2.4GHz before network configuration. • Concerning Micro SD card recording, when the recording volume reaches the upper limit, the video recording file will stop recording until the Micro SD card is automatically formatted. • Long-term use in the adverse natural environment (high temperature, high humidity, the large amount of dust or smoke, etc.) may damage the camera. • V380 Pro APP and device firmware will be updated from time to time. For your best experience, please update the APP and upgrade the device firmware in time. 切刀 压线 齿刀 开槽 半穿 粘合			2022.02.26 V2.3更新内容： 1、优化配网视频教程的二维码链接 2、增加图纸规范 广州宏视 内部审核 包装审核 ▶ 梁宇恒 数据审核 ▶ 梁宇恒
产品品号 ▶ 1604000088	印刷颜色 ▶ C:72 M:45 Y:0 K:0	印刷纸张 ▶ 157g铜版纸	样品 样品数量 ▶ 1套
产品名 ▶ V380 Pro系列英文说明书 V380通用	装订方式 ▶ 风琴折	折页数量 ▶ 7折8页	
设计师 ▶ 刘亮	成品尺寸 ▶ 90×75mm	特种工艺 ▶ 无	