 


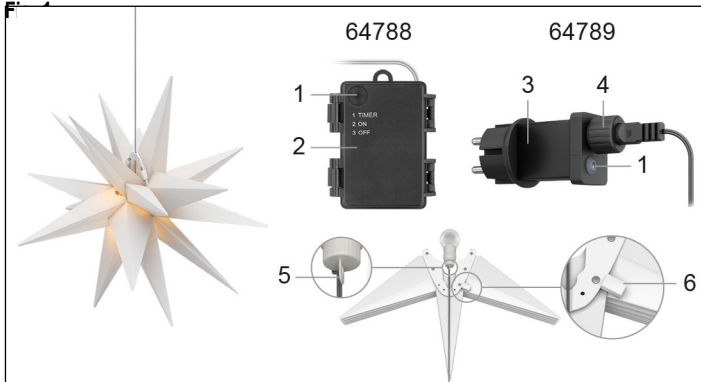

Technical data / Specifications

Item number	64788	64789
Light source	LED	
Operating voltage	4.5 V	4.5 V, 0.3 A
Light colour	warm white	
Colour temperature	3000 K	
Rated luminous flux	16 lm	21 lm
Max. power consumption	0.27 W	0.53 W
Nominal lifetime	10,000 h	
Protection rating	IP44	
Dimmability	not dimmable	
Protection class	III	
Material	plastic, copper	
Colour	white, transparent	
Dimensions	Ø 56 cm	
Cable length	2 m	9.5 m
Weight	239 g	308 g
Batteries (not included)		
Type	LR06, Mignon, AA, 1.5 V	
Quantity (pcs.)	3	
Power adapter		
Input		220-240 V 50-60 Hz, 0.12 A
Output		4.5 V 0.3 A, 1.35 W
Protection class	II	
Protection level	IP44	
ta / tc	40 °C / 75 °C	
No-load power (Pno)	0.23 W	
Standby power (Psb)	N/A	

Networked standby power (Pnet)		N/A
--------------------------------	--	-----

Symbols used

Direct current	IEC 60417-5031	
Alternating current	IEC 60417-5032	
Not dimmable	IEC 60968	
Class III equipment	IEC 60417-5180	
Class II equipment	IEC 60417-5172	
Safety isolating transformer, short-circuit proof	IEC 60417-5947	
Independent lighting auxiliary	IEC 60417 - 5138	

DE

1 Safety instructions

1.1 General

The user manual is an integral part of the product and contains important information on correct use.

- Read the operating instructions thoroughly and carefully before use.
- The operating instructions must be available in case of uncertainty or if the product is passed on to others.
- Please keep the operating instructions in a safe place.

The product is only de-energised when the plug is disconnected.

- Only use the product with easily accessible sockets.
- Do not modify the product or its accessories.
- Never open the housing.
- Do not short-circuit connections or circuits.

The light sources cannot be replaced!

If the seals are damaged and/or missing, the product must no longer be used.

A defective device must not be put into operation, but must be secured against unintentional further use.

- Only use the product, product parts and accessories when they are in perfect condition.
- Avoid extreme conditions such as heat and cold, moisture and direct sunlight, microwaves, as well as vibrations and mechanical pressure.
- If you have any questions, or if the product is faulty, has suffered mechanical damage, is malfunctioning, or you encounter any other issues that cannot be resolved using the accompanying documentation, please contact your dealer or the manufacturer.

Not suitable for children. This product is not a toy!

Keep the packaging, small parts and insulation material out of reach to prevent accidental use.

- Do not cover the product.
- Do not hang any objects on the product.

Risk of injury from tripping and falling

- Ensure that the cable is routed so that it does not obstruct anyone or become damaged.
- Ensure that the cables hang loosely and are not too taut.

Otherwise, there is a risk of the cable breaking.

1.2 Batteries

- Never mix used batteries with new ones.
- Only use batteries of the same type.
- Do not mix alkaline, zinc-carbon or nickel-cadmium batteries.

- Remove any leaking, deformed or corroded cells from the product and dispose of them using suitable protective equipment.
- Never throw batteries into a fire.

2 Description and function

2.1 Product

The product is a decorative, hanging star with LED lighting for outdoor use (IP44). The LED lighting is controlled via a button (3 settings – TIMER/ON/OFF) and features a timer function. Item 64788 is battery-operated and item 64789 is powered via a mains adapter.

2.2 Contents

3D LED poinsettia, operating instructions

2.3 Controls

See Fig. 1.

- 1 TIMER/ON/OFF button
- 2 Battery compartment
- 3 Mains adapter

- 4 Cover cap
- 5 Hanging loop
- 6 Latch

3 Intended use

This product is intended exclusively for private use and the purpose for which it is designed. This product is not intended for commercial use. Any use other than that described in the "Description and Function" section or in the "Safety Instructions" is not permitted. Failure to observe and comply with these regulations and the safety instructions may result in serious accidents, personal injury and damage to property.

IP44: This product is protected against splashing water and contact with foreign objects $\geq \varnothing 1$ mm.

4 Preparation

- Check the scope of delivery for completeness and undamaged condition.
- Compare the technical data of all devices to be used and ensure compatibility.

5 Connection and operation

WARNING! Damage to property caused by moisture inside the unit

- 64788: Ensure that the sealed battery compartment (2) is tightly closed so that no moisture can get inside.
- 64789: Ensure that the cover cap (4) is tightly closed to prevent moisture from entering the interior.

5.1 Assembly and installation

The product is supplied folded up. Before first use, it must be assembled and hung in a suitable location.

1. Unfold the star.
2. Secure the star using the fasteners (6).
The star must be hung using a separate ribbon. A ribbon is not included in the delivery. The star must not be hung by the cable.
3. Attach a suitable ribbon to the hanging loop (5) at the top of the LED light.
4. Hang the star using the ribbon.
Choose a place to hang the star where it will not obstruct anyone, will not fall down, and will not be damaged by environmental factors.

5.2 Inserting and replacing batteries (item 64788)

New batteries must be fitted before first use, if the brightness of the LEDs diminishes or if they no longer switch on.

1. Open the battery compartment.
2. Remove the old batteries if necessary.
3. Insert new batteries into the battery compartment, ensuring the positive and negative terminals are correctly aligned.
4. Close the battery compartment.

5.3 Connect the mains adapter to the mains (item 64789)

- Plug the mains adapter (3) into a suitable socket.
When used outdoors, the socket must also have a protection rating of at least IP44.

5.4 Operating item 64788

- Press the TIMER/ON/OFF button (1) once to activate the timer function.
When the timer function is active, the LED light switches off automatically after 6 hours and switches back on after a further 18 hours. If the set timer is not changed, the LED light switches on and off at the same time every day.
- Press the TIMER/ON/OFF button twice to switch on the LED light.
- Press the TIMER/ON/OFF button three times to switch off the LED light.

5.5 Operating instructions for item 64789

- Press the TIMER/ON/OFF button (1) once to switch on the LED light.
- Press the TIMER/ON/OFF button twice to activate the timer function.
The TIMER/ON/OFF button lights up green as soon as the timer is active.
When the timer function is active, the LED light switches off automatically after 6 hours and switches back on after a further 18 hours. If the set timer is not changed, the LED light switches on and off at the same time every day.
- Press the TIMER/ON/OFF button three times to switch off the LED light.

6 Maintenance, care, storage and transport

The product is maintenance-free.

CAUTION! Damage to property

- Unplug the mains adapter from the socket before cleaning.
- Use only a dry, soft cloth for cleaning.
- Do not use cleaning agents or chemicals.
- If the product is not to be used for a prolonged period, store it out of the reach of children and in a dry, dust-free environment.
- Remove the batteries if the device is not going to be used for a long time.
- Store the product in a cool, dry place.
- Keep the original packaging for transport.

7 Disposal instructions

 In accordance with the European WEEE Directive, electrical and electronic equipment must not be disposed of with household waste. Their components must be separated for recycling or disposal, as toxic and hazardous components can cause lasting damage to health and the environment if disposed of improperly.

As a consumer, you are obliged under the Electrical and Electronic Equipment Act (ElektroG) to return electrical and electronic equipment at the end of its useful life to the manufacturer, the point of sale or to designated public collection points free of charge. Details are governed by the relevant national legislation. The symbol on the product, the operating instructions and/or the packaging indicates these provisions. By separating, recycling and disposing of waste equipment in this way, you are making an important contribution to protecting our environment.

WEEE No.: 82898622

1 Safety instructions

1.1 General

The user manual is part of the product and contains important information for correct use.

- Read the user manual thoroughly and carefully before use.

The user manual must be available in case of any queries or when passing the product on to others.

- Keep this user manual.

The device is only voltage-free when the plug is disconnected.

- Only use the product on easily accessible sockets.
- Do not modify the product or its accessories.
- Do not open the housing.
- Do not short-circuit connectors and circuits.

The lamps cannot be replaced!

If the product is damaged and/or the seals are missing, it must no longer be used.

Do not operate a device if it is not in working order. In such cases, it must be secured against unintentional further use.

- Use the product, its parts and accessories only when they are in perfect condition.
- Avoid stresses such as heat and cold, moisture and direct sunlight, microwaves, vibrations and mechanical pressure.
- In the event of questions, defects, mechanical damage, faults or other problems not covered by the documentation, contact your dealer or the manufacturer.

Not intended for children. The product is not a toy!

- Secure the packaging, small parts and insulation to prevent accidental use.
- Do not cover the product.

- Do not hang any objects on the product.

Risk of injury from tripping and falling

- Ensure that the cable is laid in such a way that it does not obstruct anyone and is not damaged.
- Ensure that the cable hangs loosely and is not too taut.

Otherwise, there is a risk of the cable breaking.

1.2 Batteries

- Do not mix old and new batteries.
- Only use batteries of the same or equivalent type as recommended.
- Do not mix alkaline, carbon-zinc or nickel-cadmium batteries.
- Remove any leaking, deformed or corroded batteries from the product and dispose of them using appropriate protective measures.
- Do not throw into fire.

1 Description and function

1.1 Product

The product is a decorative hanging star with LED lighting for outdoor use (IP44). The LED lighting is controlled via a button (3 settings – TIMER/ON/OFF) and has a timer function. Item 64788 is battery operated and item 64789 is powered by a mains adapter.

1.2 Contents

LED Christmas Star 3D, User Manual

1.3 Controls

See Fig. 1.

- | | | | |
|---|---------------------|---|------------|
| 1 | TIMER/ON/OFF button | 4 | Cover cap |
| 2 | Battery compartment | 5 | Suspension |
| 3 | Mains adapter | 6 | Closure |

2 Intended use

This product is intended exclusively for private use and its intended purpose. This product is not intended for commercial use. We do not permit the use of the device in any other way than as described in the sections 'Description of Function' and 'Safety Instructions'. Failure to comply with these regulations and safety instructions may result in fatal accidents, injuries, and damage to persons and property.

IP44: This product is protected against splashes and contact with foreign objects $\geq \varnothing 1 \text{ mm}$.

3 Preparation

- Check the contents of the delivery to ensure they are complete and undamaged.
- Compare the specifications of all devices used and ensure compatibility.

4 Connection and operation

NOTICE! Material damage caused by moisture inside the appliance

- 64788: Ensure that the battery compartment (2) is tightly closed so that no moisture can get inside.
- 64789: Ensure that the cover cap (4) is tightly closed so that no moisture can get inside.

4.1 Assembly and installation

The product is delivered folded. Before using it for the first time, it must be assembled and hung up in a suitable place.

- Unfold the star.
- Secure the star in place using the fasteners (6).
The star must be hung using a separate ribbon. A ribbon is not included in the scope of delivery. The star must not be hung using the cable.
- Attach a suitable ribbon to the suspension point (5) at the top of the LED light.
- Hang the star using the ribbon.
Choose a location for hanging the star so that it does not obstruct anyone, does not fall down and is not damaged by environmental factors.

4.2 Inserting and changing the batteries (Item 64788)

Before using the star for the first time, or when the brightness of the LEDs diminishes or they can no longer be switched on, new batteries must be inserted.

- Open the battery compartment.
- Remove the old batteries if necessary.
- Insert new batteries into the battery compartment, ensuring the correct polarity (positive and negative).
- Close the battery compartment.

5.3 Connecting the mains adapter to the mains (Item 64789)

- Plug the mains adapter (3) into a suitable socket.
When used outdoors, the socket must also have at least IP44 protection.

5.4 Operating item 64788

- Press the TIMER/ON/OFF button (1) once to activate the timer function.
When the timer function is active, the LED light switches off automatically after 6 hours and switches on again after a further 18 hours. If the set timer is not changed, the LED light switches on and off at the same time every day.
- Press the TIMER/ON/OFF button twice to switch on the LED lamp.
- Press the TIMER/ON/OFF button three times to switch off the LED lamp.

5.5 Operating item 64789

- Press the TIMER/ON/OFF button (1) once to switch on the LED light.
- Press the TIMER/ON/OFF button twice to activate the timer function.
The TIMER/ON/OFF button lights up green as soon as the timer is active.
When the timer function is active, the LED light switches off automatically after 6 hours and switches on again after a further 18 hours. If the set timer is not changed, the LED light switches on and off at the same time every day.
- Press the TIMER/ON/OFF button three times to switch off the LED light.

6 Maintenance, Care, Storage and Transport

The product is maintenance-free.

NOTICE! Material damage

- Always unplug the mains adapter before cleaning.
- Only use a dry, soft cloth for cleaning.
- Do not use detergents or chemicals.
- Store the product out of the reach of children and in a dry, dust-free environment when not in use.
- Remove batteries / rechargeable batteries when not in use.

- Store in a cool, dry place.
- Keep and use the original packaging for transport.

7 Disposal instructions


 In accordance with the European WEEE Directive, electrical and electronic equipment must not be disposed of with household waste. Its components must be recycled or disposed of separately.

Otherwise, harmful and hazardous substances may damage health and pollute the environment.

As a consumer, you are legally obliged to return electrical and electronic devices to the manufacturer, the retailer, or public collection points at the end of the device's life, free of charge. Specific details are governed by national law. The symbol on the product, in the user manual, or on the packaging refers to these terms. By separating, using and disposing of used devices in this way, you make an important contribution to environmental protection.

WEEE No: 82898622

 Fig. 1

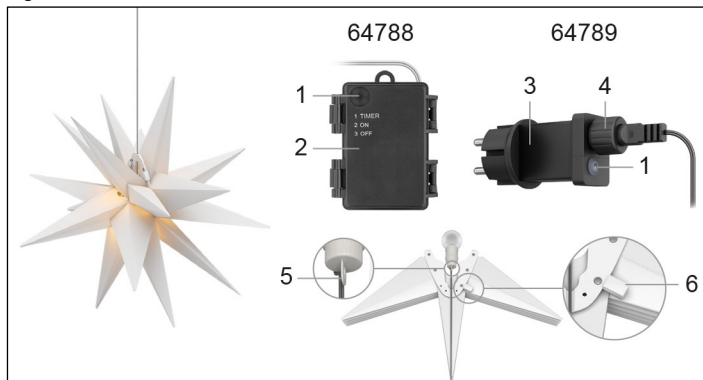

Specifications

Item number	64788	64789
Light source	LED	
Operating voltage	4.5 V	4.5 V, 0.3 A
Light colour	warm white	
Colour temperature	3000 K	
Rated luminous flux	16 lm	21 lm
Max. power consumption	0.27 W	0.53 W
Nominal lifetime	10,000 h	
Protection rating	IP44	
Dimmability	not dimmable	
Protection class		III
Material	plastic, copper	
Colour	white, transparent	
Dimensions	Ø 56 cm	
Cable length	2 m	9.5 m
Weight	239 g	308 g
Batteries (not included)		
Type	LR06, Mignon, AA, 1.5 V	
Quantity (pcs.)	3	
Power adapter		
Input		220–240 V, 50–60 Hz, 0.12 A
Output		4.5 V, 0.3 A, 1.35 W
Protection class		II
Protection level		IP44
ta / tc		40 °C / 75 °C
No-load power (Pno)		0.23 W
Standby power (Psb)		N/A

Networked standby power (Pnet)		N/A
--------------------------------	--	-----

Symbols used

Direct current	IEC 60417-5031	
Alternating current	IEC 60417-5032	
Not dimmable	IEC 60968	
Class III equipment	IEC 60417-5180	
Class II equipment	IEC 60417-5172	
Safety isolating transformer, short-circuit proof	IEC 60417-5947	
Independent lighting auxiliary	IEC 60417 - 5138	

FR

1 Safety instructions

1.1 General

The user manual forms an integral part of the product and contains important information for correct installation and use.

- Please read the user manual carefully and in full before use.
- The instructions for use must be available at all times and when the product is handed over.

- Please keep these instructions in a safe place.
- The appliance is only de-energised when the plug is disconnected.

- Only use the product with easily accessible power sockets.
- Do not modify the product or its accessories.
- Do not open the housing.
- Do not short-circuit connections or circuits.

The bulbs cannot be replaced!

If the product is damaged and/or the seals are missing, it must not be used.

A defective appliance must not be put into service. Instead, it must be secured to prevent accidental use.

- Only use the product, parts and accessories in perfect condition.
- Avoid extreme conditions, such as extreme heat and cold, humidity and direct sunlight, as well as microwaves, vibrations and mechanical pressure.
- If you have any questions, or in the event of faults, mechanical damage, interference or other problems not covered by the documentation, please contact your dealer or the manufacturer.

Not intended for children. This product is not a toy!

- Secure the packaging, small parts and insulation to prevent accidental use.
- Do not cover the product.
- Do not hang objects from the product.

Risk of injury from tripping and falling

- Ensure that the cable is laid in such a way that it does not obstruct anyone or become damaged.
- Ensure that the cable hangs freely and is not too taut.

Otherwise, there is a risk of the cable breaking.

1.2 Batteries

- Never mix used batteries with new ones.
- Only use batteries of the same type.
- Do not mix alkaline, zinc-carbon and nickel-cadmium batteries.
- Remove expired, deformed or corroded cells from the product using appropriate safety equipment and dispose of them.
- Do not throw into a fire.

2 Description and function

2.1 Product

The product is a decorative hanging star with LED lighting for outdoor use (IP44). The LED lighting is controlled by a button (3 positions – TIMER/ON/OFF) and has a timer function. Item 64788 is battery-operated and item 64789 is powered by a mains adapter.

2.2 Contents of the package

3D LED Star, User Manual

2.3 Control elements

See Fig. 1.

- 1 TIMER/ON/OFF button
- 2 Battery compartment
- 3 Mains adapter
- 4 Cover
- 5 Suspension
- 6 Closure

3 Intended use

This product is intended exclusively for private use and for its intended purpose. This product is not intended for commercial use. We do not authorise the use of the device in any way other than that described in the sections 'Description and Functions' and 'Safety Instructions'. Failure to comply with these safety instructions and regulations may result in fatal accidents, injuries and damage to persons and property.

IP44: This product is protected against splashes and contact with foreign objects $\geq \varnothing 1$ mm.

4 Preparation

- Check the contents of the delivery for completeness and integrity.
- Compare the specifications of all the equipment to be used to ensure compatibility.

5 Connection and operation

WARNING! Damage to equipment caused by moisture inside the unit

- 64788: Ensure that the battery compartment (2) is securely closed to prevent moisture from entering.
- 64789: Ensure that the cover (4) is securely closed to prevent any moisture from entering.

5.1 Assembly and installation

The product is delivered folded. Before first use, it must be assembled and hung in a suitable location.

1. Unfold the star.
2. Secure the star using the fasteners (6).
The star must be hung using a separate ribbon. A ribbon is not included in the delivery. The star must not be hung by the cable.
3. Attach a suitable ribbon to the hanging loop (5) at the top of the LED lamp.
4. Hang the star using the ribbon.
Choose a hanging location so that the star does not obstruct anyone, does not fall and is not damaged by environmental factors.

5.2 Inserting and replacing the batteries (Item 64788)

Before using the star for the first time, or if the brightness of the LEDs diminishes or they no longer light up, new batteries must be fitted.

1. Open the battery compartment.
2. Remove the used batteries if necessary.
3. Insert new batteries into the battery compartment, ensuring the positive and negative terminals are correctly aligned.
4. Close the battery compartment.

5.3 Connecting the mains adapter to the mains supply (Item 64789)

- Plug the mains adapter (3) into a suitable mains socket.
When used outdoors, the socket must also have a protection rating of at least IP44.

5.4 Operation of item 64788

- Press the TIMER/ON/OFF button (1) once to activate the timer function.
When the timer function is activated, the LED lamp switches off automatically after 6 hours and switches back on after 18 hours. If the set timer is not changed, the LED lamp switches on and off at the same time every day.
- Press the TIMER/ON/OFF button twice to switch on the LED lamp.
- Press the TIMER/ON/OFF button three times to switch off the LED lamp.

5.5 How to use item 64789

- Press the TIMER/ON/OFF button (1) once to switch on the LED lamp.
- Press the TIMER/ON/OFF button twice to activate the timer function.

The TIMER/ON/OFF button lights up green as soon as the timer is activated.

When the timer function is activated, the LED lamp switches off automatically after 6 hours and switches back on after 18 hours. If the set timer is not changed, the LED lamp switches on and off at the same time every day.

- Press the TIMER/ON/OFF button three times to switch off the LED lamp.

6 Maintenance, Care, Storage and Transport

The product is maintenance-free.

WARNING! Property damage

- Always unplug the mains adapter before cleaning.
- Use only a soft, dry cloth for cleaning.
- Do not use detergents or chemicals.
- Keep the product out of the reach of children and in a dry, dust-free environment when not in use.
- Remove the batteries when not in use.
- Store in a cool, dry place.
- Keep and use the original packaging for transport.

7 Disposal instructions

 Under the European WEEE Directive, it is strictly prohibited to dispose of electrical and electronic equipment with household waste. Their components must be recycled or disposed of separately. Toxic and hazardous components

 can cause lasting damage to health and the environment if not disposed of correctly.

As a consumer, you are legally obliged to return electrical and electronic equipment to the manufacturer, distributor or public collection points at the end of the devices' useful life, free of charge. The details are regulated by national law. The symbol on the product, in the user manual or on the packaging refers to these terms. By separating, handling and disposing of waste from used appliances in this way, you are making a significant contribution to protecting the environment.

WEEE No.: 82898622

IT

1 Safety instructions

1.1 General

The user manual is an integral part of the product and contains important information on correct use.

- Read the instructions carefully and in full before use.

The instructions for use should be available in case of any uncertainties or when transferring the product.

- Keep these instructions for use.

The product is only de-energised when the plug is disconnected.

- Only use the product with easily accessible sockets.
- Do not modify the product or its accessories.
- Do not open the housing.
- Do not short-circuit connections or circuits.

The bulbs cannot be replaced!

If the product is damaged and/or the seals are missing, it must no longer be used.

Do not operate a faulty device; instead, ensure that it is not inadvertently used by others without supervision.

- Use the product, its parts and accessories only when they are in perfect condition.
- Avoid extreme conditions, extreme heat and cold, humidity and direct sunlight, as well as microwave ovens, vibrations and mechanical pressure.
- In the event of questions, defects, mechanical damage, interference or other problems not covered by the documentation, please contact the retailer or manufacturer.

Not intended for children. The product is not a toy!

- Keep the packaging, small parts and insulation material out of reach of children.
- Do not cover the product.
- Do not hang objects on the product.

Risk of injury due to tripping and falling

- Ensure that the cable is laid in such a way that it does not obstruct anyone and cannot be damaged.
- Ensure that the cable hangs freely and is not too taut.

There is a high risk of the cable breaking.

1.2 Batteries

- Never mix used and new batteries.
- Use only batteries of the same type.
- Do not mix alkaline, zinc-carbon or nickel-cadmium batteries.
- Remove expired, deformed or corroded cells from the product using appropriate safety equipment and dispose of them.
- Do not throw into a fire.

2 Description and function

2.1 Product

The product is a decorative hanging star with LED lighting for outdoor use (IP44). The LED lighting is controlled via a button (3 settings – TIMER/ON/OFF) and features a timer function. Item 64788 is battery-operated, whilst item 64789 is powered by a mains adapter.

2.2 Contents of the pack

3D LED Christmas Star, Instructions for use

2.3 Controls

See Fig. 1.

- | | | | |
|---|---------------------|---|------------|
| 1 | TIMER/ON/OFF button | 4 | Cover |
| 2 | Battery compartment | 5 | Suspension |
| 3 | Mains adapter | 6 | Closure |

3 Intended use

This product is designed exclusively for private use and for its intended purpose. This product is not designed for commercial use. The device must not be used in any way other than that described in the chapter 'Description and Function' or 'Safety Instructions'. Failure to observe these rules and the safety instructions may result in fatal accidents, injury and damage to persons and property.

IP44: This product is protected against splashes and contact with foreign objects $\geq \varnothing 1$ mm.

4 Preparation

- Check that the delivery is complete and ensure that the items are undamaged.
- Compare the specifications of all devices used to ensure compatibility.

5 Connection and operation

WARNING! Material damage caused by moisture in the device

- 64788: Ensure that the battery compartment (2) is securely closed so that moisture cannot penetrate inside.
- 64789: Ensure that the cover (4) is securely closed to prevent moisture from entering.

5.1 Assembly and installation

The product is delivered folded. Before using it for the first time, you must assemble it and hang it in a suitable place.

1. Unfold the star.
2. Secure the star in place using the fasteners (6).
The star must be hung using a separate ribbon. The ribbon is not included in the delivery. The star must not be hung by the cable.
3. Attach a suitable ribbon to the suspension point (5) at the top of the LED light.
4. Hang the star using the ribbon.
Choose a place to hang the star so that it does not obstruct anyone, does not fall, and is not damaged by environmental factors.

5.2 Inserting and replacing the batteries (Item 64788)

Before using the star for the first time, or when the LEDs dim or can no longer be switched on, new batteries must be inserted.

1. Open the battery compartment.
2. If necessary, remove the old batteries.
3. Insert the new batteries into the battery compartment, ensuring the positive and negative terminals are correctly aligned.
4. Close the battery compartment.

4.3 Connecting the mains adapter to the mains (Item 64789)

- Connect the mains adapter (3) to a suitable mains socket.

When used outdoors, the socket must have a minimum protection rating of IP44.

4.4 Operation of item 64788

- Press the TIMER/ON/OFF button (1) once to activate the timer function.
When the timer function is active, the LED light switches off automatically after 6 hours and switches back on after a further 18 hours. If the set timer is not changed, the LED light switches on and off at the same time every day.
- Press the TIMER/ON/OFF button twice to switch on the LED lamp.
- Press the TIMER/ON/OFF button three times to switch off the LED lamp.

4.5 Operation of item 64789

- Press the TIMER/ON/OFF button (1) once to switch on the LED light.
- Press the TIMER/ON/OFF button twice to activate the timer function.
The TIMER/ON/OFF button lights up green as soon as the timer is active.
When the timer function is active, the LED light switches off automatically after 6 hours and switches back on after a further 18 hours. If the set timer is not changed, the LED light switches on and off at the same time every day.
- Press the TIMER/ON/OFF button three times to switch off the LED lamp.

5 Maintenance, care, storage and transport

The product is maintenance-free.

WARNING! Material damage

- Always disconnect the mains adapter before cleaning.
- Use only a dry, soft cloth for cleaning.
- Do not use detergents or chemicals.
- Keep the product out of the reach of children and in a dry, dust-free environment when not in use.
- Remove the batteries / rechargeable batteries when not in use.
- Store in a cool, dry place.
- Keep and use the original packaging for transport.


6 Disposal notes

 In accordance with the European WEEE Directive, electrical and electronic equipment must not be disposed of with household waste. Components must be recycled or disposed of separately. Toxic and hazardous components can cause permanent damage to health and the environment if disposed of improperly.

The consumer is legally obliged to take electrical and electronic equipment to public collection points or to the retailer or manufacturer at the end of its useful life. All local laws and regulations must also be observed. The symbol on the product, in the manual or on the packaging draws attention to these terms. By separating and disposing of used products in this way, you are making a significant contribution to protecting the environment.

WEEE No: 82898622

 Fig. 1

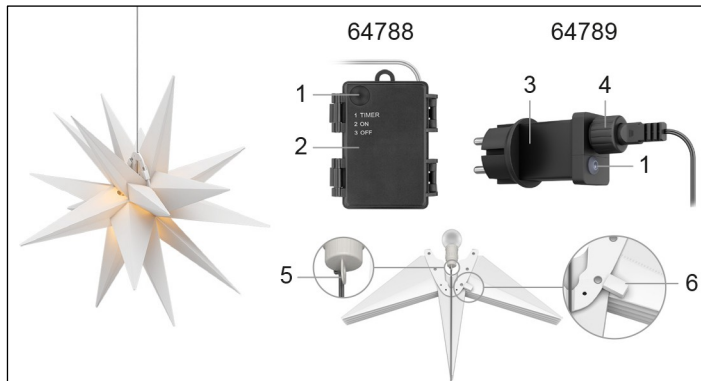

Technical data

Item number	64788	64789
Light source	LED	
Operating voltage	4.5 V	4.5 V, 0.3 A
Light colour	warm white	
Colour temperature	3000 K	
Rated luminous flux	16 lm	21 lm
Max. power consumption	0.27 W	0.53 W
Nominal lifetime	10,000 h	
Protection rating	IP44	
Dimmability	not dimmable	
Protection class		III
Material	plastic, copper	
Colour	white, transparent	
Dimensions	Ø 56 cm	
Cable length	2 m	9.5 m
Weight	239 g	308 g
Batteries (not included)		
Type	LR06, Mignon, AA, 1.5 V	
Quantity (pcs.)	3	
Power adapter		
Input		220-240 V 50-60 Hz 0.12 A
Output		4.5 V 0.3 A 1.35 W
Protection class		II
Protection level		IP44
ta / tc		40 °C / 75 °C
No-load power (Pno)		0.23 W
Standby power (Psb)		N/A

Networked standby power (Pnet)		N/A
--------------------------------	--	-----

Symbols used / Gebruikte symbolen

Direct current	IEC 60417-5031	
Alternating current	IEC 60417-5032	
Not dimmable	IEC 60968	
Class III equipment	IEC 60417-5180	
Class II equipment	IEC 60417-5172	
Safety isolating transformer, short-circuit proof	IEC 60417-5947	
Independent lighting auxiliary	IEC 60417 - 5138	

ES

1 Safety instructions

1.1 General

The user instructions are part of the product and contain important information for correct use.

• Please read the instructions for use thoroughly and carefully before use.

The instructions for use must be available in case of uncertainty or if the product is passed on to others.

• Keep the instructions for use.

The product is only voltage-free when the plug is disconnected.

• Only use the product with easily accessible sockets.

• Do not modify the product or its accessories.

• Do not open the housing.

• Do not short-circuit the connections and circuits.

The bulbs cannot be replaced.

If the product is damaged and/or the seals are missing, it must not be used any further.

A faulty appliance must not be used; instead, it must be secured to prevent any accidental use.

• Only use the product, its parts and accessories if they are in perfect condition.

• Avoid exposing the device to extreme conditions, such as heat and cold, humidity and direct sunlight, as well as to vibrations and mechanical stress.

• In the event of defects, mechanical damage, malfunctions or other problems that cannot be resolved using the documentation provided, please contact the seller or the manufacturer.

Not suitable for children. This product is not a toy!

• Keep the packaging, small parts and insulating material out of reach of children.

• Do not cover the product.

• Do not hang any objects from the product.

Risk of injury from tripping and falling

• Make sure the cable is laid out so that it does not obstruct anyone or get damaged.

• Make sure the cable hangs loosely and is not too taut.

Otherwise, there is a risk of the cable breaking.

1.2 Batteries

• Never mix new and used batteries.

• Always use batteries of the same type.

• Do not mix alkaline, zinc-carbon and nickel-cadmium batteries.

• Remove any cells from the product that are leaking, deformed or corroded, and dispose of them using appropriate protective measures.

• Do not throw into fire.

2 Description and operation

2.1 Product

The product is a decorative hanging star with LED lighting for outdoor use (IP44). The LED lighting is controlled by a button (3 settings – TIMER/ON/OFF) and features a timer function. Item 64788 is battery-operated and item 64789 is mains-powered.

2.2 Scope of supply

3D Christmas Star LED, User Guide

2.3 Control elements

See Fig. 1.

1 TIMER/ON/OFF button

2 Battery compartment

3 Mains adapter

4 Cover

5 Suspension

6 Closure

3 Intended use

This product is intended exclusively for private use and for its intended purpose. This product is not intended for commercial use. Any use other than that described in the 'Description and operation' or 'Safety instructions' is not permitted. Failure to observe and comply with these safety regulations and instructions may result in serious accidents, personal injury and damage to property.

IP44: This product is protected against splashes and contact by foreign objects $\geq \varnothing$ 1 mm.

4 Preparation

• Check that the scope of delivery is complete and undamaged.

• Compare the technical specifications of all devices to be used and ensure they are compatible.

5 Connection and operation

WARNING! Material damage caused by moisture in the device

• 64788: Ensure that the battery compartment (2) is securely closed so that moisture cannot penetrate inside.

• 64789: Make sure the cover (4) is securely closed to prevent moisture from entering.

5.1 Assembly and installation

The product is delivered folded. Before using it for the first time, it must be assembled and hung in a suitable location.

1. Unfold the star.

2. Secure the star in place using the fasteners (6).

The star must be hung using a separate ribbon. The ribbon is not included in the supply. The star must not be hung from the cable.

3. Attach a suitable ribbon to the suspension point (5) located at the top of the LED light.

4. Hang the star using the ribbon.

Choose a place to hang it so that the star does not get in anyone's way, does not fall down and is not damaged by environmental factors.

5.2 Fitting and changing the batteries (Item 64788)

Before using the star for the first time, when the brightness of the LEDs dims or they no longer light up, new batteries must be inserted.

1. Open the battery compartment.

2. Remove the old batteries if necessary.

3. Insert the new batteries into the compartment, ensuring the positive and negative terminals are correctly aligned.

4. Close the battery compartment.

5.3 Connecting the mains adapter to the mains (Item 64789)

• Plug the mains adapter (3) into a suitable mains socket.

If used outdoors, the power socket must have a minimum protection rating of IP44.

5.4 How to use item 64788

• Press the TIMER/ON/OFF button (1) once to activate the timer function.

When the timer function is activated, the LED light switches off automatically after 6 hours and switches back on after a further 18 hours. If the set timer is not changed, the LED light switches on and off at the same time every day.

• Press the TIMER/ON/OFF button twice to switch on the LED lamp.

• Press the TIMER/ON/OFF button three times to switch off the LED lamp.

5.5 How to use item 64789

- Press the TIMER/ON/OFF button (1) once to switch on the LED lamp.
- Press the TIMER/ON/OFF button twice to activate the timer function.

The TIMER/ON/OFF button lights up green as soon as the timer is activated.

When the timer function is activated, the LED light switches off automatically after 6 hours and switches back on after a further 18 hours. Unless the set timer is changed, the LED light switches on and off at the same time every day.

- Press the TIMER/ON/OFF button three times to switch off the LED lamp.

6 Maintenance, care, storage and transport

The product requires no maintenance.

WARNING! Damage to property

- Always unplug the mains adapter before cleaning.
- Use only a dry, soft cloth for cleaning.
- Do not use cleaning products or chemicals.
- If the product is not to be used for a prolonged period, store it out of the reach of children in a dry place protected from dust.
- If you are not going to use it for a long period of time, remove the batteries.
- Store it in a cool, dry place.
- Keep and use the original packaging for transport.

7 Disposal instructions

 In accordance with the European WEEE Directive, electrical and electronic equipment must not be disposed of with household waste. Its components must be recycled or disposed of separately, as the improper disposal of toxic or hazardous components can cause lasting damage to health and the environment.

Under the German Electrical and Electronic Equipment Act (ElektroG), as a user you are obliged to return electrical and electronic devices to the manufacturer, the point of sale or a public collection point at the end of their useful life, free of charge. Specific details are set out in national legislation. The symbol on the product, the user manual and/or the packaging indicates these regulations. By separating materials, recycling and disposing of obsolete devices in this way, you are making a significant contribution to protecting the environment. WEEE No.: 82898622

NL

1 Safety instructions

1.1 General

This is part of the product and contains important instructions for correct use.

- Please read the instructions for use thoroughly and carefully before use.

The instructions for use must be available in case of any uncertainties and when passing the product on.

- Keep the user manual.

Only de-energised when the plug is removed from the socket.

- Only use the product with easily accessible sockets.
- Do not make any modifications to the product or accessories.
- Do not open the housing.
- Do not short-circuit connections or switching circuits.

The bulbs cannot be replaced!

If the product is damaged and/or the seals are missing, it must not be used

A defective device must not be put into operation, but must be secured immediately to prevent further unintended use.

- Only use the product, product components and accessories when they are in perfect condition.
- Avoid extreme conditions such as heat and cold, dampness and direct sunlight, microwaves, vibrations and mechanical pressure.
- If you have any questions, or in the event of defects, mechanical damage, malfunctions or other problems that cannot be resolved using the enclosed documentation, please contact your dealer or the manufacturer.

Not suitable for children. This product is not a toy!

- Keep the packaging, small parts and insulation material out of reach to prevent accidental use.
- Do not use while covered.
- Do not hang any objects from the product.

Risk of injury from tripping and falling

- Ensure that the cable is laid in such a way that it does not obstruct anyone or get damaged.
- Ensure that the cable hangs loosely and is not too taut.

Otherwise, there is a risk of cable breakage.

1.2 Batteries

- Never mix used batteries with new ones.
- Use only batteries of the same type.
- Do not mix alkaline, zinc-carbon or nickel-cadmium batteries.
- Remove leaking, deformed or corroded cells from the product and dispose of them using appropriate protective equipment.
- Do not throw into fire.

2 Description and operation

2.1 Product

The product is a decorative hanging star with LED lighting for outdoor use (IP44). The LED lighting is controlled via a button (3 settings – TIMER/ON/OFF) and has a timer function. Item 64788 is battery-operated and item 64789 is powered by a mains adapter.

2.2 Contents

3D LED Christmas star, instruction manual

2.3 Controls

See fig. 1.

- | | | | |
|---|---------------------|---|----------|
| 1 | TIMER/ON/OFF button | 4 | Cover |
| 2 | Battery compartment | 5 | Mounting |
| 3 | Mains adapter | 6 | Closure |

3 Use in accordance with the instructions

This product is intended solely for private use and the purpose for which it is intended. This product is not intended for commercial use. Any use other than that described in the section 'Description and Function' or in the 'Safety Instructions' is not permitted. Failure to comply with these instructions and safety instructions may result in serious accidents, personal injury and property damage.

IP44: This product is protected against splashing water and contact with foreign objects $\geq \varnothing$ 1 mm.

4 Preparation

- Check that the scope of delivery is complete and undamaged.
- Compare the technical specifications of all devices to be used and ensure they are compatible with one another.

5 Connection and operation

ATTENTION! Material damage caused by moisture in the device

- 64788: Ensure that the battery compartment (2) is properly closed so that no moisture can enter.
- 64789: Ensure that the cover (4) is securely closed so that no moisture can enter.

5.1 Assembly and installation

The product is delivered folded. Before first use, it must be assembled and hung in a suitable place.

1. Unfold the star.
2. Secure the star using the fasteners (6).
The star must be hung using a separate ribbon. A ribbon is not included. The star must not be hung by the cable.
3. Attach a suitable ribbon to the hanging loop (5) at the top of the LED lamp.
4. Hang the star using the ribbon.
Choose a location for hanging the star so that it does not obstruct anyone, does not fall down and is not damaged by environmental factors.

5.2 Inserting and replacing the batteries (Item 64788)

Before using the star for the first time, when the brightness of the LEDs diminishes or they can no longer be switched on, new batteries must be inserted.

1. Open the battery compartment.
2. Remove the old batteries if necessary.
3. Insert new batteries into the battery compartment, taking care to observe the positive and negative polarities.
4. Close the battery compartment.

5.3 Connecting the mains adapter to the mains (item 64789)

- Plug the mains adapter (3) into a suitable socket.
When used outdoors, the socket must also have at least IP44 protection.

5.4 Operation of item 64788

- Press the TIMER/ON/OFF button (1) once to activate the timer function.
When the timer function is active, the LED light switches off automatically after 6 hours and switches back on after a further 18 hours. If the set timer is not changed, the LED light will switch on and off at the same time every day.
- Press the TIMER/ON/OFF button twice to switch on the LED lamp.
- Press the TIMER/ON/OFF button three times to switch off the LED lamp.

5.5 Operating instructions for item 64789

- Press the TIMER/ON/OFF button (1) once to switch on the LED lamp.
- Press the TIMER/ON/OFF button twice to activate the timer function.
The TIMER/ON/OFF button lights up green as soon as the timer is active.
When the timer function is active, the LED lighting switches off automatically after 6 hours and switches back on after a further 18 hours. If the set timer is not changed, the LED light will switch on and off at the same time every day.
- Press the TIMER/ON/OFF button three times to switch off the LED light.

6 Maintenance, care, storage and transport

The product is maintenance-free.

WARNING! Physical damage


- Always unplug the mains adapter from the socket before cleaning the device.
- Use only a dry, soft cloth for cleaning.
- Do not use cleaning agents or chemical products.
- If the product is not going to be used for a long time, store it in a dry, dust-free environment and keep it out of the reach of children.
- Remove the batteries/rechargeable batteries if they are not going to be used for a long period of time.
- Store the product in a cool, dry place.
- Keep the original packaging for transport and use it.

7 Waste disposal instructions

 In accordance with the European WEEE Directive, electrical and electronic equipment must not be disposed of with household waste. Its components must be handed in separately for recycling or waste disposal, as toxic and hazardous components can cause lasting damage to health and the environment if disposed of improperly.

As a consumer, you are obliged under the German Electrical and Electronic Equipment Act (ElektroG) to return electrical and electronic equipment at the end of its service life free of charge to the manufacturer, the shop or to the designated public collection points. Specific details are governed by the relevant national legislation. The symbol on the product, the user manual and/or the packaging refers to these provisions. By separating materials, recycling and disposing of old appliances in this way, you are making an important contribution to protecting our environment. WEEE No.: 82898622

 Fig. 1

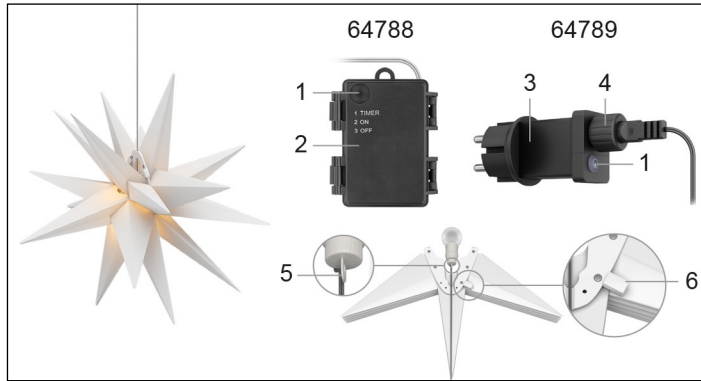

Technical data

Item number	64788	64789
Light source	LED	
Operating voltage	4.5 V	4.5 V, 0.3 A
Light colour	warm white	
Colour temperature	3000 K	
Rated luminous flux	16 lm	21 lm
Max. power consumption	0.27 W	0.53 W
Nominal lifetime	10,000 h	
Protection rating	IP44	
Dimmability	not dimmable	
Protection class		III
Material	plastic, copper	
Colour	white, transparent	
Dimensions	Ø 56 cm	
Cable length	2 m	9.5 m
Weight	239 g	308 g
Batteries (not included)		
Type	LR06, Mignon, AA, 1.5 V	
Quantity (pcs.)	3	
Power adapter		
Input		220–240 V, 50–60 Hz, 0.12 A
Output		4.5 V, 0.3 A, 1.35 W
Protection class		II
Protection rating		IP44
ta / tc		40 °C / 75 °C
No-load power (Pno)		0.23 W
Standby power (Psb)		N/A

Networked standby power (Pnet)		N/A
--------------------------------	--	-----

Symbols used

Direct current	IEC 60417-5031	
Alternating current	IEC 60417-5032	
Not dimmable	IEC 60968	
Class III equipment	IEC 60417-5180	
Class II equipment	IEC 60417-5172	
Safety isolating transformer, short-circuit proof	IEC 60417-5947	
Independent lighting auxiliary	IEC 60417 - 5138	

DA

1 Safety instructions

1.1 General

The user manual is an integral part of the product and contains important instructions for correct use.

- Read the user manual thoroughly and carefully before use.

The user manual must be kept to hand in case of uncertainty and if you pass the product on to someone else.

- Keep the user manual.

Only de-energised when the plug is disconnected.

- Only use the product with easily accessible sockets.
- Do not modify the product or its accessories.
- Do not open the housing.
- Do not short-circuit connections or switching circuits.

The lamps cannot be replaced!

If the product is damaged and/or the seals are missing, it must no longer be used.

A defective appliance must not be used, but must be secured immediately to prevent accidental continued use.

- Only use the product, its parts and accessories in perfect condition.
- Avoid extreme conditions such as heat and cold, precipitation and direct sunlight, microwaves, as well as vibrations and mechanical stress.
- Please contact the retailer or manufacturer if you have any questions, or in the event of defects, mechanical damage, faults or other problems that cannot be resolved using the accompanying documentation.

Not suitable for children. This product is not a toy!

- Ensure that packaging, small parts and insulation material are kept out of reach to prevent accidental use.
- Do not cover the product.
- Do not hang objects on the product.

Risk of personal injury due to tripping and falling accidents

- Ensure that the cable is laid in such a way that it does not obstruct anyone and is not damaged.
- Make sure the cable is loose and not too tight.

Otherwise, there is a risk that the cable will break.

1.2 Batteries

- Never mix used and new batteries.
- Only use batteries of the same type.
- Do not mix alkaline, zinc-carbon or nickel-cadmium batteries.
- Remove leaking, deformed or corroded cells from the product and dispose of them using appropriate protective measures.
- Do not burn.

2 Description and function

2.1 Product

The product is a decorative hanging star with LED lighting for outdoor use (IP44). The LED lighting is controlled via a button (3 settings – TIMER/ON/OFF) and has a timer function. Item number 64788 is battery-powered and item number 64789 is powered by a mains adapter.

2.2 Contents

3D LED Christmas Star, User Manual

2.3 Control elements

See Fig. 1.

- 1 TIMER/ON/OFF button
- 2 Battery compartment
- 3 Mains adapter

- 4 Cover
- 5 Mounting
- 6 Closure

3 Intended use

This product is intended solely for private use and the purposes for which it is designed. This product is not intended for commercial use. Any use that deviates from the section 'Description and Function' or 'Safety Instructions' is not permitted. Failure to follow or comply with these regulations and safety instructions may result in serious accidents, personal injury and damage to property.

IP44: This product is protected against splashing water and contact with foreign objects $\geq \varnothing 1$ mm.

4 Preparation

- Check that you have received all parts and that they are intact.
- Compare the technical data for all the appliances to be used and ensure that they are compatible.

5 Connection and operation

CAUTION! Material damage due to moisture in the appliance

- 64788: Ensure that the battery compartment (2) is tightly closed to prevent moisture from entering.
- 64789: Ensure that the cover (4) is tightly closed so that moisture cannot get in.

5.1 Assembly and installation

The product is supplied folded. Before using it for the first time, it must be assembled and hung in a suitable place.

1. Unfold the star.
2. Secure the star in place using the fasteners (6).
The star must be hung up using a separate ribbon. A ribbon is not included in the scope of delivery. The star must not be hung up by the cable.
3. Attach a suitable ribbon to the hanging loop (5) at the top of the LED light.
4. Hang the star using the ribbon.
Choose a location for hanging the star so that it does not obstruct anyone, does not fall down and is not damaged by environmental factors.

5.2 Inserting and replacing batteries (Item 64788)

Before using the star for the first time, you must insert new batteries when the brightness of the LEDs starts to fade or they no longer turn on.

1. Open the battery compartment.
2. Remove the old batteries if necessary.
3. Insert new batteries into the battery compartment, ensuring the positive and negative terminals are correctly aligned.
4. Close the battery compartment.

5.3 Connecting the mains adapter to the mains (Item 64789)

- Plug the mains adapter (3) into a suitable mains socket.
For outdoor use, the socket must also have at least IP44 protection.

5.4 Operating item 64788

- Press the TIMER/ON/OFF button (1) once to activate the timer function.
When the timer function is active, the LED light switches off automatically after 6 hours and switches on again after a further 18 hours. If the set timer is not changed, the LED light switches on and off at the same time every day.
- Press the TIMER/ON/OFF button twice to switch on the LED light.
- Press the TIMER/ON/OFF button three times to turn off the LED light.

5.5 Operating instructions for item 64789

- Press the TIMER/ON/OFF button (1) once to switch on the LED light.
- Press the TIMER/ON/OFF button twice to activate the timer function.
The TIMER/ON/OFF button lights up green as soon as the timer is activated.
When the timer function is active, the LED light switches off automatically after 6 hours and switches on again after a further 18 hours. If the set timer is not changed, the LED light switches on and off at the same time every day.
- Press the TIMER/ON/OFF button three times to switch off the LED light.

6 Maintenance, care, storage and transport

The product is maintenance-free.

CAUTION! Physical damage

- Always unplug the power adapter from the socket before cleaning.
- Always use a dry, soft cloth for cleaning.
- Never use cleaning agents or chemicals.
- Store the product out of reach of children and in a dry, dust-free place if it is not to be used for a prolonged period.
- Remove the batteries/rechargeable batteries if the product is not to be used for a prolonged period.
- Store in a cool, dry place.
- Keep and use the original packaging if the product needs to be transported at any time.

7 Disposal



In accordance with the Council's WEEE Directive, electrical and electronic equipment must not be disposed of with ordinary household waste. The components of such equipment must be sorted and disposed of separately at a local recycling centre, as toxic and hazardous components may, if disposed of incorrectly, may be harmful to health and the environment.

As a consumer, you are required by law to return electrical and electronic waste to the manufacturer, retailer, or a public collection point at the end of the product's life. The details are regulated by national legislation. The symbol on this product, in the user manual, or on the packaging complies with these regulations. By sorting, using and recycling waste in this way, you are playing an important part in protecting the environment. WEEE No: 82898622

SV

1 Safety instructions

1.1 General

The user manual is part of the product and contains important instructions on correct use.

- Read the user manual carefully and in its entirety before using the product.

Do not use the product if it is faulty. Ensure that it cannot be switched on again by mistake.

- Keep the user manual.

The appliance is only de-energised when the plug is unplugged.

- Use the product only with easily accessible sockets.
- The product and its accessories must not be modified.
- Do not open the casing.
- Do not short-circuit connections or circuits.

The bulbs cannot be replaced!

If the product is damaged and/or seals are missing, it must no longer be used.

Do not use the product if it is faulty. Ensure that it cannot be switched on again by mistake.

- Only use the product, product parts and accessories if they are in perfect condition.
- Avoid extreme conditions such as heat and cold, moisture and direct sunlight, microwaves, as well as vibrations and mechanical pressure.
- Contact the retailer or manufacturer if you have any questions, or in the event of defects, mechanical damage, malfunctions or other problems that cannot be resolved using the instructions provided.

Not intended for children. This product is not a toy!

- Ensure that the packaging, small parts and insulation material are not used for any purpose other than intended.
- Do not cover the product.
- Do not hang any objects on the product.

Risk of injury due to tripping and falling

- Ensure that the cable is laid in such a way that it does not obstruct anyone or get damaged.
- Ensure that the cable hangs loosely and is not too taut.

Otherwise, there is a risk that the cable will break.

1.2 Batteries

- Do not mix new batteries with old ones.
- Only use batteries of the same type.
- Do not mix alkaline batteries, zinc-carbon batteries or nickel-cadmium batteries.
- Remove flat, deformed or corroded batteries and dispose of them using appropriate protective equipment.
- Do not expose to fire.

2 Description and function

2.1 Product

The product is a decorative hanging star with LED lighting for outdoor use (IP44). The LED lighting is controlled via a button (3 settings – TIMER/ON/OFF) and has a timer function. Item 64788 is battery-powered and item 64789 is powered by a mains adapter.

2.2 Contents

3D LED Christmas Star, User Manual

2.3 Controls

See Fig. 1.

- | | |
|-----------------------|------------|
| 1 TIMER/ON/OFF button | 4 Cover |
| 2 Battery compartment | 5 Mounting |
| 3 Mains adapter | 6 Closing |

3 Intended use

This product is intended for use by private individuals and within the specified areas of application only. This product is not intended for professional use. The product must not be used in any way other than as described in the sections 'Description and Function' or 'Safety Instructions'. Failure to comply with these regulations and safety instructions may result in serious accidents and/or personal injury and damage to property. **IP44:** This product is protected against water and contact with foreign objects $\geq \varnothing 1 \text{ mm}$.

4 Preparation

- Check that the delivery is complete and undamaged.
- Compare the technical data for all products to be used and ensure they are compatible.

5 Connection and use

PLEASE NOTE! Physical damage caused by moisture inside the appliance

- 64788: Ensure that the battery compartment (2) is properly closed so that no moisture can get in.
- 64789: Ensure that the cover (4) is properly closed so that no moisture can get in.

5.1 Assembly and installation

The product is supplied folded. Before using it for the first time, it must be assembled and set up in a suitable location.

1. Unfold the star.
2. Secure the star in place using the fasteners (6).
The star must be hung up using a separate strap. A strap is not included in the delivery. The star must not be hung up using the rope.
3. Attach a suitable piece of string to the hanging loop (5) at the top of the LED lamp.
4. Hang up the star using the ribbon.
Choose a location for hanging the star so that it does not obstruct anyone, does not fall down and is not damaged by environmental factors.

5.2 Inserting and replacing batteries (Item 64788)

Before using the star for the first time, when the brightness of the LEDs starts to fade, or when they no longer switch on, new batteries must be inserted.

1. Open the battery compartment.
2. Remove the old batteries if necessary.
3. Insert new batteries into the battery compartment, ensuring the positive and negative terminals are correctly aligned.
4. Close the battery compartment.

5.3 Connecting the mains adapter to the mains (Item 64789)

- Connect the mains adapter (3) to a suitable socket.
When used outdoors, the socket must also have at least IP44 protection.

5.4 Using item 64788

- Press the TIMER/ON/OFF button (1) once to activate the timer function.
When the timer function is active, the LED light switches off automatically after 6 hours and switches on again after a further 18 hours. If the set timer is not changed, the LED light switches on and off at the same time every day.
- Press the TIMER/ON/OFF button twice to switch on the LED light.
- Press the TIMER/ON/OFF button three times to switch off the LED light.

5.5 Use of item 64789

- Press the TIMER/ON/OFF button (1) once to switch on the LED light.
- Press the TIMER/ON/OFF button twice to activate the timer function.
The TIMER/ON/OFF button lights up green as soon as the timer is active. When the timer function is active, the LED light switches off automatically after 6 hours and switches on again after a further 18 hours. If the set timer is not changed, the LED light switches on and off at the same time every day.
- Press the TIMER/ON/OFF button three times to switch off the LED light.

6 Maintenance, care, storage and transport

The product is maintenance-free.

NOTE! Physical damage

- Always unplug the mains adapter before cleaning.
- Use only a dry, soft cloth when cleaning.
- Do not use cleaning agents or chemicals.
- If the product is not to be used for a prolonged period, it should be stored out of the reach of children in a

- dry and dust-free place.
- Remove the batteries if the product is not to be used for a long period of time.
- Store the product in a dry and cool place.
- Keep the original packaging and use it if the product needs to be transported.

7 Waste disposal




Under the EU WEEE Directive, electrical and electronic products must not be disposed of with household waste. The product's various parts must be separated and sent for recycling or waste disposal, as toxic and hazardous components can cause harm to health and the environment if handled incorrectly.

As a consumer, you are legally obliged to return electrical or electronic equipment to collection points or to the retailer at the end of the equipment's service life. Details are regulated by national laws. The symbols on the product, in the user manual or on the packaging refer to these conditions. By separating, reusing and disposing of waste in this way, you are helping to improve the environment.

WEEE No.: 82898622

 Fig. 1

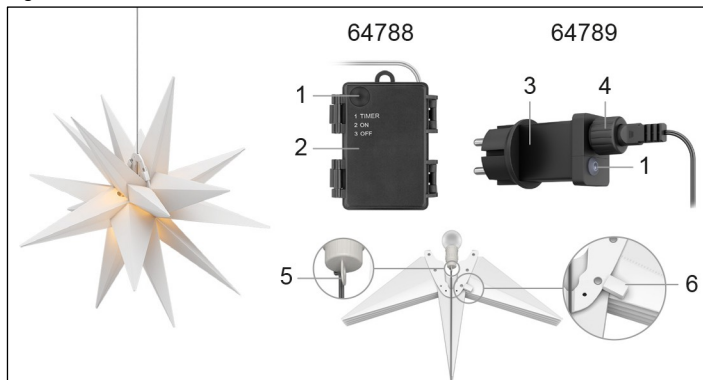

Technical data

Item number	64788	64789
Light source	LED	
Operating voltage	4.5 V	4.5 V, 0.3 A
Light colour	warm white	
Colour temperature	3000 K	
Rated luminous flux	16 lm	21 lm
Max. power consumption	0.27 W	0.53 W
Nominal lifetime	10,000 h	
Protection rating	IP44	
Dimmability	not dimmable	
Protection class		III
Material	plastic, copper	
Colour	white, transparent	
Dimensions	Ø 56 cm	
Cable length	2 m	9.5 m
Weight	239 g	308 g
Batteries (not included)		
Type	LR06, Mignon, AA, 1.5 V	
Quantity (pcs.)	3	
Power adapter		
Input		220–240 V 50–60 Hz, 0.12 A
Output		4.5 V, 0.3 A, 1.35 W
Protection class		II
Protection rating		IP44
ta / tc		40 °C / 75 °C
No-load power (Pno)		0.23 W
Standby power (Psb)		N/A

Networked standby power (Pnet)		N/A
--------------------------------	--	-----

Symbols used

Direct current	IEC 60417-5031	
Alternating current	IEC 60417-5032	
Not dimmable	IEC 60968	
Class III equipment	IEC 60417-5180	
Class II equipment	IEC 60417-5172	
Safety isolating transformer, short-circuit proof	IEC 60417-5947	
Independent lighting auxiliary	IEC 60417 - 5138	

CS

1 Safety instructions

1.1 General

The user manual is included with the product and contains important instructions for correct use.

- Please read the full user manual carefully before use.
- The user manual must be available in case of doubt and when passing the product on to others.
- Keep the user manual in a safe place.

Only disconnect the power supply when the plug is unplugged.

- Only use the product with easily accessible sockets.
- Do not make any modifications to the product or its accessories.
- Do not open the casing.
- Do not short-circuit the connections or electrical circuits.

The lamps cannot be replaced!

If the product is damaged and/or the seal is missing, it must not be used any further.

A defective appliance must not be put into operation and must be secured against unintentional further use.

- Use only the product, product parts and accessories that are in perfect condition.
- Avoid extreme conditions such as heat and cold, damp and direct sunlight, microwaves, vibrations and mechanical pressure.
- If you have any questions, or if you encounter faults, mechanical damage, malfunctions or other problems that cannot be resolved using the accompanying documentation, please contact the retailer or manufacturer.

Not suitable for children. This product is not a toy!

- Keep the packaging, small parts and insulation material out of reach to prevent accidental use.

- Do not cover the product.
- Do not hang any objects on the product.

Risk of injury due to tripping and falling

- Ensure that the cable is laid so that it does not obstruct anyone or become damaged.
- Ensure that the cable hangs freely and is not too taut.

Otherwise, there is a risk of the cable breaking.

1.2 Battery

- Never mix used batteries with new ones.
- Only use batteries of the same type.
- Do not mix alkaline, zinc-carbon or nickel-cadmium batteries.
- Remove any leaking, deformed or corroded cells from the product and dispose of them using appropriate protective equipment.
- Do not throw them into a fire.

2 Description and functions

2.1 Product

The product is a decorative hanging star with LED lighting for outdoor use (IP44). The LED lighting is controlled by a button (3 settings – TIMER/ON/OFF) and has a timer function. Item 64788 is battery-powered and item 64789 is powered by a mains adapter.

2.2 Scope of delivery

3D LED wire Christmas star, User manual

2.3 Controls

See Fig. 1.

- 1 TIMER/ON/OFF button
- 2 Battery compartment
- 3 Mains adapter
- 4 Cover
- 5 Hanging
- 6 Cap

3 Intended use

This product is intended exclusively for private use and for its specified purpose. This product is not intended for commercial use. Any use other than that described in the 'Description and functions' section or

This is not permitted in the "Safety Instructions". Failure to observe and comply with these provisions and safety instructions may result in serious injury, harm to health and damage to property. **IP44:** This product is protected against splashing water, contact and the ingress of foreign objects $\geq \varnothing 1$ mm.

4 Preparation

- Check that the contents of the delivery are complete and undamaged.
- Compare the technical data of all devices used and ensure compatibility.

5 Connection and operation

IMPORTANT! Damage to the material caused by moisture in the appliance

- 64788: Ensure that the battery compartment (2) is tightly closed to prevent moisture from entering.
- 64789: Make sure that the cover cap (4) is tightly closed to prevent moisture from getting inside.

5.1 Assembly and installation

The product is supplied assembled. Before first use, it must be assembled and hung in a suitable location.

1. Unfold the star.
2. Secure the star in place using the fasteners (6).
The star must be hung using a separate ribbon. The ribbon is not included. The star must not be hung using a cable.
3. Attach a suitable ribbon to the hanger (5) at the top of the LED light.
4. Hang the star using the ribbon.
Choose a hanging location so that the star does not obstruct anyone, does not fall, and is not damaged by environmental factors.

5.2 Inserting and replacing batteries (Item 64788)

Before using the star for the first time, or if the brightness of the LEDs dims or they no longer switch on, new batteries must be inserted.

1. Open the battery compartment.
2. If necessary, remove the old batteries.
3. Insert new batteries into the battery compartment, ensuring the positive and negative terminals are correctly aligned.
4. Close the battery compartment.

5.3 Connecting the mains adapter to the mains (Item 64789)

- Plug the mains adapter (3) into a suitable socket.
When used outdoors, the socket must also have a protection rating of at least IP44.

5.4 Operation of item 64788

- Press the TIMER/ON/OFF button (1) once to activate the timer function.
When the timer function is active, the LED light switches off automatically after 6 hours and switches back on after a further 18 hours. Unless you change the timer setting, the LED light will switch on and off at the same time every day.
- Press the TIMER/ON/OFF button twice to switch on the LED light.
- Press the TIMER/ON/OFF button three times to switch off the LED light.

5.5 Operation of item 64789

- Press the TIMER/ON/OFF button (1) once to switch on the LED light.
- Press the TIMER/ON/OFF button twice to activate the timer function.
Once the timer is active, the TIMER/ON/OFF button will light up green.
When the timer function is active, the LED light will switch off automatically after 6 hours and switch back on after a further 18 hours. Unless you change the set timer, the LED light will switch on and off at the same time every day.
- Press the TIMER/ON/OFF button three times to switch off the LED light.

6 Maintenance, care, storage and transport

The product is maintenance-free.

IMPORTANT! Property damage

- Always disconnect the mains adapter before cleaning.
- Use only a dry, soft cloth for cleaning.
- Do not use cleaning agents or chemicals.
- If the product is not going to be used for a long time, store it out of reach of children in a dry, dust-free environment.
- Remove the batteries/rechargeable batteries if the product is not going to be used for a long time.
- Store in a cool, dry place.
- Keep the original packaging and use it for transport.

7 Disposal instructions



In accordance with the European WEEE Directive, electrical and electronic equipment must not be disposed of with household waste. Their components must be handed over for recycling or disposal as sorted waste, as toxic and hazardous components may cause permanent harm the environment.

As a consumer, you are required under the Waste Act to return electrical and electronic equipment at the end of its service life to the manufacturer, retailer or a public collection point free of charge. Details are set out in the relevant national legislation. The symbol on the product, the user manual and/or the packaging refers to these provisions. By correctly sorting, recycling and disposing of old equipment, you are making a significant contribution to protecting the environment.

WEEE number: 82898622

PL

1 Safety instructions

1.1 General information

The user manual is an integral part of the product and contains important guidelines for correct use.

- Please read the entire user manual carefully.

The user manual must be available in case of any doubts during use, as well as when passing the product on to others.

- Keep the user manual.

The appliance is only de-energised when the plug is disconnected.

- Only use the product with easily accessible sockets.
- Do not modify the product or any accessories.
- Do not open the housing under any circumstances.
- Do not short-circuit the connections or control circuits.

The lamps must not be replaced!

If the product is damaged and/or seals are missing, do not continue to use it.

A damaged device must not be operated, but must be secured immediately to prevent accidental further use.

- Only use the product, product parts and accessories that are in perfect condition.
- Avoid extreme conditions such as high and low temperatures, humidity, direct sunlight, microwaves, vibrations and mechanical stress.
- In the event of queries, malfunctions, mechanical damage, faults or other issues that cannot be resolved using the accompanying documentation, please contact your distributor or the manufacturer.

Not suitable for children. This product is not a toy!

- Keep the packaging, small parts and insulation material out of reach to prevent accidental use.
- Do not cover the product. Do not hang any objects on the product.

Risk of injury from tripping and falling

- Ensure that the cable is positioned so that it does not obstruct anyone or become damaged.
- Ensure that the cable hangs loosely and is not too taut.

Otherwise, there is a risk of the cable breaking.

1.2 Batteries

- Do not mix used batteries with new ones.
- Only use batteries of the same type.
- Do not mix alkaline, zinc-carbon or nickel-cadmium batteries.
- Remove any leaking, deformed or corroded cells from the product and dispose of them safely.
- Do not throw into fire.

2 Description and function

2.1 Product

This product is a decorative hanging star with LED lighting for outdoor use (IP44). The LED lighting is controlled by a button (3 settings – TIMER/ON/OFF) and features a timer function. Item 64788 is battery-powered, whilst item 64789 is powered via a mains adapter.

2.2 Scope of delivery

3D LED Christmas Star, User Manual

2.3 Controls

See Fig. 1.

- | | |
|-----------------------|-----------|
| 1 TIMER/ON/OFF button | 4 Cover |
| 2 Battery compartment | 5 Hanging |
| 3 Mains power supply | 6 Closing |

3 Intended use

The product is intended solely for private use and is designed for this purpose. The product is not intended for professional use. Use in any manner other than that described in the sections 'Description and functions' and 'Safety instructions' is not permitted. Failure to observe these provisions and safety rules may lead to serious accidents and personal injury or property damage.

IP44: This product is protected against splashing water and contact with foreign objects with a diameter $\geq \varnothing$ 1 mm.

4 Preparation

- Check the contents of the package for completeness and integrity.
- Compare the technical data of all devices and ensure compatibility.

5 Connection and operation

WARNING! Material damage due to moisture in the device

- 64788: Ensure that the battery compartment (2) is tightly closed to prevent moisture from entering.
- 64789: Ensure that the cover (4) is tightly closed to prevent moisture from entering.

5.1 Assembly and installation

The product is supplied in a folded state. Before first use, it must be unfolded and hung in a suitable location.

1. Unfold the star.
2. Secure the star in place using the fasteners (6).
The star must be hung using a separate ribbon. The ribbon is not included in the scope of delivery. The star must not be hung using a cord.
3. Attach a suitable ribbon for hanging (5) to the top of the LED lamp.
4. Hang the star using the ribbon.
Choose a hanging location so that the star does not obstruct anyone, does not fall and is not damaged by environmental factors.

5.2 Inserting and replacing batteries (Item 64788)

Before using the star for the first time, when the brightness of the LEDs dims or they can no longer be switched on, insert new batteries.

1. Open the battery compartment.
2. Remove the old batteries if necessary.
3. Insert new batteries into the battery compartment, ensuring the positive and negative terminals are correctly aligned.
4. Close the battery compartment.

5.3 Connecting the mains power supply to the mains (Item 64789)

- Connect the mains power supply (3) to a suitable socket.
For outdoor use, the socket must also have a protection rating of at least IP44.

5.4 Operating instructions for item 64788

- Press the TIMER/ON/OFF button (1) once to activate the timer function.
When the timer function is active, the LED light switches off automatically after 6 hours and switches on again after a further 18 hours. If the set timer is not changed, the LED light switches on and off at the same time every day.
- Press the TIMER/ON/OFF button twice to switch on the LED lamp.
- Press the TIMER/ON/OFF button three times to switch off the LED lamp.

5.5 Operating instructions for item 64789

- Press the TIMER/ON/OFF button (1) once to switch on the LED light.
- Press the TIMER/ON/OFF button twice to activate the timer function.
The TIMER/ON/OFF button lights up green as soon as the timer is active.
When the timer function is active, the LED light switches off automatically after 6 hours and switches on again after a further 18 hours. If the set timer is not changed, the LED light switches on and off at the same time every day.
- Press the TIMER/ON/OFF button three times to switch off the LED lamp.

6 Maintenance, care, storage and transport

The product is maintenance-free

CAUTION! Material damage

- Always disconnect the mains power supply before cleaning.
- Use only a dry, soft cloth for cleaning.
- Do not use any cleaning agents or chemicals.
- If the product is not to be used for a prolonged period, store it out of the reach of children, in a dry environment protected from dust.
- If not in use for a prolonged period, remove the batteries/rechargeable battery.
- Store in a cool, dry place.
- Keep the original packaging and use it for transport.

7 Waste disposal guidelines



In accordance with the European WEEE Directive, electrical and electronic equipment must not be disposed of with household waste. Its components must be sent for recycling or disposal separately, as incorrectly disposed of toxic or hazardous substances can cause lasting harm to health and the environment.

Once the product has reached the end of its useful life, customers are required by applicable regulations to dispose of electrical and electronic equipment by returning it free of charge to the manufacturer, supplier or a public collection point. Details are governed by national regulations. The presence of this symbol on the product, in the user manual or on the packaging implies these provisions. By practising this type of waste separation, and by using and disposing of waste such as end-of-life equipment in this way, users play their part in protecting the environment.

WEEE No.: 82898622