 


Fig. 1

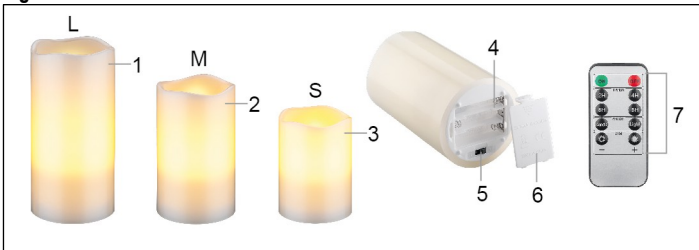

Technical data / Specifications / Spécifications

Item number	74368
Light source / Quantity (pcs.)	LED / 3
Operating voltage	4.5 V
Light colour Rated luminous flux Colour temperature	warm white 5 lm/candle 2400 K
Max. power consumption	0.06 W/LED
Nominal lifetime	10,000 h
Operating temperature range	-10 °C to +25 °C
Protection rating	IP20
Dimmability	dimnable
Material Colour	Real wax, plastic, copper white
Dimensions Ø H	Ø 75 mm 100/125/150
Weight	530 g
Batteries (not included)	
Type	AAA, 1.5 V
Quantity (pcs.)	9
Remote control	
Sensor type	infrared
Max. detection range	5m
Dimensions	40 x 87 x 6.5 mm
Weight	13 g (14.5 g including battery)
Battery (included)	1x CR2025 lithium button cell 3.0 V, 150 mAh

Symbols used / Symboles utilisés	
Direct current	IEC 60417-5031
Dimmable	-

DE

1 Safety instructions

1.1 General

The operating instructions form an integral part of the product and contain important information on correct use.

- Read the operating instructions thoroughly and carefully before use.
- The operating instructions must be available in case of uncertainty and when the product is passed on to others.
 - Keep the operating instructions in a safe place.
 - Do not modify the product or its accessories.

- Do not short-circuit connections or circuits.
- A defective device must not be put into operation, but must be secured against unintentional further use.
- Only use the product, product parts and accessories when they are in perfect condition.
- Avoid extreme conditions such as heat and cold, damp and direct sunlight, microwaves, vibrations and mechanical pressure.
- Never operate the product near gas or electric heaters, open flames, candles or other sources of heat.
- Always place the product on a coaster to prevent wax marks on furniture and surfaces

- Avoid.
 - Do not cover the product.
 - If you have any questions, or in the event of defects, mechanical damage, malfunctions or other problems that cannot be resolved using the accompanying documentation, please contact your dealer or the manufacturer.
- Not suitable for children. This product is not a toy!
- Keep the packaging, small parts and insulation material out of reach of children.
 - Do not look directly into the LED. The light source is not replaceable.

1.2 Batteries

- Never mix used batteries with new ones.
- Use only batteries of the same type.
- Do not mix alkaline, zinc-carbon or nickel-cadmium batteries.
- Remove any leaking, deformed or corroded cells from the product and dispose of them using suitable protective devices.
- Never throw batteries into a fire.

1.3 Battery hazards

The remote control is fitted with a lithium button cell. The button cell is replaceable.

If a button cell battery is swallowed, it can cause severe internal chemical burns and lead to death.

- If you suspect that the button cell has been swallowed or has otherwise entered the body, seek medical attention immediately.
- Never use button cells if they are dented, leaking or damaged.
- Mechanical damage may cause gaseous substances to escape, which may be highly irritant, flammable or toxic.
- Remove any leaking, deformed or corroded cells from the product and dispose of them using suitable protective equipment.
- If a button cell has leaked, avoid contact with skin, eyes and mucous membranes. If necessary, rinse the affected areas with water and seek medical attention immediately.

Exposure to extreme heat can lead to explosion and/or leakage of corrosive liquid.

- Never throw button cells into a fire.
- Do not short-circuit the button cell or immerse it in liquids.

2 Description and function

2.1 Product

The product is a set of three LED real-wax candles for indoor use (IP20). The three LED real-wax candles are battery-operated and come in three sizes: S, M and L.

The LED real-wax candles feature a flickering LED light with a timer function, a dimmer function and an on/off switch.

2.2 Contents

Set of 3 white LED real wax candles, remote control, instruction manual

2.3 Controls

See Fig. 1.

- | | | |
|-------------------------------|-----------------------------|--|
| 1 LED real wax candle, size L | 4 Battery compartment | 7 Remote control with function buttons |
| 2 LED real wax candle, size M | 5 ON/OFF switch | |
| 3 LED real wax candle, size S | 6 Battery compartment cover | |

3 Intended use

This product must only be used in dry indoor environments. This product is intended solely for private use and the purpose for which it is designed. This product is not intended for commercial use. Any use other than that described in the 'Description and Function' section or in the

"Safety Instructions" is not permitted. Failure to observe and comply with these provisions and the safety instructions may result in serious accidents, personal injury and damage to property.

IP20: This product is not protected against water. This product is protected against contact with foreign objects $\geq \varnothing 12$ mm.

4 Preparation

- Check the contents of the delivery to ensure they are complete and undamaged.

5 Operation

5.1 Inserting the batteries

WARNING! Damage to property caused by incorrect power supply and handling

- Only use the batteries specified in the "Technical Data" section or those of an equivalent type. Batteries are not included in the scope of delivery.

1. Carefully open the battery compartment cover (6) on the underside of the LED real wax candle.
2. Insert three new AAA batteries into the battery compartment (4), ensuring the positive and negative terminals are correctly aligned.
3. Carefully close the battery compartment cover (6).

5.2 Inserting the button cell

1. Carefully slide out the compartment for the button cell at the bottom of the remote control (7).
2. Insert a CR2025 button cell into the compartment.
3. Carefully slide the compartment with the button cell back into the remote control.

5.3 Switching on and off

- Slide the ON/OFF switch (5) to the 'ON' position to switch on the LED real wax candle.
- Slide the ON/OFF switch (5) to the 'OFF' position to switch off the LED real wax candle.

You can also switch the LED real wax candles on and off using the supplied remote control. To do this, the ON/OFF switch (5) must be in the "ON" position.

- Press the ON button on the remote control (7) to switch on the LED real-wax candle.
- Press the OFF button on the remote control (7) to switch off the LED real wax candle.

5.4 Setting the TIMER function

- Press the 2H, 4H, 6H or 8H buttons on the remote control (7) to set the desired burning time

to adjust.

5.5 Setting lighting modes

You can use the remote control to switch between two lighting modes: "Candle" and "Light". The "Candle" lighting mode simulates the flickering of a candle flame.

- Press the "Candle" or "Light" buttons on the remote control (7) to set the desired lighting mode.

5.6 Activating the DIM function

The LED real-wax candles have a dimming function. The dimming function can be used in both the "and "Light" lighting modes.

- Press the buttons with the sun symbol (-) or (+) on the remote control (7) to dim the light.

6 Maintenance, care, storage and transport

The product is maintenance-free.

WARNING! Damage to property

- Use only a dry, soft cloth for cleaning.
- If the surface is very dirty, the cleaning cloth can be lightly dampened with water.
- Do not use cleaning agents or chemicals.
- If the product is not going to be used for a long time, store it out of reach of children and in a dry, dust-free environment.
- Remove the batteries if the product is not going to be used for a long time.
- Store the product in a cool, dry place.
- Keep the original packaging for transport.

7 Disposal instructions

7.1 Product



In accordance with the European WEEE Directive, electrical and electronic equipment must not be disposed of with household waste. Their components must be separated for recycling or disposal must be disposed of properly, as toxic and hazardous components can cause lasting damage to health and the environment if disposed of incorrectly.

As a consumer, you are required under the Electrical Equipment Act (ElektroG) to return electrical and electronic equipment at the end of its useful life to the manufacturer, the point of sale or to designated public

Return them free of charge to collection points. Details are governed by the relevant national legislation. The symbol on the product, the user manual and/or the packaging indicates these regulations. By separating, recycling and disposing of old appliances in this way, you are making an important contribution to protecting our environment. WEEE No.: 82898622

7.2 Rechargeable batteries/batteries

Batteries and accumulators must not be disposed of with household waste. Their components must be separated for recycling or disposal, as toxic and hazardous components can cause lasting damage to the environment if disposed of improperly. As a consumer, you are obliged to return these free of charge at the end of their service life to the manufacturer, the point of sale or to designated public collection points. Details are governed by relevant national legislation. The symbol on the product, the operating instructions and/or the packaging indicates these regulations. By separating, recycling and disposing of used batteries and rechargeable batteries, you are making an important contribution to protecting our environment. D-34000-1998-0099

EN

1 Safety instructions

1.1 General

The user manual is part of the product and contains important information for correct use.

- Read the user manual thoroughly and carefully before use.
- The user manual must be available in case of queries and when passing the product on.
 - Keep this user manual.
 - Do not modify the product or its accessories.
 - Do not short-circuit connectors or circuits.

Do not operate the device if it is not in working order. In such cases, it must be secured to prevent further unintended use.

- Use the product, its parts and accessories only if they are in perfect condition.
- Avoid exposure to heat and cold, moisture and direct sunlight, microwaves, vibrations and mechanical pressure.
- Never operate the product near gas or electric heaters, naked flames, candles or other sources of heat.
- Always place the product on coasters to avoid wax marks on furniture and storage surfaces.
- Do not cover the product.
- In the event of questions, defects, mechanical damage, faults or other problems not covered by the documentation, contact your dealer or the manufacturer.

Not intended for children. The product is not a toy!

- Secure the packaging, small parts and insulation to prevent accidental use.
- Do not look directly into the LED.

The light source cannot be replaced.

1.2 Batteries

- Do not mix old and new batteries
- Only use batteries of the same or equivalent type as recommended.
- Do not mix alkaline, carbon-zinc or nickel-cadmium batteries.
- Remove any leaking, deformed or corroded batteries from the product and dispose of them using appropriate protective measures.
- Do not throw into fire.

1.3 Battery hazards

The remote control is fitted with a lithium button cell. The button cell is replaceable. If the button cell is swallowed, this can cause severe internal burns and death.

- If you suspect that the button cell has been swallowed or has entered the body in any other way, consult a doctor immediately.
- Never use button cells if they are dented, leaking or damaged.

Mechanical damage can cause gaseous substances to escape, which may be highly irritating, flammable or toxic.

- Remove any leaking, deformed or corroded cells from the product and dispose of them using suitable protective equipment.
- If a button cell has leaked, avoid contact with skin, eyes and mucous membranes; rinse the affected areas with water if necessary and consult a doctor immediately.

Exposure to extreme heat can cause the battery to explode and/or leak corrosive liquid.

- Never throw button cells into a fire.
- Do not short-circuit the button cell and do not immerse it in liquids.

2 Description and function

2.1 Product

The product is a set of 3 LED real wax candles for indoor use (IP20). The three LED real wax candles are battery-operated and are available in three sizes: S, M and L. The LED real wax candles feature flickering LED lighting with a timer function, dimmer function and ON/OFF switch.

2.2 Contents

Set of 3 LED real wax candles, white, remote control, operating instructions

2.3 Controls

See Fig. 1.

- | | | |
|-------------------------------|-----------------------------|------------------|
| 1 LED real wax candle, size L | 4 Battery compartment | 7 Remote control |
| 2 LED real wax candle, size M | 5 ON/OFF switch | with function |
| 3 LED real wax candle size S | 6 Battery compartment cover | buttons |

3 Intended use

This product may only be used in dry indoor areas. This product is intended exclusively for private use and for its intended purpose. This product is not intended for commercial use. We do not permit the use of the device in any manner other than that described in the sections 'Description and Function' and 'Safety Instructions'. Failure to observe these regulations and safety instructions may result in fatal accidents, injuries and damage to persons and property.

IP20: This product is not protected against water. This product is protected against contact with foreign objects $\geq \varnothing$ 12 mm.

4 Preparation

- Check the scope of delivery for completeness and integrity.

5 Operation

5.1 Insert batteries

ATTENTION!

Material damage due to incorrect power supply and handling

- Only use the batteries specified in the 'Technical data' section or batteries of an equivalent type. Batteries are not included in the delivery.
- 1. Carefully open the battery compartment cover (6) on the underside of the LED real wax candle.
- 2. Insert three new AAA batteries into the battery compartments (4), ensuring the positive and negative terminals are correctly aligned.
- 3. Carefully close the battery compartment cover (6).

5.2 Inserting the button cell

1. Carefully slide out the compartment for the button cell at the bottom of the remote control (7).
2. Insert a CR2025 button cell into the device.
3. Carefully slide the compartment containing the button cell back into the remote control.

5.3 Switching on and off

- Slide the ON/OFF switch (5) to the 'ON' position to switch on the LED real wax candle.
- Slide the ON/OFF switch (5) to the 'OFF' position to switch off the LED real wax candle.

You can also switch the LED real wax candles on and off using the supplied remote control. To do this, the ON/OFF switch (5) must be in the 'ON' position.

- Press the ON button on the remote control (7) to switch on the LED real wax candle.
- Press the OFF button on the remote control (7) to switch off the LED real wax candle.

5.4 Setting the TIMER function

- Press the 2H, 4H, 6H or 8H buttons on the remote control (7) to set the desired lighting duration.

5.5 Setting light modes

You can use the remote control to switch between two light modes: 'Candle' and 'Light'.

The 'Candle' light mode simulates the flickering of candlelight.

- Press the 'Candle' or 'Light' buttons on the remote control (7) to select the desired lighting mode.

5.6 Switch on the DIMM function

The LED real wax candles have a dimming function. The dimming function can be used in both "Candle" and "Light" lighting modes.

- Press the buttons with the sun symbol (-) or (+) on the remote control (7) to dim the light.

6 Maintenance, Care, Storage and Transport

The product requires no maintenance.

NOTICE!

Material damage

- Use only a dry, soft cloth for cleaning.
- Use a slightly damp, soft cloth for stubborn stains.
- Do not use detergents or chemicals.
- Store the product out of the reach of children and in a dry, dust-free environment when not in use.
- Remove batteries / rechargeable batteries when not in use.
- Store in a cool, dry place.
- Keep and use the original packaging for transport.

7 Disposal instructions

7.1 Product

In accordance with the European WEEE Directive, electrical and electronic equipment must not be disposed of with household waste. Its components must be recycled or disposed of separately. Otherwise, harmful and hazardous substances may damage health and pollute the environment.

As a consumer, you are legally obliged to return electrical and electronic devices to the manufacturer, the retailer, or public collection points at the end of the device's life, free of charge. Details are set out in national legislation. The symbol on the product, in the user manual or on the packaging refers to these provisions. By separating, using and disposing of used devices in this way, you are making a significant contribution to environmental protection.

WEEE No: 82898622

7.2 Rechargeable battery/batteries

(Rechargeable) batteries must not be disposed of with household waste. Their components must be sent for recycling or disposal separately, as toxic and hazardous substances can harm the environment if not disposed of sustainably. As a consumer, you are obliged to return them at the end of

their end of life to the manufacturer, the point of sale or designated public collection points free of charge. Details are governed by the relevant national legislation. The symbol on the product, the instruction manual and/or the packaging draws attention to these provisions. By separating, recovering and disposing of waste (rechargeable) batteries in this way, you are making an important contribution to protecting our environment.

D-34000-1998-0099

FR

1 Safety instructions

1.1 General

The user manual forms an integral part of the product and contains important information for correct installation and use.

- Read the user manual carefully and in full before use.

The user manual must be available in the event of loss or transfer of the product.

- Keep these instructions in a safe place.
- Do not modify the product or its accessories.
- Do not short-circuit connections or circuits.

A faulty appliance must not be put into service. Instead, it must be secured to prevent accidental use.

- Only use the product, parts and accessories that are in perfect condition.
- Avoid extreme conditions, such as extreme heat and cold, humidity and direct sunlight, as well as microwaves, vibrations and mechanical pressure.
- Never use the appliance near an electric or gas heater, an open flame, a candle or any other source of heat.
- Always place the product on coasters to prevent wax marks on furniture and storage surfaces.
- Do not cover the product.
- If you have any questions, or in the event of faults, mechanical damage, interference or other problems not covered by the documentation, please contact your dealer or the manufacturer.

Not intended for children. The product is not a toy!

- Secure the packaging, small parts and insulation to prevent accidental use.
- Do not look directly into the LED.

The bulb is not replaceable.

1.2 Batteries

- Never mix used batteries with new ones.
- Use only batteries of the same type.
- Do not mix alkaline, zinc-carbon and nickel-cadmium batteries.
- Remove expired, deformed or corroded cells using appropriate safety equipment and dispose of them.
- Do not throw into fire.

1.3 Risks associated with batteries

The remote control is fitted with a lithium button cell battery. The button cell battery is replaceable.

Swallowing the button cell battery can cause severe internal burns and death.

- If you suspect that the button cell battery has been swallowed or has entered the body in any other way, seek medical attention immediately.
- Never use button cells if they are dented, leaking or damaged. Mechanical damage may cause gaseous substances to leak, which may be highly irritating, flammable or toxic.
- Remove any leaking, deformed or corroded cells from the product and dispose of them using appropriate protective equipment.
- If a button cell battery leaks, avoid contact with the skin, eyes and mucous membranes; rinse the affected areas with water if necessary and seek medical attention immediately.

Exposure to extreme heat may cause an explosion and/or leakage of corrosive liquid.

- Never throw button cells into a fire.
- Do not short-circuit the button cell and do not immerse it in liquids.

2 Description and function

2.1 Product

The product is a set of 3 genuine wax LED candles for indoor use (IP20). The three LED wax candles are battery-powered and come in three sizes: S, M and L. The LED candles made of real wax feature a flashing LED light, a timer function, a dimmer function and an ON/OFF switch.

2.2 Contents of the delivery

Set of 3 LED candles made from real wax, white, with remote control, instructions

2.3 Control elements

See Fig. 1.

- | | | |
|-------------------------------|-----------------------------|--------------------------------|
| 1 Real wax LED candle, size L | 4 Battery compartment | 7 Remote control with function |
| 2 Real wax LED candle, size M | 5 ON/OFF switch | buttons |
| 3 Real wax LED candle, size S | 6 Battery compartment cover | |

3 Intended use

This product may only be used in dry indoor areas. This product is intended exclusively for private use and for its intended purpose. This product is not intended for commercial use.

We do not authorise the use of the device in any way other than that described in the sections

'Description and Functions' and 'Safety Instructions'. Failure to observe these safety instructions and regulations may result in fatal accidents, injuries and damage to persons and property.

IP20: This product is not protected against water. This product is protected against contact with foreign objects $\geq \varnothing$ 12 mm.

4 Preparation

- Please check the contents of the delivery to ensure they are complete and undamaged.

5 Operation

5.1 Insert the batteries

WARNING! Property damage due to incorrect power supply and handling

- Only use the batteries specified in the 'Technical Specifications' section or equivalent types. Batteries are not included in the delivery.

1. Carefully open the battery compartment cover (6) located beneath the real wax LED candle.
2. Insert three new AAA batteries into the battery compartments (4), ensuring the positive and negative terminals are correctly aligned.
3. Carefully close the battery compartment cover (6).

5.2 Inserting the button cell

1. Carefully slide open the button cell compartment located at the bottom of the remote control (7).
2. Insert a CR2025 button cell into the device.
3. Gently replace the button cell compartment in the remote control.

5.3 Switching on and off

- Slide the ON/OFF switch (5) to the 'ON' position to switch on the real wax LED candle.
- Slide the ON/OFF switch (5) to the 'OFF' position to switch off the real wax LED candle. *You can also switch the real wax LED candles on and off using the supplied remote control. To do this, the ON/OFF switch (5) must be in the 'ON' position.*

- Press the ON button on the remote control (7) to switch on the real wax LED candle.
- Press the OFF button on the remote control (7) to switch off the real wax LED candle.

5.4 Setting the TIMER function

- Press the 2H, 4H, 6H or 8H buttons on the remote control (7) to set the desired lighting duration.

5.5 Adjusting the lighting modes

The remote control allows you to switch between the two lighting modes: 'Candle' and 'Light'. The 'Candle' lighting mode simulates the flickering of a candle.

- Press the "Candle" or "Light" buttons on the remote control (7) to select the desired lighting mode.

5.6 Activating the DIM function

The real wax LED candles are equipped with a dimming function. The dimming function can be used

Set to the "Candle" and "Light" lighting modes.

- Press the buttons marked with the sun symbol (-) or (+) on the remote control (7) to dim the light.

6 Maintenance, Care, Storage and Transport

The product is maintenance-free.

WARNING! Damage to property

- Use only a soft, dry cloth for cleaning.

Use a slightly damp cloth for stubborn stains.

- Do not use detergents or chemicals.
- Keep the product out of the reach of children and in a dry, dust-free environment when not in use.

- Remove the batteries/rechargeable batteries when they are not in use.
- Store in a cool, dry place.
- Keep and use the original packaging for transport.

7 Disposal instructions

7.1 The product

Under the European WEEE Directive, the disposal of electrical and electronic equipment with household waste is strictly prohibited. Their components must be recycled or disposed of separately. Toxic and hazardous components can cause lasting damage to health and the environment if not disposed of correctly.

As a consumer, you are legally obliged to return electrical and electronic equipment to the manufacturer, retailer or public collection points at the end of the devices' service life, free of charge. The details are regulated by national law. The symbol on the product, in the user manual, or on the packaging refers to these terms. With this type of separation of waste

By correctly handling, using and disposing of waste electrical and electronic equipment, you are making a significant contribution to environmental protection. WEEE No.: 82898622


7.2 Rechargeable battery

Rechargeable batteries must not be disposed of with household waste. Their components must be sent separately for recycling or disposal, as they contain toxic and hazardous ingredients

can be harmful to the environment if not disposed of in an environmentally sound manner. As a consumer, you are obliged to return them at the end of their useful life to the manufacturer, the point of sale or designated public collection points free of charge. The details are governed by the law of the respective country. The symbol on the product, the

instruction manual and/or the packaging draws attention to these provisions. By separating, recycling and disposing of (rechargeable) battery waste in this way, you are making an important contribution to protecting our environment. D-34000-1998-0099

 Fig. 1

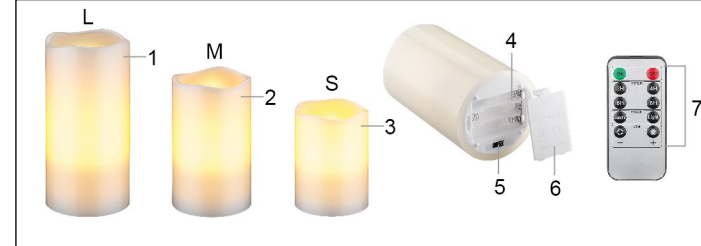

Specifications / Technical data		74368
source / Quantity (pcs.)	LED / 3	
Operating voltage	4.5 V _____	
Light colour	warm white	
Rated luminous flux	5 lm/candle	
Colour temperature	2400 K	
Max. power consumption	0.06 W/LED	
Nominal lifetime	10,000 h	
Operating temperature range	-10 °C to +25 °C	
Protection rating	IP20	
Dimmability	dimmable 	
Material Colour	Real wax, plastic, copper white	
Dimensions Ø H	Ø 75 mm 100/125/150	
Weight	530 g	
Batteries (not included)		
Type	AAA, 1.5 V _____	
Quantity (pcs.)	9	
Remote control		
Sensor type	infrared	
Max. detection range	5m	
Dimensions	40 x 87 x 6.5 mm	
Weight	13 g (14.5 g including battery)	
Battery (included in the scope of delivery)	1x CR2025 lithium button cell 3.0 V _____, 150 mAh	

Symbols used

Direct current	IEC 60417-5031	
Dimmable	-	

IT

1 Safety instructions

1.1 Generally

The instructions for use form an integral part of the product and contain important information on how to use it correctly.

- Please read the instructions carefully and in full before use.
- Keep the instructions for use to hand in case of any queries or when passing the product on to others.
- Keep these instructions for use.
- Do not modify the product or its accessories.
- Do not short-circuit connections or circuits.

Do not operate a defective device; ensure that it is not inadvertently used by others without supervision.

- Use the product, product parts and accessories only when they are in perfect condition.
- Avoid extreme conditions, such as extreme heat, cold, humidity and direct sunlight, as well as microwave ovens, vibrations and mechanical pressure.
- Never use the product near gas or electric heaters, open flames, candles or other sources of heat.
- Always place the product on coasters to prevent wax marks on furniture and storage surfaces.
- Do not cover the product.
- In the event of questions, defects, mechanical damage, interference or other issues not covered by the documentation, please contact the retailer or manufacturer.

Not intended for children. This product is not a toy!

- Keep the packaging, small parts and insulating material out of reach to prevent accidental use.
- Do not look directly into the LED.

The light source cannot be replaced.

1.2 Batteries

- Never mix used and new batteries.
- Use only batteries of the same type.
- Do not mix alkaline, zinc-carbon or nickel-cadmium batteries.
- Remove expired, deformed or corroded cells from the product using appropriate safety equipment and dispose of them.
- Do not throw into a fire.

1.3 Battery hazards

The remote control is fitted with a lithium button cell battery. The button cell battery is replaceable. Swallowing the button cell battery can cause severe internal burns and death.

- If you suspect that the button cell battery has been swallowed or has entered the body in any other way, seek medical attention immediately.
- Never use button cells if they are dented, leaking or damaged.

Mechanical damage may cause the release of gaseous substances that can be highly irritating, flammable or toxic.

- Remove any leaking, deformed or corroded cells from the product and dispose of them using appropriate protective equipment.
- If a button cell leaks, avoid contact with the skin, eyes and mucous membranes; rinse the affected areas with water if necessary and seek medical attention immediately.

Exposure to extreme heat may cause explosions and/or leakage of corrosive liquid.

- Never throw button cells into a fire.
- Do not short-circuit the button cell or immerse it in liquids.

2 Description and function

2.1 Product

The product is a set of 3 LED wax candles for indoor use (IP20). The three LED wax candles are battery-operated and come in three sizes: S, M and L. The LED wax candles feature flickering LED lighting with a timer function, dimmer function and ON/OFF switch.

2.2 Package contents

Set of 3 LED candles in real white wax, remote control, instructions for use

2.3 Controls

See Fig. 1.

- | | | |
|------------------------------|-----------------------------|--|
| 1 LED real wax candle size L | 4 Battery compartment | 7 Remote control with function buttons |
| 2 LED real wax candle size M | 5 ON/OFF switch | |
| 3 LED real wax candle size S | 6 Battery compartment cover | |

3 Intended use

 This product may only be used in dry indoor environments. This product is designed exclusively for private use and for its intended purpose. This product is not designed for commercial use. The device must not be used in any way other than that described in the

chapter 'Description and Function' or 'Safety Instructions'. Failure to observe these rules and the safety instructions may result in fatal accidents, injury and damage to persons and property.

IP20: This product is not protected against water. This product is protected against contact with foreign objects ≥ Ø 12 mm.

4 Preparation

- Check that the delivery is complete and ensure the items are undamaged.

5 Operation

5.1 Insert the batteries

WARNING! Material damage caused by incorrect power supply and handling

- Use only the batteries specified in the 'Technical Data' section or equivalent types. Batteries are not included in the delivery.
- Carefully open the battery compartment cover (6) on the underside of the LED wax candle.
- Insert three new AAA batteries into the compartments (4), ensuring the positive and negative terminals are correctly aligned.
- Carefully close the battery compartment cover (6).

5.2 Inserting the button cell

- Carefully remove the button cell compartment at the bottom of the remote control (7).
- Insert a CR2025 button cell into the device.
- Carefully slide the button cell compartment back into the remote control.

5.3 Switching on and off

- Slide the ON/OFF switch (5) to the 'ON' position to switch on the LED wax candle.
- Slide the ON/OFF switch (5) to the 'OFF' position to switch off the LED wax candle.

You can also switch the LED wax candles on and off using the supplied remote control. To do this, the ON/OFF switch (5) must be in the 'ON' position.

- Press the ON button on the remote control (7) to switch on the real wax LED candle.
- Press the OFF button on the remote control (7) to switch off the LED wax candle.

5.4 Setting the TIMER function

- Press the 2H, 4H, 6H or 8H buttons on the remote control (7) to set the desired lighting duration.

5.5 Setting the lighting modes

You can switch between the two lighting modes – 'Candle' and 'Light' – using the remote control. The 'Candle' lighting mode simulates the flickering of a candle.

- Press the 'Candle' or 'Light' buttons on the remote control (7) to set the desired lighting mode

5.6 Activate the DIM function

The LED wax candles are equipped with a dimming function. The dimming function can be used in both 'Candle' and 'Light' modes.

- Press the buttons marked with the sun symbol (-) or (+) on the remote control (7) to dim the light.

6 Maintenance, care, storage and transport

The product is maintenance-free.

WARNING! Damage to property

- Use only a dry, soft cloth for cleaning.
- Use a slightly damp cloth to clean stubborn stains.
- Do not use detergents or chemicals.
- Keep the product out of the reach of children and in a dry, dust-free place when not in use.
- Remove the batteries / rechargeable batteries when not in use.
- Store in a cool, dry place.
- Keep and use the original packaging for transport.

7 Disposal notes

7.1 Product

In accordance with the European WEEE Directive, electrical and electronic equipment must not be disposed of with household waste. Components must be recycled or disposed of separately. Toxic and hazardous components can cause permanent damage to health and the environment if disposed of improperly. The consumer is legally obliged to take electrical and electronic equipment to public collection points or to the retailer or manufacturer at the end of its

. All local laws and regulations must also be observed. The symbol on the product, in the manual or on the packaging draws attention to these terms. By sorting waste and disposing of used products in this way, you are making a significant contribution to protecting the environment.

WEEE No: 82898622

7.2 Rechargeable batteries

Rechargeable batteries must not be disposed of with household waste. Their components must be separated for recycling or disposal, as toxic and hazardous ingredients can cause harm the environment if not disposed of sustainably. As a consumer, you are obliged to return them at the end of their useful life to the manufacturer, the retailer or to designated public collection points free of charge. Please refer to the relevant national legislation for details. The symbol on the product, the instruction manual and/or the packaging

draws attention to these provisions. By separating, recovering and disposing of (rechargeable) battery waste in this manner, you are making an important contribution to protecting our environment. D-34000-1998-0099

ES

1 Safety instructions

1.1 General

The user instructions form part of the product and contain important information for correct use.

- Read the instructions for use thoroughly and carefully before use.
- The instructions for use must be available in case of uncertainty or if the product is passed on to others.

- Keep the instructions for use.
- Do not modify the product or its accessories.
- Do not short-circuit the connections and circuits.

A defective appliance must not be put into operation, but must be secured against accidental use.

- Use the product, its parts and accessories only if they are in perfect condition.
- Avoid exposing the device to extreme conditions, such as heat and cold, humidity and direct sunlight, as well as to vibrations and mechanical pressure.
- Never use the product near gas or electric heaters, open flames, candles or other sources of heat.
- Always place the product on coasters to prevent wax marks on furniture and storage surfaces.
- Do not cover the product.
- In the event of defects, mechanical damage, malfunctions or other problems that cannot be resolved using the documentation provided, please contact the seller or the manufacturer.

Not suitable for children. This product is not a toy!

- Keep the packaging, small parts and insulating material out of reach of children.
- Do not look directly at the LED.

The light source cannot be replaced.

1.2 Batteries

- Never mix new and used batteries.
- Always use batteries of the same type.
- Do not mix alkaline, zinc-carbon and nickel-cadmium batteries.
- Remove any cells from the product that are leaking, deformed or corroded, and dispose of them using appropriate protective equipment.
- Do not throw into fire.

1.3 Battery hazards

The remote control is fitted with a lithium button cell. The button cell is replaceable. Swallowing the button cell can cause severe internal burns and even death.

- If you suspect that the button cell has been swallowed or has entered the body in any other way, seek medical attention immediately.
- Never use button cells if they are dented, leaking or damaged.

Mechanical damage may cause the release of gaseous substances, which may be highly irritating, flammable or toxic.

- Remove leaking, deformed or corroded cells from the product and dispose of them using appropriate protective equipment.
- In the event of a button cell leak, avoid contact with the skin, eyes and mucous membranes, rinse the affected areas with water if necessary and seek medical advice immediately.

Exposure to extreme heat may cause an explosion and/or a leak of corrosive liquid.

- Never throw button cells into a fire.
- Do not short-circuit the button cell or immerse it in liquids.

2 Description and operation

2.1 Product

The product is a set of 3 real wax LED candles for indoor use (IP20). The three LED wax candles are battery-operated and come in three sizes: S, M and L. The real wax LED candles feature flickering LED lighting with a timer function, a dimming function and an ON/OFF switch.

2.2 Contents

Set of 3 real wax LED candles, white, remote control, instructions for use

2.3 Controls

See Fig. 1.

1 Life-size real wax LED candle L

2 Life-size LED wax candle M

3 Life-size LED wax candle S

4 Sealed lid

5 Candle casing

6 Battery compartment

7 Candle lid

3 Intended use

This product may only be used in dry indoor environments. This product is intended exclusively for private use and for its intended purpose. This product is not intended for commercial use. Any use other than that described in the 'Description and Operation' or 'Safety Instructions' sections is not permitted

Failure to observe and comply with these safety regulations and instructions may result in serious accidents, personal injury and damage to property.

IP20: This product is not protected against water. This product is protected against contact with foreign objects $\geq \varnothing 12$ mm.

4 Preparation

- Check that the contents of the package are complete and undamaged.

5 Operation

5.1 Insert the batteries

WARNING! Damage caused by incorrect power supply and handling

- Use only the batteries specified in the 'Technical Specifications' section or equivalent types. Batteries are not included in the delivery.

- Carefully open the battery compartment cover (6) located on the underside of the real wax LED candle.
- Insert three new AAA batteries into the battery compartments (4), ensuring the positive and negative terminals are correctly aligned.
- Slide the battery compartment (6) upwards.

5.2 Inserting the button cell

- Carefully remove the button cell battery compartment located at the bottom of the remote control (7).
- Insert a CR2025 button cell into the device.
- Carefully reinsert the compartment with the button cell into the remote control.

5.3 Switching on and off

- Slide the ON/OFF switch (5) to the 'ON' position to switch on the real wax LED candle.
- Slide the ON/OFF switch (5) to the 'OFF' position to switch off the real wax LED candle.

You can also switch the real wax LED candles on and off using the supplied remote control. To do this, the ON/OFF switch (5) must be in the 'ON' position.

- Press the ON button on the remote control (7) to switch on the real wax LED candle.
- Press the OFF button on the remote control (7) to switch off the real wax LED candle.

5.4 Setting the TIMER function

- Press the 2H, 4H, 6H or 8H buttons on the remote control (7) to set the desired lighting duration.

5.5 Setting the lighting modes

Using the remote control, you can switch between two lighting modes: 'Candle' and 'Light'.

The 'Candle' lighting mode simulates the flickering of a candle.

- Press the 'Candle' or 'Light' buttons on the remote control (7) to select the desired lighting mode.

5.6 Activating the dimming function

The genuine wax LED candles have a dimming function. The dimming function can be used in the 'Candle' and 'Light' lighting modes.

- Press the buttons with the sun symbol (-) or (+) on the remote control (7) to dim the light.

6 Maintenance, care, storage and transport

The product requires no maintenance.

WARNING! Property damage

- Use only a dry, soft cloth for cleaning.
- Use a slightly damp cloth for stubborn stains.

- Do not use cleaning products or chemicals.
- If the product is not to be used for a prolonged period, store it out of the reach of children in a dry place protected from dust.
- If you are not going to use it for a long period of time, remove the batteries/rechargeable batteries.
- Store it in a cool, dry place.
- Keep and use the original packaging for transport.

7 Disposal instructions

7.1 Product

In accordance with the European WEEE Directive, electrical and electronic equipment must not be disposed of with household waste. Its components must be recycled or disposed of separately, as the improper disposal of toxic or hazardous components can cause lasting harm to health and the environment.

Under the German Electrical and Electronic Equipment Act (ElektroG), as a user you are obliged to return electrical and electronic devices to the manufacturer, the point of sale or a public collection point at the end of their useful life, free of charge. Specific details are set out in national legislation. The symbol in

The product, the user manual and/or the packaging indicate these regulations. By separating materials, recycling and disposing of obsolete devices in this way, you are making a significant contribution to protecting the environment. WEEE No.: 82898622


7.2 Rechargeable battery/batteries

"Batteries and rechargeable batteries must not be disposed of with household waste. Their components must be recycled or disposed of separately, as the improper disposal of toxic or hazardous components can cause lasting damage to the environment.

As a user, you are obliged to return them to the manufacturer, the point of sale or a public collection centre at the end of their useful life, free of charge. Specific details are set out in the relevant legislation.

In the country. The symbol on the product, in the user manual and/or on the packaging indicates these regulations. By separating, recycling and disposing of obsolete batteries and accumulators in this way, you are making a significant contribution to protecting the environment. D-34000-1998-0099

 Fig. 1

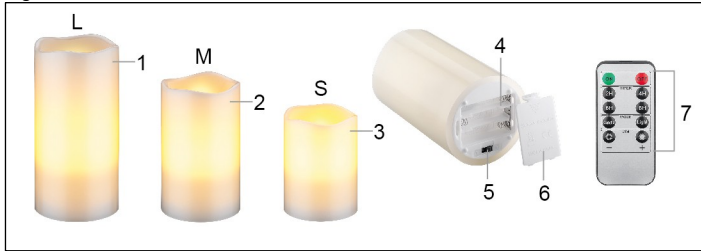

Technical data / Tekniske data / Tekniska data

Item number	74368
Light source / Quantity (pcs.)	LED / 3
Operating voltage	4.5 V
Light colour Rated luminous flux Colour temperature	warm white 5 lm/candle 2400 K
Max. power consumption	0.06 W/LED
Nominal lifetime	10,000 h
Operating temperature range	-10 °C to +25 °C
Protection rating	IP20
Dimmability	dimnable
Material Colour	Real wax, plastic, copper white
Dimensions Ø H	Ø 75 mm 100/125/150
Weight	530 g
Batteries (not included)	
Type	AAA, 1.5 V
Quantity (pcs.)	9
Remote control	
Sensor type	infrared
Max. detection range	5m
Dimensions	40 x 87 x 6.5 mm
Weight	13 g (14.5 g including battery)
Battery (included in the scope of delivery)	1x CR2025 lithium button cell 3.0 V, 150 mAh

Symbols used

Direct current	IEC 60417-5031	
Dimmable	-	

NL

1 Safety instructions

1.1 General

This is part of the product and contains important instructions for correct use.

- Please read the instructions for use thoroughly and carefully before use.
- The instructions for use must be available in case of any uncertainties and when passing the product on.
- Keep the user manual.
- Do not make any modifications to the products or accessories.
- Do not short-circuit connections and switching circuits.

A defective device must not be put into operation, but must be secured immediately to prevent further unintended use.

- Only use the product, its components and accessories when they are in perfect condition.
- Avoid extreme conditions, such as heat and cold, dampness and direct sunlight, microwaves, as well as vibrations and mechanical pressure.
- Never use the product near gas or electric heaters, open flames, candles or other heat-

Sources.

- Always place the product on coasters to prevent wax stains on furniture and storage surfaces.
- Do not cover the product.
- If you have any questions, or in the event of defects, mechanical damage, malfunctions or other problems that cannot be resolved using the enclosed documentation, please contact your dealer or the manufacturer.

Not suitable for children. This product is not a toy!

- Keep the packaging, small parts and insulation material out of reach of children to prevent accidental use.
- Do not look directly at the LED.

The light source cannot be replaced.

1.2 Batteries

- Never mix used batteries with new ones.
- Use only batteries of the same type.
- Do not mix alkaline, zinc-carbon or nickel-cadmium batteries.
- Remove leaking, deformed or corroded cells from the product and dispose of them using appropriate protective equipment.
- Do not throw into fire.

1.3 Battery hazards

The remote control is fitted with a lithium button cell. The button cell is replaceable.

If the button cell is swallowed, it can cause severe internal burns and death.

- If you suspect that the button cell has been swallowed or has otherwise entered the body, consult a doctor immediately.
- Never use button cells that are dented, leaking or damaged.

Mechanical damage may lead to the release of gaseous substances that may be highly irritating, flammable or toxic.

- Remove leaking, deformed or corroded cells from the product and dispose of them using appropriate protective equipment.
- If a button cell has leaked, avoid contact with the skin, eyes and mucous membranes, rinse the affected areas with water if necessary and consult a doctor immediately.

Exposure to extreme heat may cause an explosion and/or leakage of corrosive liquid.

- Never throw button cells into a fire.
- Do not short-circuit the button cell or immerse it in liquids.

2 Description and operation

2.1 Product

The product is a set of 3 genuine LED wax candles for indoor use (IP20). The three genuine LED wax candles are battery-operated and come in three sizes: S, M and L. The genuine LED wax candles feature flickering LED lighting with a timer function, dimmer function and on/off switch.

2.2 Contents

3-piece set of LED candles with real wax, white, remote control, user manual

2.3 Controls

See fig. 1.

- | | | |
|---------------------------------------|-----------------------------|-----------------------|
| 1 LED candle made of real wax, size L | 4 Battery compartment | 7 Remote control with |
| 2 Real wax LED candle, size M | 5 ON/OFF switch | function buttons |
| 3 Real wax LED candle, size S | 6 Battery compartment cover | |

3 Use in accordance with the instructions

This product may only be used in dry indoor areas. This product is intended solely for private use and for the purpose for which it is intended. This product is not intended for commercial use. Any use other than that described in the section 'Description and function' or in the

"Safety instructions" is not permitted. Failure to comply with these regulations and safety instructions may result in serious accidents, personal injury and property damage.

IP20: This product is not protected against water. This product is protected against contact with foreign objects $\geq \varnothing 12$ mm.

4 Preparation

- Check that the contents of the delivery are complete and undamaged.

5 Operation

5.1 Inserting the batteries

WARNING!

Material damage caused by incorrect power supply and handling

- Only use batteries as specified in the 'Technical data' section or batteries of an equivalent type. Batteries are not included.
1. Carefully open the battery compartment cover (6) on the underside of the LED real wax candle.
 2. Insert three new AAA batteries into the battery compartments (4), taking care to observe the positive and negative polarities.
 3. Carefully close the battery compartment cover (6).

5.2 Inserting the button cell

1. Carefully slide the compartment for the coin cell at the bottom of the remote control (7) outwards.
2. Insert a CR2025 button cell into the device.
3. Carefully slide the compartment containing the button cell back into the remote control.

5.3 Switching on and off

- Slide the ON/OFF switch (5) to the "ON" position to switch on the LED real wax candle.
- Slide the ON/OFF switch (5) to the "OFF" position to switch off the LED real wax candle.

You can also switch the LED real wax candles on and off using the supplied remote control. To do this, the ON/OFF switch (5) must be in the 'ON' position.

- Press the ON button on the remote control (7) to switch on the LED real wax candle.
- Press the OFF button on the remote control (7) to switch off the LED real wax candle.

5.4 Setting the TIMER function

- Press the 2H, 4H, 6H or 8H buttons on the remote control (7) to set the desired lighting duration.

5.5 Setting light modes

You can use the remote control to switch between two light modes: 'Candle' and 'Light'.

The 'Candle' light mode simulates the flickering of candlelight.

- Press the "Candle" or "Light" buttons on the remote control (7) to set the desired lighting mode

5.6 Activating the DIM function

The LED real wax candles have a dimming function. The dimming function can be used in the lighting modes 'Candle' and 'Light'.

- Press the buttons with the sun symbol (-) or (+) on the remote control (7) to dim the light.

6 Maintenance, care, storage and transport

The product is maintenance-free.

ATTENTION!

Physical damage

- Use only a dry, soft cloth for cleaning.
- For stubborn dirt, use a cloth lightly dampened with water.
- Do not use cleaning agents or chemical products.
 - If the product is not going to be used for a long time, store it in a dry and dust-free environment and keep out of reach of children.
 - Remove the batteries/rechargeable batteries if they are not going to be used for a long time.
 - Store the product in a cool, dry place.
 - Keep the original packaging for transport and use it.

7 Disposal instructions

7.1 Product

In accordance with the European WEEE Directive, electrical and electronic equipment must not be disposed of with household waste. Its components must be handled in separately for recycling or waste disposal, as toxic and hazardous components can cause lasting damage to health and the environment if disposed of improperly. As a consumer, you are obliged under the German Electrical and Electronic Equipment Act (ElektroG) to return electrical and electronic equipment at the end of its service life free of charge to the manufacturer, the shop or to the designated public collection points. Further details are regulated by the relevant national

correct. The symbol on the product, the user manual and/or the packaging refers to these provisions. By separating materials, recycling and disposing of old appliances in this way, you are making an important contribution to protecting our environment. WEEE No.: 82898622

7.2 Rechargeable battery/batteries

Batteries and rechargeable batteries must not be disposed of with household waste. The components must be recycled or disposed of separately, as toxic and hazardous components can cause lasting damage to the environment if not disposed of correctly. As a consumer, you are obliged to return these free of charge to the manufacturer, the point of sale or the designated public collection points at the end of their service life. Further details are set out in national law. The

The symbol on the product, the instructions for use and/or the packaging refers to these provisions. By separating, recycling and disposing of used batteries and rechargeable batteries in this way, you are making an important contribution to protecting our environment. D-34000-1998-0099

DA

1 Safety instructions

1.1 General

The user manual is an integral part of the product and contains important instructions for correct use.

- Read the user manual thoroughly and carefully before use.

The user manual must be kept to hand in case of uncertainty and if you pass the product on to others.

- Keep the user manual.
- Do not modify the product or its accessories.
- Do not short-circuit connections or switching circuits.

A faulty appliance must not be used, but must be secured immediately to prevent accidental continued use.

- Only use the product, its components and accessories when they are in perfect working order.
- Avoid extreme conditions such as heat and cold, rain and direct sunlight, microwaves, as well as vibrations and mechanical stress.
- Never use the product near gas or electric heaters, open flames, candles or other heat sources.
- Always place the product on table mats to avoid wax marks on furniture and storage surfaces.
- Do not cover the product.
- Contact the retailer or manufacturer in the event of any questions, defects, mechanical damage, faults or other problems that cannot be resolved using the accompanying documentation.

Not suitable for children. This product is not a toy!

- Ensure that packaging, small parts and insulation material are kept out of reach to prevent accidental use.
- Do not look directly into the LED.

The light source cannot be replaced.

1.2 Batteries

- Never mix used and new batteries.
- Use only batteries of the same type.
- Do not mix alkaline, zinc-carbon or nickel-cadmium batteries.
- Remove any leaking, deformed or corroded cells from the product and dispose of them using the appropriate safety precautions.
- Do not burn. Replace.

1.3 Battery hazards

The remote control is fitted with a lithium button cell. The button cell can be replaced. If the button cell is swallowed, it can cause severe internal burns and death.

- If you suspect that a button cell has been swallowed or has entered the body in any other way, contact a doctor immediately.
- Never use button cells if they are dented, leaking or damaged.

Mechanical damage can cause gaseous substances to escape, which may be highly irritating, flammable or toxic.

- Remove any leaking, deformed or corroded cells from the product and dispose of them using appropriate protective equipment.
- If a button cell has leaked, avoid contact with skin, eyes and mucous membranes, rinse the affected areas with water if necessary, and seek medical attention immediately.

Exposure to extreme heat may cause an explosion and/or leakage of corrosive liquid.

- Never throw button cells into a fire.
- Do not short-circuit the button cell or immerse it in liquids.

2 Description and function

2.1 Product

The product is a set of 3 LED wax candles for indoor use (IP20). The three LED wax candles are battery-powered and come in three sizes: S, M and L. The LED wax candles feature flickering LED lighting with a timer function, dimmer function and ON/OFF switch.

2.2 Contents

Set of 3 wax LED candles, white, remote control, instructions for use

2.3 Controls

See Fig. 1.

- | | | |
|-------------------------------|-----------------------------|-----------------------|
| 1 LED real wax candle, size L | 4 Battery compartment | 7 Remote control with |
| 2 LED real wax candle, size M | 5 ON/OFF switch | function buttons |
| 3 LED real wax candle, size S | 6 Battery compartment cover | |

3 Intended use



This product must only be used in dry indoor areas. This product is intended solely for private use and the purpose for which it is designed. This product is not intended for commercial use. Any use that deviates from the sections 'Description and Function' or 'Safety Instructions' is not permitted.

Failure to follow or comply with these regulations and safety instructions may result in serious accidents, personal injury and damage to property.

IP20: This product is not protected against water. This product is protected against contact with foreign objects $\geq \varnothing 12$ mm.

4 Preparation

- Check that you have received all parts and that they are intact.

5 Operation

5.1 Insert batteries

WARNING!

Material damage due to incorrect power supply and handling

- Only use the batteries specified in the 'Technical data' section, or batteries of a similar type. Batteries are not included in the delivery.

1. Carefully open the battery compartment cover (6) on the underside of the LED wax candle.
2. Insert three new AAA batteries into the battery compartments (4), taking care to observe the correct polarity (positive and negative).
3. Carefully close the battery compartment cover (6).

5.2 Inserting the button cell

1. Gently slide the button cell compartment out from the bottom of the remote control (7).
2. Insert a CR2025 button cell into the unit.
3. Gently push the button cell compartment back into the remote control.

5.3 Switching on and off

- Slide the ON/OFF switch (5) to the 'ON' position to switch on the LED wax light.
- Slide the ON/OFF switch (5) to the 'OFF' position to switch off the LED wax candle.

You can also switch the LED wax lights on and off using the supplied remote control. To do this, the ON/OFF switch (5) must be in the "ON" position.

- Press the ON button on the remote control (7) to switch on the LED candle light.
- Press the OFF button on the remote control (7) to switch off the LED candle light.

5.4 Setting the TIMER function

- Press the 2H, 4H, 6H or 8H buttons on the remote control (7) to set the desired light duration.

5.5 Setting the light modes

You can use the remote control to switch between two light modes: 'Candle' and 'Light'.

The 'Candle' lighting mode simulates the flickering of a real candle.

- Press the "Candle" or "Light" buttons on the remote control (7) to set the desired lighting mode.

5.6 Turn on the DIM function

The LED wax candles have a dimming function. The dimming function can be used in both "Candle" and "Light" lighting modes.

- Press the buttons with the sun symbol (-) or (+) on the remote control (7) to dim the light.

6 Maintenance, care, storage and transport

The product is maintenance-free.

CAUTION!

Physical damage

- Always use a dry, soft cloth for cleaning.

For heavy soiling, the cleaning cloth may be dampened with water.

- Never use cleaning agents or chemicals.
- Keep the product out of reach of children and in a dry, dust-free place if it is not going to be used for a long time.
- Remove the batteries/rechargeable batteries if the product is not to be used for a prolonged period.
- Store in a cool, dry place.
- Keep and use the original packaging if the product needs to be transported at any time.

7 Disposal

7.1 Product

In accordance with the Council's WEEE Directive, electrical and electronic equipment must not be disposed of with ordinary household waste. The components of the equipment must be sorted and disposed of separately at a local recycling centre, as toxic and hazardous components can harm health and the environment if disposed of incorrectly.

As a consumer, you are obliged under current legislation to return electrical and electronic waste to the manufacturer, retailer, or a public collection point at the end of the product's life. The details are regulated by national legislation. The symbol on this product, in the user manual, or on the packaging complies with these regulations. By sorting, using and recycling waste in this way, you are playing an important part in protecting the environment.

WEEE No: 82898622

7.2 Rechargeable battery/batteries

The batteries must not be disposed of with household waste. Their components must be recycled or disposed of separately. Otherwise, polluting and harmful substances may contaminate our environment. As a consumer, you are obliged under current legislation to return electrical and electronic waste to the manufacturer, retailer, or a public collection point at the end of the product's life. The details are regulated

in accordance with national legislation. The symbol on this product, in the user manual, or on the packaging complies with

these rules. By sorting, using and recycling waste in this way, you are playing an important part in protecting the environment. D-34000-1998-0099

SV

1 Safety instructions

1.1 General

The user manual is part of the product and contains important instructions on how to use it correctly.

- Read the user manual carefully and in full before using the product.

The product must not be used if it is defective. Ensure that it cannot be switched on again by mistake.

- Keep the user manual.
- The product and its accessories must not be modified.
- Do not short-circuit connections or circuits.

Do not use the product if it is faulty. Ensure that it cannot be switched on again by mistake.

- Only use the product, product parts and accessories if they are in perfect condition.
- Avoid extreme conditions such as heat and cold, moisture and direct sunlight, microwaves, as well as vibrations and mechanical pressure.
- Never use the product near gas or electric heaters, open flames, candles or other heat sources.
- Always place the product on a mat to avoid wax marks on furniture and storage surfaces.
- Do not cover the product.
- Contact the retailer or manufacturer if you have any questions, or in the event of defects, mechanical damage, malfunctions or other problems that cannot be resolved using the instructions provided.

Not intended for children. This product is not a toy!

- Ensure that the packaging, small parts and insulation material are not used for any purpose other than that for which they are intended.
- Do not look directly into the LED.

The light source cannot be replaced.

1.2 Batteries

- Do not mix new batteries with old ones.
- Use only batteries of the same type.
- Do not mix alkaline, zinc-carbon or nickel-cadmium batteries.
- Remove flat, deformed or corroded batteries and dispose of them using a suitable protective device.
- Do not expose to fire.

1.3 Battery risks

The remote control is fitted with a lithium button cell. The button cell is replaceable. If the button cell is swallowed, it can cause severe internal burns and death.

- If you suspect that the button cell has been swallowed or has otherwise entered the body, contact a doctor immediately.
- Never use button cells if they are dented, leaking or damaged.

Mechanical damage may cause gaseous substances to leak, which may be highly irritating, flammable or toxic.

- Remove any leaking, deformed or corroded cells from the product and dispose of them using appropriate protective equipment.
- If a button cell has leaked, avoid contact with skin, eyes and mucous membranes; if necessary, rinse the affected areas with water and seek medical attention immediately.

Exposure to extreme heat may cause an explosion and/or leakage of corrosive liquid.

- Never throw button cells into a fire.
- Do not short-circuit the button cell or immerse it in liquids.

2 Description and function

2.1 Product

The product is a set of 3 LED candles in real wax for indoor use (IP20). The three LED wax candles are battery-powered and come in three sizes: S, M and L. The LED wax candles feature flickering LED lighting with a timer function, dimmer function and ON/OFF switch.

2.2 Contents

3-pack of LED candles made of real wax, white, remote control, user manual

2.3 Controls

See Fig. 1.

- | | | |
|----------------------------------|-----------------------------------|-----------------------|
| 1 LED candle in real wax size L | 4 Battery compartment | 7 Remote control |
| 2 LED candles in real wax size M | 5 ON/OFF switch | with function buttons |
| 3 LED lights in real wax size S | 6 Lock on the battery compartment | |

3 Intended use

This product must only be used in dry indoor areas. This product is intended solely for use by private individuals and within the specified areas of application. This product is not intended for professional use. The product must not be used in any way other than as described in the chapter "Description and Function" or "Safety Instructions". Failure to comply with these regulations and safety instructions may result in serious accidents and/or personal injury and damage to property.

IP20: This product is not protected against water. This product is protected against contact with foreign objects $\geq \varnothing 12$ mm.

4 Preparation

- Check that the delivery is complete and undamaged.

5 Use

5.1 Insert the batteries

WARNING! handling

Physical damage caused by incorrect power supply and

- Only use the batteries specified in the 'Technical Data' section or batteries of an equivalent type. Batteries are not included in the delivery.
- Carefully open the battery compartment cover (6) on the underside of the LED candle.
- Insert three new AAA batteries into the battery compartments (4), ensuring the correct polarity (positive and negative).
- Carefully close the battery compartment cover (6).

5.2 Insert the button cell

- Carefully slide out the button cell compartment on the underside of the remote control (7).
- Insert a CR2025 button cell into the unit.
- Gently slide the button cell compartment back into the remote control.

5.3 Switch on and off

- Slide the ON/OFF switch (5) to the 'ON' position to switch on the real wax LED light.
- Slide the ON/OFF switch (5) to the 'OFF' position to switch off the real wax LED light.

You can also switch the LED wax candles on and off using the remote control provided. To do this, the ON/OFF switch (5) must be in the 'ON' position.

- Press the ON button on the remote control (7) to switch on the LED candle made of real wax.
- Press the OFF button on the remote control (7) to switch off the LED candle made of real wax.

5.4 Setting the TIMER function

- Press the 2H, 4H, 6H or 8H buttons on the remote control (7) to set the desired lighting time.

5.5 Setting the light modes

You can use the remote control to switch between two lighting modes: 'Candle' and 'Light'.

The 'Candle' light mode simulates the flickering of a real candle.

- Press the 'Candle' or 'Light' buttons on the remote control (7) to set the desired lighting mode.

5.6 Switch on the DIM function

The real wax LED lights have a dimming function. The dimming function can be used in both the "Candle" and "Light".

- Press the buttons with the sun symbol (-) or (+) on the remote control (7) to dim the light.

6 Maintenance, care, storage and transport

The product is maintenance-free.

NOTE!

Physical damage

- Use only a dry, soft cloth when cleaning.
- If the product is very dirty, you can lightly dampen the cleaning cloth with water.
- Do not use cleaning agents or chemicals.
- If the product is not to be used for a prolonged period, it should be stored out of the reach of children in a dry and dust-free place.
- Remove the batteries if the product is not to be used for a prolonged period.
- Store the product in a dry and cool place.
- Keep the original packaging and use it if the product needs to be transported.

7 Waste disposal

7.1 Product

Under the EU WEEE Directive, electrical and electronic products must not be disposed of with household waste. The various parts of the product must be separated and sent for recycling or waste disposal, as toxic and hazardous components can cause harm to health and the environment if handled incorrectly.

As a consumer, you are legally obliged to return electrical or electronic equipment to collection points or to the retailer at the end of the equipment's useful life. Details are regulated by national laws.


The symbols on the product, in the user manual or on the packaging refer to these conditions. By separating, reusing and disposing of waste in this way, you are helping to improve the environment.

WEEE No.: 82898622

7.2 Rechargeable battery/batteries

Batteries must not be disposed of with household waste. Their components must be recycled and disposed of separately. Otherwise, polluting and hazardous substances may contaminate the environment. As a consumer, you are legally obliged to return batteries to collection points or to the retailer at the end of their service life. Details are regulated by national laws. The symbols on the product, in the user manual or on the packaging refer to these conditions. By separating, using and disposing of batteries in this way, you are helping to improve the environment. D-34000-1998-0099

 Fig. 1

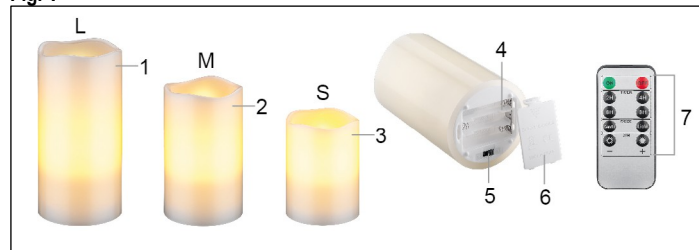

Technical data

Item number	74368
Light source / Quantity (pcs.)	LED / 3
Operating voltage	4.5 V
Light colour Rated luminous flux Colour temperature	warm white 5 lm/candle 2400 K
Max. power consumption	0.06 W/LED
Nominal lifetime	10,000 h
Operating temperature range	-10 °C to +25 °C
Protection rating	IP20
Dimmability	dimmable
Material Colour	Real wax, plastic, copper white
Dimensions Ø H	Ø 75 mm 100/125/150
Weight	530 g
Batteries (not included)	
Type	AAA, 1.5 V
Quantity (pcs.)	9
Remote control	
Sensor type	infrared
Max. detection range	5m
Dimensions	40 x 87 x 6.5 mm
Weight	13 g (14.5 g including battery)
Battery (included in the scope of delivery)	1x CR2025 lithium button cell 3.0 V, 150 mAh

Symbols used

Direct current	IEC 60417-5031	
Dimmable	-	

CS

1 Safety instructions

1.1 General

The user manual is included with the product and contains important instructions for correct use.

- Please read the full user manual carefully before use.

The user manual must be available in case of doubt and when the product is passed on to others.

- Keep the user manual in a safe place.
- Do not make any modifications to the product or its accessories.
- Do not short-circuit connections or electrical circuits.

A faulty appliance must not be put into operation and must be secured to prevent accidental further use.

- Use only the product, product parts and accessories that are in perfect condition.
- Avoid extreme conditions such as heat and cold, damp and direct sunlight, microwaves, vibrations and mechanical pressure.
- Never use the product near gas or electric heaters, open flames, candles or other sources of heat.

- Always place the product on coasters to prevent wax marks on furniture and storage surfaces.
- Do not cover the product.
- If you have any questions, or in the event of faults, mechanical damage, malfunctions or other problems that cannot be resolved using the accompanying documentation, please contact the retailer or manufacturer.

Not suitable for children. This product is not a toy!

- Keep the packaging, small parts and insulating material out of reach to prevent accidental use.
- Do not look directly into the LED.

The light source cannot be replaced.

1.2 Batteries

- Never mix used batteries with new ones.
- Use only batteries of the same type.
- Do not mix alkaline, zinc-carbon or nickel-cadmium batteries.
- Remove any leaking, deformed or corroded cells from the product and dispose of them using appropriate protective equipment.
- Do not throw into fire.

1.3 Hazards associated with batteries

The remote control is equipped with a lithium button cell. The button cell is replaceable. Swallowing a button cell can cause severe internal burns and death.

- If you suspect that a button cell has been swallowed or has entered the body in any other way, seek medical attention immediately.
- Never use button cells if they are dented, leaking or damaged.

Mechanical damage may cause the release of gaseous substances, which may be highly irritant, flammable or toxic.

- Remove any leaking, deformed or corroded cells from the product and dispose of them using appropriate protective equipment.
- If a button cell has leaked, avoid contact with skin, eyes and mucous membranes; if necessary, rinse the affected areas with water and seek medical attention immediately.

Exposure to extreme heat may cause an explosion and/or leakage of corrosive liquid.

- Never throw button cells into a fire.
- Do not short-circuit the button cell or immerse it in liquids.

2 Description and function

2.1 Product

The product is a set of 3 real wax LED candles for indoor use (IP20). The three real wax LED candles are soldered to batteries and are available in three sizes: S, M and L. The real wax LED candles feature flashing LED lighting with a timer, dimmer and switch function.

2.2 Scope of delivery

Set of 3 white real wax LED candles, remote control, user manual

2.3 Controls

See Fig. 1.

- | | | |
|-------------------------------|-------------------------------|--|
| 1 Real wax LED candle, size L | 3 Real wax LED candle, size S | 6 Battery compartment cover |
| 2 Real wax LED candle, size M | 4 Battery compartment | 7 Remote control with function buttons |
| | 5 ON/OFF switch | |

3 Intended use

This product may only be used in dry indoor areas. This product is intended exclusively for private use and for the specified purpose. This product is not intended for commercial use. Any use other than that described in the 'Description and Function' section or in the 'Safety Instructions' is not permitted.

Failure to observe and comply with these provisions and safety instructions may result in serious injury, harm to health and damage to property.

IP20: This product is not protected against water. This product is protected against contact with foreign objects $\geq \varnothing 12$ mm.

4 Preparation

- Please check that the contents of the delivery are complete and undamaged.

5 Operation

5.1 Insert the batteries

WARNING! **Damage to equipment due to incorrect power supply and handling**

- Use only the batteries listed in the "Technical Specifications" section or equivalent types. Batteries are not included in the delivery.

1. Carefully open the battery compartment cover (6) on the underside of the LED candle on the right-hand side.
2. Insert three new AAA batteries into the battery compartments (4), ensuring that the positive and negative terminals are correctly aligned.
3. Carefully close the battery compartment cover (6).

5.2 Inserting the coin cell

1. Carefully slide out the coin cell compartment at the bottom of the remote control (7).
2. Insert a CR2025 button cell into it.
3. Carefully slide the compartment with the button cell back into the remote control.

5.3 Switching on and off

- Slide the ON/OFF switch (5) to the 'ON' position to switch on the LED candle on the right-hand side.
- To switch off the real wax LED candle, move the ON/OFF switch (5) to the 'OFF' position.

You can also switch the real wax LED candles on and off using the supplied remote control. To do this, the ON/OFF switch (5) must be in the 'ON' position.

- Press the ON button on the remote control (7) to switch on the real wax LED candle.
- Press the OFF button on the remote control (7) to switch off the real wax LED candle.

5.4 Setting the TIMER function

- Press the 2H, 4H, 6H or 8H buttons on the remote control (7) to set the desired lighting duration.

5.5 Setting the lighting modes

You can use the remote control to switch between two lighting modes: 'Candle' and 'Light'. The 'Candle' lighting mode simulates the flickering of a candle.

- Press the 'Candle' or 'Light' button on the remote control (7) to set the desired lighting mode.

5.6 Activating the DIMM function

The LED candles on the right-hand side have a dimming function. The dimming function can be used in both the "Candle" and "Light".

- Press the buttons marked with the sun symbol (-) or (+) on the remote control (7) to dim the light.

6 Maintenance, care, storage and transport

The product is maintenance-free.

IMPORTANT!

Physical damage

- Use only a dry, soft cloth for cleaning.

If the item is very dirty, you may slightly dampen the cleaning cloth with water.

- Do not use cleaning products or chemicals.
- If the product is not going to be used for a long time, store it out of reach of children in a dry, dust-free environment.
- Remove the batteries/rechargeable batteries if the product is not going to be used for a long time.
- Store in a cool, dry place.
- Keep the original packaging and use it for transport.

7 Disposal instructions

7.1 Product

In accordance with the European WEEE Directive, electrical and electronic equipment must not be disposed of with household waste. Their components must be handed over for recycling or disposed of as sorted waste, as toxic and hazardous components may cause permanent damage to the environment if disposed of improperly. As a consumer, you are obliged under the Waste Act to return electrical and electronic equipment at the end of its service life to the manufacturer, retailer or a public collection point free of charge. Details are set out in the relevant national legislation. The symbol on the product, the user manual and/or the packaging indicates these provisions

By correctly sorting, recycling and disposing of old equipment, you are making a significant contribution to protecting the environment.
WEEE number: 82898622

7.2 Rechargeable batteries/accumulators

Batteries must not be disposed of with household waste. Their components must be recycled and disposed of separately. Otherwise, polluting and hazardous substances may contaminate the environment. As a consumer, you are legally obliged to return batteries to collection points or to the retailer at the end of their useful life. Details are regulated by national laws. The symbols on the product, in the user manual or on the packaging refer to these conditions. By separating, using and disposing of batteries in this way, you are helping to

improving the environment. D-34000-1998-0099

PL

1 Safety instructions

1.1 General information

The user manual is an integral part of the product and contains important guidelines for correct use.

- Please read the entire user manual carefully.

The user manual must be available in case of any doubts during use, and also if the product is passed on to other people.

- Keep the user manual.

- Do not modify the product or any accessories.
- Do not short-circuit connections or control circuits.

A damaged device must not be operated, but must be secured immediately to prevent accidental further use.

- Use only the product, product parts and accessories that are in perfect condition.
- Avoid extreme conditions such as high and low temperatures, humidity, direct sunlight, microwaves, vibrations and mechanical pressure.
- Never use the product near gas or electric heaters, open flames, candles or other sources of heat.
- Always place the product on coasters to avoid wax marks on furniture and storage surfaces.
- Do not cover the product.
- In the event of queries, malfunctions, mechanical damage, faults or other issues that cannot be resolved using the accompanying documentation, please contact the distributor or manufacturer.

Not suitable for children. This product is not a toy!

- Keep the packaging, small parts and insulation material out of reach to prevent accidental use.
- Do not look directly at the LED.

The light source cannot be replaced.

1.2 Batteries

- Do not mix used batteries with new ones.
- Only use batteries of the same type.
- Do not mix alkaline, zinc-carbon or nickel-cadmium batteries.
- Remove any leaking, deformed or corroded cells from the product and dispose of them with appropriate safety precautions.
- Do not throw them into a fire.

1.3 Hazards associated with batteries

The remote control is equipped with a lithium button cell. The button cell is replaceable. Swallowing a button cell can lead to severe internal burns and death.

- If you suspect that a button cell has been swallowed or has entered the body in any other way, consult a doctor immediately.
- Never use button cells if they are dented, leaking or damaged. Mechanical damage may cause the release of gases that can be highly irritating, flammable or toxic.
- Remove any leaking, deformed or corroded cells from the product and dispose of them using appropriate protective equipment.
- In the event of a leak from a button cell, avoid contact with the skin, eyes and mucous membranes; if necessary, rinse the affected areas with water and consult a doctor immediately.

Exposure to extreme heat may lead to an explosion and/or leakage of corrosive liquid.

- Never throw button cells into a fire.
- Do not short-circuit a button cell or immerse it in liquids.

2 Description and function

2.1 Product

The product is a set of 3 real wax LED candles for indoor use (IP20). The three LED wax candles are battery-powered and come in three sizes: S, M and L. The real wax LED candles feature flickering LED lighting with a timer function, a dimming function and an ON/OFF switch.

2.2 Contents

Set of three real wax LED candles, white, remote control, user manual

2.3 Controls

See Fig. 1.

- 1 LED wax candle, size L
- 2 LED wax candle, size M
- 3 LED wax candle, size S

- 4 Battery compartment
- 5 ON/OFF switch
- 6 Battery compartment cover

3 Intended use

This product may only be used in dry rooms. The product is intended solely for private use and is designed for this purpose. The product is not intended for professional use. Use in any manner other than that described in the sections 'Description and functions' and 'Instructions'

regarding safety is unacceptable. Failure to comply with these provisions and safety rules may result in serious accidents and personal injury or property damage.

IP20: This product is not protected against water. This product is protected against contact with foreign objects $\geq \varnothing$ 12 mm.

4 Preparation

- Check the contents of the package for completeness and integrity.

5 Operation

5.1 Insert the batteries

WARNING! **Damage to the device caused by incorrect power supply and operation**

- Only use the batteries listed in the "Technical data" section or equivalent types. Batteries are not included in the scope of delivery.

1. Carefully open the battery compartment cover (6) on the base of the real wax LED candle.
2. Insert three new AAA batteries into the battery compartment (4), ensuring the positive and negative terminals are correctly aligned.
3. Carefully close the battery compartment cover (6).

5.2 Inserting the button cell

1. Carefully slide out the battery compartment at the bottom of the remote control (7).
2. Insert the CR2025 button cell into the device.
3. Carefully slide the button cell compartment back into the remote control.

5.3 Switching on and off

- Slide the ON/OFF switch (5) to the 'ON' position to switch on the real wax LED candle.
- Slide the ON/OFF switch (5) to the 'OFF' position to switch off the real wax LED candle. Real wax LED candles can also be switched on and off using the included remote control. To do this, the ON/OFF switch (5) must be in the 'ON' position.
- Press the ON button on the remote control (7) to switch on the real wax LED candle.
- Press the OFF button on the remote control (7) to switch off the real wax LED candle.

5.4 Setting the TIMER function

- Press the 2H, 4H, 6H or 8H buttons on the remote control (7) to set the desired burning time.

5.5 Setting the lighting modes

You can use the remote control to switch between two lighting modes: 'Candle' and 'Light'. 'Candle' mode simulates the flickering of a candle.

- Press the 'Candle' or 'Light' button on the remote control (7) to set the desired lighting mode.

5.6 Activating the DIMM function

Real wax LED candles have a dimming function. The dimming function can be used in both "Candle" and "Light" modes.

- Press the buttons with the sun symbol (-) or (+) on the remote control (7) to dim the light.

6 Maintenance, care, storage and transport

The product is maintenance-free

WARNING!

Material damage

- Use only a dry, soft cloth for cleaning.

For stubborn stains, use a cloth that has been lightly dampened with water.

- Do not use any cleaning agents or chemicals.
- If the product is not to be used for a prolonged period, store it out of the reach of children, in a dry environment protected from dust.
- If not in use for a prolonged period, remove the batteries/rechargeable battery.
- Store in a cool, dry place.
- Keep the original packaging and use it for transport.

7 Waste disposal instructions

7.1 Product

In accordance with the European WEEE Directive, electrical and electronic equipment must not be disposed of with household waste. Its components must be sent separately for recycling or disposal, as incorrectly disposed of toxic or hazardous substances can cause permanent harm to health and the environment.

Once the product has reached the end of its useful life, customers are required by applicable regulations to dispose of electrical and electronic equipment by returning it free of charge to the manufacturer, supplier or a public collection point. Details are governed by national regulations. The presence of this symbol on the product, in the user manual or on the packaging implies these provisions. By practising this type of waste separation, and by using and disposing of waste such as end-of-life equipment in this way, users play their part in protecting the environment.

WEEE No.: 82898622

7.2 Batteries

Batteries and accumulators must not be disposed of with household waste. Their components must be sent separately for recycling or disposal, as improperly disposed of toxic or hazardous substances can cause lasting damage to the environment.

Consumers are obliged to return these items free of charge to the manufacturer, point of sale or special public collection points once they have reached the end of their useful life. Detailed

Information on this subject is set out in the regulations of the individual countries. These requirements are indicated by a symbol on the product, in the user manual or on the packaging. The separate collection of materials, as well as the recycling and disposal of used batteries and accumulators, make an important contribution to environmental protection.
D-34000-1998-0099"