


Product appearance

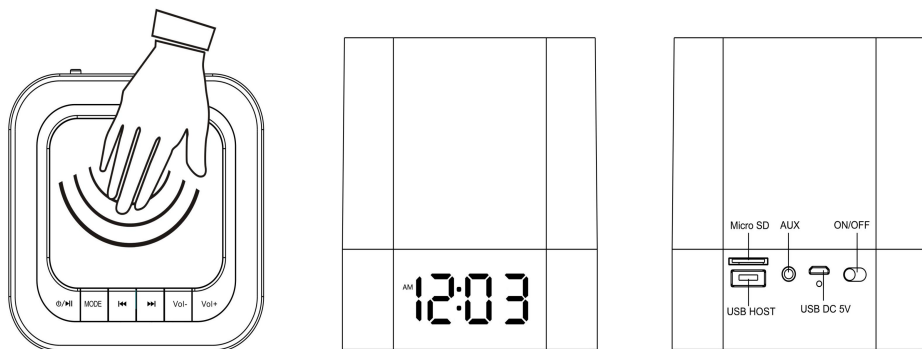

Key definition



1. **Play/Pause** Long press to turn off speaker. Short press to turn on speaker. Short press to play or pause music when it's in music playing mode. Short press to answer or end a call when it's in hands-free mode
2. **MODE** Short press to choose mode. Short press to set time in clock or alarm mode
3. **Previous** Short press to previous music. Long press to fast backward. Short press to choose 12 hour/24 hour in clock or alarm mode
4. **Next** Short press to next music. Long press to fast forward. Short press to choose 12hour/24hour in clock or alarm mode



5. **V-** Short press to decrease volume
6. **V+** Short press to increase volume
7. **Horn net** Touch it to know time. Clap it when alarm ring, speaker turn to sleep mode. Clap twice when alarm ring, alarm turn off. Press to adjust light brightness.
8. **Switch** Press ON to turn on; Press OFF to turn off

Device power supply

1. (DC 5V) power supply
2. Build-in lithium battery

Lithium Rechargeable Battery Note

1. Charging - Insert the USB cable then the red LED indicator will light up which indicates that

the device is charging. Lithium Rechargeable Battery is full after charging about 8-10 hours

2. To prevent Lithium Rechargeable Battery from getting damage or electric leakage, please charge Lithium Rechargeable Battery within two or three months.

Operation:

Turn on/off When switch the power to ON, the display will show "HI"

Touch horn net, it turns to night-light mode, four levels can be choose: no light / low brightness/middle brightness/high brightness

Function Sequence : Time-> Calendar-> Alarm-> Bluetooth->Music Player(MP3) -> Line in->Sleep-> Time

The default mode is Time, when you turn ON the device.



It turns to Time when turn on speaker.

Time Mode

Press MODE to enter Time mode. Press and hold MODE to enter the setting time mode, then hold MODE key until it blink, press "Previous" or "Next" to adjust the minute. Press "MODE" key again to confirm the setting.



Then press "Previous" or "Next" to adjust date/month/year in the same way. It is success to set time when : blink in the middle.



Alarm Mode

When Alarm mode, long press MODE key to enter the setting alarm mode. You can start to set the time based on your local time, once you see a bell photo shines on the display.



Short press MODE key to enter Alarm on/off setting, OFF means turn on alarm, ON means

turn off alarm. Then, short press MODE key to confirm the alarm setting. The default alarm sound is bird voice. You can set other music as alarm sound from Micro SD card and USB disk(Attention: 1. Build a file in your TF card or U-disk, name this file as ALARM , put one song in this file to set it as alarm sound 2. Insert TF card or U-disk in speaker, then set alarm sound)

Bluetooth Mode

1. Press MODE to select the other mode, when there is USB or TF card inserted, the mode will automatically turn to USB or TF card mode. Press Mode key to select to other mode, when the sequence return to Bluetooth mode again, the Bluetooth function will automatically open again.

2. When in the Bluetooth mode, LED Display is showed BLUE and that means the Bluetooth deice is ready to be searched and paired

BLUE

3. Activate Bluetooth connectivity on Mobile phone set it to search for Bluetooth device “DY28”. You will hear a sound when it succeed. (Just in case if your Bluetooth version use a higher version, it might ask for a pass code, then you just enter “0000”)

Multimedia speaker

When playing music.

Press ◀ key to select previous music .Press ▶ key to select next music.

Press ⏸ key to play / pause the Music. Press V+ key to increase the volume. Press V- key to decrease the volume. The User use Mobile phone to control the multimedia speaker

4.Handset and Hands-free MODE

Press 📞 to answer or end your calling. When return Bluetooth mode, Bluetooth device and Mobile phone will paired automatically

MP3 Mode

Insert USB-disk or Micro SD card to speaker, it turns to MP3 mode and play music directly. Press button to select previous or next song and adjust volume.

NO d SCH 00:01 00:01
SD USB

<AUX>LINE-IN

1. Press MODE key to select Audio Input (Line / AUX) Mode. LINE-IN cable is inserted in the AUX socket to connect external player device or computer audio out.

LINE

2. Press V+ key to increase the volume. Press V- key to decrease the volume

Sleep Mode (turn off automatically setting)

Short press MODE to enter sleep mode. Short press ⏸ to set the time(turn off/ 15 /30/60/120miutes, this setting works for once. It need to be set again after you turn on device next time.

SOFF

5 15

FAQ:

No power	Check Lithium Rechargeable Battery which has power or not Check DC5V Plug which is plugged properly
No sound or Sound distortion	Check the level of volume which is not on zero status Check music file which is damaged or not .The damaged music file produce sound distortion and cannot played .Please keep the good music files. Check Lithium Rechargeable Battery which is not enough power
Device hang up	Switch OFF the power then Switch ON the power again or After Charging, Switch ON the power once again

Specification

DISPLAY	LED	
Built in Lithium Rechargeable Battery	Play time :Max 6~ 8 Hours *According to the level of Volume	
LINE-IN Audio in (AUX) MP3/WMA/APE/F LAC/WAV	Max. input	(L) 300mV+ (R) 300mV
	Output power	5W
	MP3 Bit Rate	8K bps – 320K bps
	Signal noise Ratio(SNR)	85dB
	Signal Distortion	<0.55%
Music Format	MP3	
Operation temperature	-5 to 40 Celsius Degree	

* Product appearance, function and specification might change without prior notice.