

WOODEN CLOCK INSTRUCTION

1:Features :

- ◆Display mode: DP-2: Time/Temperature
- DP-1: Time/Temperature and Year/Month/Date automatically take turns display
- ◆Calendar: 2000/1/1-2099/12/31
- ◆12/24 hour format selectable: (initial mode:24-hour;january 1 2014;12:00 clock)
- ◆Every time can set up three groups of alarm, Each alarm 1 minute Sound are: bi bi bi ...
- ◆18:00-07:00 half luminance; and three luminance to set (L1—L2—L3)
 - ◆DC5V/500MA power supply by USB; (or 3*AAA or 4*AAA; Sound control function is recommended ON, when batteries used);built-in battery keeping Time display program running inside but invisible outside
- ◆Sound control mode (Power-saving mode)
- ◆Work day set: Alarm by Monday to Friday, Saturday and Sunday is closed.

2: Packing list :

please kindly check all the details below when open the packing:

- ◆digital wooden clock 1pcs
- ◆user's manual 1pcs
- ◆USB charging cable 1pcs

3.Display and keys:

- 1). Display mode select: DP-1/DP-2
initial mode: DP2; press 'SET' to transform DP1←→DP2)
 - 2). Sound control mode select (Power-saving mode on AAA battery):
Press 'DOWN', "on: SD"←→"—:SD"; "ON:SD" means sound control works; "--:SD" means sound control closed
 - 3).press "up"; °C←→°F format Conversion
 - 4). Press button "SET"for 3seconds to enter into setting mode,
You may set :YEAR→MONTH→DATE→12H/24H→HOUR→MINUTE→ALA1
(ALARM)→ALA2→ALA3→--E(work day)
When YEAR symbol flashing, adjust by"UP"and"DOWN";
 - 5). 12 hour format display; "PM" light is open
 - 6). Display luminance adjustment
Press and hold the 'UP' key for 3 seconds to enter the setting item. Display "L3".Press DOWN key luminance decreases Display "L2",Press UP luminance enhancement, four levels of L3-0. After setting holding down the 'UP' key for 3 seconds exit setup
 - 7)Button"RESET"
- ◆Any mistake or badness caused by improper operation could By renewed by button"RESET"

4. Precautions :

- ◆Please use the clock in dry area, due to all wooden housing, as it can not last long in wet, tremble, high temperature or temperature keeping changing area.
 - ◆Keep dropping down from floors, in case there is any broken.
 - ◆Please use high quality AA alkaline batteries. If the brightness dim or blinking, it means low battery, please change in time, in case battery solution leaking.
- When no power, please check if there are batteries inside to keep it working properly.
- ◆5V/500MA-1000MA AC adapter is applicable to the clock, please choose the compatible one.
- 尺寸:210*95MM