


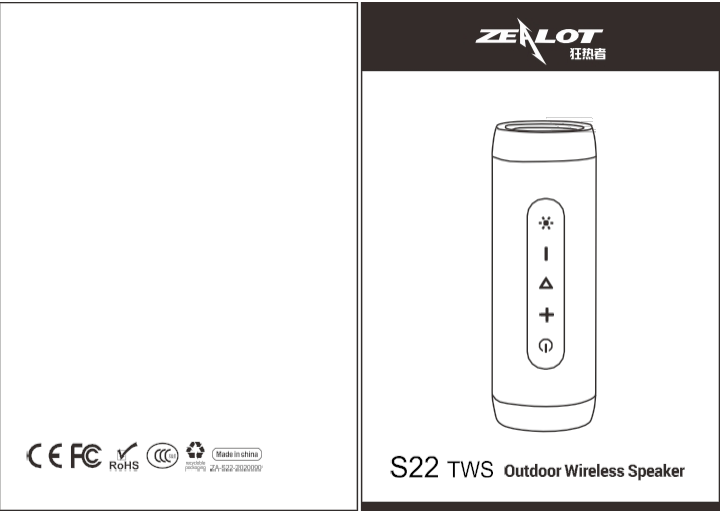

材质：60G书写纸 印刷：单色双面印刷
装订成册 成品尺寸：63.5x90mm

一、部件名称

1. 开关键
2. 单击：播放/暂停；长按：模式切换
3. 单击：音量+/长按：上一首
4. 单击：音量-/长按：下一首
5. LED灯
6. 充电口
7. TF卡槽
8. 指示灯
9. AUX接口

二、开机/关机

长按3秒

三、产品功能介绍

产品模式切换顺序：
蓝牙 → 插TF → 音频线 (AUX)
(其中TF卡、AUX模式
为默认优先)

蓝牙模式

蓝牙连接：
长按“”，听到提示音“（BLEETOOTH MODE）”。
搜索蓝牙设备“ZEALOT-S22”点击连接，即可播放手机中的音乐。

如何重新连接？1. 您的音箱会尝试重新连接失去的连接。
2. 如果音箱未尝试重新连接，请长按开关键至重新自动或通过手机的蓝牙设备菜单以手动方式重新连接。

来电时：
单击“”键为接听电话。
长按“”键为拒接电话功能。
双击“”键为回拨最后一个拨出的电话。

播放音乐时：
单击“”、“”调节音量大小；
长按“”、“”键切换上下曲；
单击“”键暂停/播放。

TF模式

插入TF卡，听到提示音“MUSIC MODE”播放TF卡内歌曲。

AUX (音频) 模式

插入音频线听到提示音“LINEIN MODE”切换至AUX模式。

移动电源

输出：当手机需要充电时，可插入机身USB接口充电。

照明

需要照明时：
第一次单击“”为开启强光照明；
第二次单击“”为普通照明；
第三次单击“”为户外求救 (SOS)模式；
第四次单击“”为关闭手电筒。

四、产品规格

输入电压：5V/1A	扬声器：4Ω
传输距离：10m	频率响应：20Hz-20KHz
信噪比：≥90dB	失真度：1%
工作电压：3.7V	尺寸：157*53*53mm
重量：260g	

五、充电

1. 如果电池电量不足时，会出低电量提示语音“LOW BATTERY PLEASE CHARGE”，提示给产品充电。
2. 充电时红色指示灯闪烁，充满电时红灯长亮。
3. 不同的适配器、电脑USB的充电接口，充电时间会因此不同。

充电指示灯

六、注意事项

—请勿将本产品投入火中。
—请勿改装、修理或拆解设备。
—请勿使其直接接触易燃物。
—请勿使设备远离潮湿和充满灰尘的环境。
—充电前请先检查充电器的型号是否适用本产品。
—在充电过程不能使用蓝牙功能。
—本产品在使用过程中会自动流失电量，建议每个月给音箱充电一次。

TWS 互联

在两台机器处于开机状态，且距离在10m以内，双击任意一台机器的开关键（），即可实现TWS连接，首次连接成功，后续将会自动连接。

保持在您的手机10米范围内使用！

任何未经明确同意的更改或改装均可能导致用户丧失对设备的操作权限。替换电池不当可能会有爆炸危险。

1.Product Overview

1.ON/OFF
2.Click: Volume+ / Press and hold:Next track
3.Click: Play/Pause, Press and : Mode switching
4.Click: Volume- / hold : Pre track
5.LED button
6.Charging port
7.Charging port
8.TF card slot
9.Indicator
10.USB output charging
11.AUX

2.ON/OFF

Press and hold for 3 seconds.

3.Product function introduction

Mode switching sequence:
Bluetooth→Insert TF Card→
Audio Cable(AUX)
(When TF Card and AUX
cable inserted together,
the last inserted content
will be default to the
playback mode.)

Bluetooth mode

Bluetooth connection:
Press and hold . After hearing the warning tone "BLEETOOTH MODE", search for the bluetooth device "ZEALOT-S22" and click on the connection, then you can play music from your phone.

How to reconnect?
1. Your speakers will attempt to reconnect to the last connection.
2. If this fails, please restart or manually reconnect via the phone's bluetooth device menu.

When incoming call:
Click Answer incoming call
Press & hold Reject the call
Double click Calling the last dialed number

Music playing controls:
Button Click Press & hold
 Volume +/- Play/pause
 Pre/ next track

TF Card Mode

Insert TF card, it will play music from TF card after hearing the warning tone "MUSIC MODE".

Aux Mode

Connect with audio cable, it will switch to aux mode after hearing the warning tone "LINEIN MODE".

Power Bank

Using a charging cable to connect USB OUTPUT port and your phone or other small devices, then S22 will automatically recharge it as a power bank.

LED Flashlight

1st click	High Lumens
2nd click	General Lumens
3rd click	Flashing
4th click	Light OFF

4.Product Specifications

Input voltage: 5V/1A	Speaker: 4Ω
Transmission distance: 10m	SNR: ≥90dB
Frequency response: 20Hz-20KHz	Distortion: 1%
Operating Voltage: 3.7V	Weight: 260g
Dimension: 157*53*53mm	

5.Charging

1. It has the warning tone "LOW BATTERY PLEASE CHARGE" to remind user of recharge.
2. Red indicator will flashing while charging and will be steady on after fully charged.
3. Charging time is vary by different adapter or charging cable.

Charging indicator light

6.Notice

—Do not throw this product into fire or water.
—Do not modify, repair or disassemble the speaker.
—Do not make it contact with combustible materials directly
—Please keep the device away from damp and dusty environments.
—Before charging please check whether the charger model is suitable for this product.
—Do not use the Bluetooth function while charging.
—The device will automatically lose power when it's in standby mode, it's recommended to charge the speaker once a month.

TWS Connection

1. Turn on 2 speakers and keep them in 10m working range.
2. Double click button on either of them for TWS connection.
3. Once they achieved first TWS connection successfully, S22 will automatically achieve TWS while both 2 pieces are turning on.

Please keep your speaker and mobile phone within 10m working range.

Any changes or modifications without expressly agreed to do so may void the user's authorization to operate the equipment. Improper battery replacement may expose explosion hazard.

1. Product overview

1. Skip button
2. Single click: Next track / Long press: Volume +
3. Single click: Play/Pause, Long press: Change mode
4. Single click: Previous track / Long press: Volume -
5. Torch switch
6. Torch
7. Charging port
8. TF card slot
9. Indicator light
10. USB port
11. AUX port

2. Power On/Off

Press and hold for 3 seconds

3. Introduction to the product's function

Mode switching sequence:
Bluetooth → Insert TF card →
Audio cable (AUX)
(When the TF card and the
AUX cable are inserted
together, the last content
inserted will default to
playback mode)

Bluetooth mode

Bluetooth connection:
Press and hold . Once you hear the "BLUETOOTH MODE" warning tone, search for the Bluetooth device "ZEALOT-S22" and tap to connect. You can then play music from your phone.

How do I reconnect?
1. Your speakers will attempt to reconnect to the last connection.
2. If this fails, please restart or manually reconnect via the Bluetooth device menu on your phone.

When receiving a call:
A single click on the button answers the phone; press and hold the button to reject the call; double-click the button to redial the last outgoing call

When playing music:
A single click on the button skips to the previous or next track;
Press and hold the button to adjust the volume;
A single click of the button plays/pauses;

TF card mode

Insert the TF card; music will play from the TF card after you hear the "MUSIC MODE" warning tone.

Auxiliary mode

Connect it using an audio cable; it will switch to auxiliary mode after you hear the "LINEIN MODE" warning tone.

Power bank

Connect it using an audio cable; it will switch to auxiliary mode after you hear the "LINEIN MODE" warning tone.

Lighting

When lighting is required:
The first click turns on a bright light; The second click activates SOS mode; The third click activates SOS mode; The fourth click turns the torch off

4. Product specifications

Input voltage: 5 V / 1 A Speaker: 4 Ω
Transmission range: 10 m Frequency response: 20 Hz-20 KHz SNR: ≥90 dB
Distortion: 1%
Operating voltage: 3.7 V
Dimensions: 157 * 53 * 53 mm
Weight: 260g

5. Charging

1. When the remaining battery charge is low, a warning tone "LOW BATTERY PLEASE CHARGE" to remind users to charge the device.
2. The red light will be on during charging; the red light will be off when fully charged.
3. Charging time may vary depending on the adapter and the computer's USB charging port.

charging indicator light

6. Precautions

- Do not throw this product into fire or water
- Do not modify, repair or dismantle the speaker
- Do not place it in direct contact with flammable materials
- Keep the device away from damp and dusty environments
- Before charging, check that the charger model is suitable for this product
- Do not use the Bluetooth function while charging
- The device will automatically switches off in standby mode, we recommend charging the speaker once a month.

TWS Connection:

1. Switch on 2 speakers and ensure they are within 10 m
2. Press the button on either speaker twice and pair them
3. They will pair automatically after the first use.

Keep your speaker and mobile phone within a 10-metre operating range.

Any changes or modifications made without express authorization may invalidate the user's right to operate the equipment. Incorrect replacement of the battery may pose a risk of explosion.

1. Product Overview

1. Power button
2. Click: Volume+ / Long press: Next track
3. Click: Pause / Long press: Mode switch
4. Click: Volume- / Long press: Previous track
5. LED light
6. Charging
7. Charging port
8. TF card slot
9. Indicator
10. USB output
11. AUX

2. ON / OFF

Press and hold for 3 seconds

3. Function

Mode:
Bluetooth → Insert TF card →
Audio cable (AUX)
(When TF card and AUX cable are
both connected
will be inserted, the most recent
inserted content
will be set to
Playback mode is reset.)

Bluetooth mode

Bluetooth connection:
Press and hold . After hearing the "BLUETOOTH MODE" warning tone, search for the Bluetooth device "ZEALOT-S22" and tap to connect. You can then play music from your phone.

How can I reconnect?
1. Your speakers will attempt to reconnect to the last connection.
2. If this fails, please restart the phone's Bluetooth settings menu or manually reconnect the connection manually.

When a call comes in:
Answer call button

Click Answer an incoming call
Press and hold Reject call
Double-click All from the last dialed number

Music control:
Button Click Hold down
 Vol. +/- Previous / Next track
 Play/Pause

TF card mode

Insert TF card. After the "MUSIC MODE" warning tone, music will play from the TF card.

Aux mode

When you connect the audio cable, it switches to Aux mode after you hear the "LINEIN MODE".

Power Bank

If you connect the USB output port to your phone or other small devices, the S22 will automatically charge them as a power bank.

LED torch

Click once	Bright light
Second click	Dim light
Third click	Flashing (SOS)
Fourth click	Light off

4. Specifications

Input voltage: 5V/1A Speaker: 4Ω
Transmission distance: 10m Frequency response: 20Hz-20KHz SNR: ≥90dB
Distortion: 1% Operating voltage: 3.7V
Dimensions: 157 * 53 * 53 mm
Weight: 260g

5. Charging

1. It emits the warning tone "LOW BATTERY PLEASE CHARGE" to remind the user to charge it.
2. The red light flashes during charging. When fully charged, the red light remains on.
3. Charging time varies depending on the adapter or charging cable used.

Charging indicator light

6. Please note

- Do not throw this product into fire or water
- Do not modify, repair or dismantle the speaker
- Do not place it in direct contact with flammable materials

TWS connection:

1. Switch on 2 speakers and keep them within a 10-metre range.
2. Double-click either of the two buttons to establish a TWS connection.
3. Once the first TWS connection has been successfully established, the S22 will automatically connect to TWS whenever both units are switched on.

Please keep your speaker and mobile phone within a 10-metre radius

Changes or modifications not expressly agreed upon may invalidate the user's authorization to operate the device. Improper battery replacement may pose a risk of explosion.

1. Product overview

1. ON / OFF
2. Click: Volume+ / Long press: Next track
3. Click: Play / Pause, Long press: Change mode
4. Click: Volume- / Long press: Previous track
5. LED button
6. LED light
7. Charging port
8. TF card slot
9. Indicator
10. Charging via the USB port
11. AUX

2. ON / OFF

Press and hold for 3 seconds

3. Changing mode

Mode change sequence: Bluetooth → Insert TF card → Audio cable (AUX)
(When the TF card and the AUX cable are inserted together, the last content inserted will be played by default playback mode.)

Bluetooth mode

Bluetooth connection:
Press and hold the button until you hear the BLUETOOTH MODE warning tone, then search for the Bluetooth device "ZEALOT-S22" and tap the connection; you can then listen to music from your phone.

How do I reconnect?
1. The speaker will attempt to reconnect to the last connection.
2. If the speaker does not attempt to reconnect, press the button to reset or reconnect manually via the Bluetooth device menu on your phone.

During an incoming call!

A single click on the button answers the phone; press and hold the button to reject the call; Double-click the button to redial the last outgoing call

When playing music

A single click on the button skips to the previous or next track; Press and hold the button to adjust the volume; A single click of the button plays or pauses.

TF card mode

Insert the TF card; it will play music from the TF card after you hear the "MUSIC MODE" warning tone.

Aux mode

Connect using an audio cable, and it will switch to aux mode after hearing the "LINEIN MODE" warning tone

Power bank

By using a charging cable to connect the USB OUTPUT port to your phone or other small devices, the S22 will automatically charge them as a power bank.

LED torch

LED lighting controls:
First click High Lumens
Second click General Lumens
Third click Flashing
Fourth click Off

4. Product Specifications

Input voltage: 5V / 1A Speaker: 4Ω
Transmission range: 10m Frequency response: 20Hz-20KHz SNR: ≥90dB
Distortion: 1% Operating voltage: 3.7V
Dimensions: 157 * 53 * 53mm
Weight: 260g

5. Charging

1. It emits a warning tone saying "LOW BATTERY, PLEASE CHARGE" to remind the user to recharge it.
2. The red indicator will flash during charging and remain lit once fully charged.
3. Charging time varies depending on the adapter or charging cable used.

Charging indicator light

6.Note

- Do not throw this product into fire or water
- Do not modify, repair or dismantle the speaker
- Do not place it in direct contact with flammable materials
- Please keep the device away from damp and dusty environments
- Before charging, please check that the charger model is compatible with this product
- Do not use the Bluetooth function whilst charging
- The device automatically loses power when in standby mode. It is recommended that you charge the speaker once a month.

TWS connection

1. Switch on 2 speakers and keep them within a 10 m operating range.
2. Double-click the button on one of them to initiate the TWS connection.
3. Once the initial TWS connection has been successfully established, the S22 will automatically connect to TWS whenever both units are switched on.

Please keep your speaker and mobile phone within a 10-metre radius

Any changes or modifications without the express consent of the user may invalidate the user's right to operate the equipment. This may invalidate the user's right to operate the equipment.

1. Product Overview

1. ON / OFF
2. Click: Volume+ / Long press: Next track
3. Click: Play / Pause, Long press: Change mode
4. Click: Volume- / Long press: Previous track
5. LED button
6. LED light
7. Charging port
8. TF card slot
9. Indicator
10. USB charging port
11. AUX

2. ON / OFF

Press and hold for 3 seconds

3. Mode switch

Mode switching sequence:
Bluetooth → Insert TF card →
Audio cable (AUX)
(When the TF card and AUX
cable are inserted together,
the last content inserted will
be set by default
default to
playback.)

Bluetooth mode

Bluetooth connection:
Press and hold . Once you hear the "BLUETOOTH MODE" alert tone, search for the Bluetooth device "ZEALOT-S22" and click to connect, then you can play music from your phone.

How do I reconnect?
1. The speakers will attempt to reconnect to the last connection.
2. If this fails, please restart or reconnect manually via the Bluetooth device menu on your phone.

Call answer button:

Click Answer the incoming call
Hold down Reject the call
Double-click All recently dialed numbers

Music playback controls:
Button Click Press and hold
 Volume +/- Previous/next track
 Play/pause

TF card mode

Insert the TF card; it will play music from the TF card after you hear the "MUSIC MODE" alert tone.

Aux mode

Connect using an audio cable; it will switch to Aux mode after you hear the "LINE IN MODE" alert tone.

Power Bank

Use a charging cable to connect the USB OUTPUT port to your phone or other small devices, the S22 will automatically charge them as a power bank.

LED torch

LED light controls:
First click High brightness
Second click General lighting
Third click Flashing
Fourth click Lights off

4. Product specifications

Input voltage: 5 V / 1 A Speaker: 4 Ω
Transmission range: 10m Frequency response: 20Hz-20KHz SNR: ≥90dB
Distortion: 1% Operating voltage: 3.7 V
Dimensions: 157 * 53 * 53 mm
Weight: 260 g

5.Charging

1. It emits an alert tone saying "LOW BATTERY, PLEASE CHARGE" to remind the user to recharge it.
2. The red indicator will flash whilst charging and will remain lit once fully charged.
3. Charging time varies depending on the adapter or charging cable.

Charging indicator light

6.Warning

- Do not throw this product into fire or water
- Do not modify, repair or dismantle the speaker
- Do not place it in direct contact with flammable materials
- Please keep the device away from damp and dusty environments
- Before charging, check that the charger model is suitable for this product
- Do not use the Bluetooth function whilst charging
- The device automatically switches off when in standby; we recommend charging the speaker once a month.

TWS Connection

1. Turn on two speakers and keep them within a 10-metre range.
2. Double-click the button on either of them to establish a TWS connection.
3. Once the initial TWS connection has been successfully established, the S22 will automatically connect via TWS whenever both devices are switched on.

Keep the speaker and mobile phone within a 10-metre range

Any changes or modifications not expressly agreed upon may invalidate the user's authorisation to use the equipment. Improper replacement of the battery may pose a risk of