 


Foldable Smartphone Gimbal

Quick Start

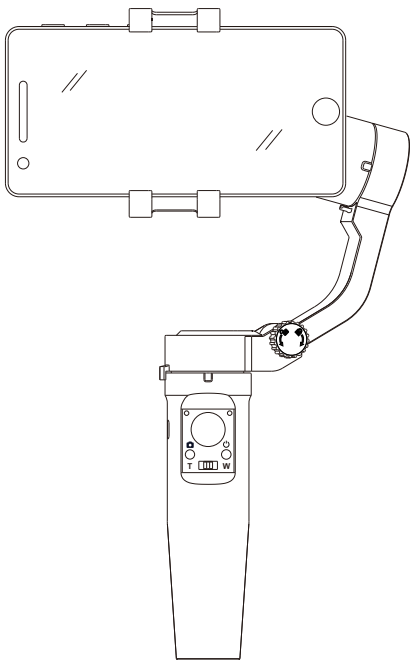

Disclaimer and Warning

Congratulations on purchasing this product. The information in this document affects your safety and your legal rights and responsibilities. Read this entire document carefully to ensure proper configuration before use. Failure to read and follow instructions and warnings in this document may result in serious injury to yourself or others, damage to this product, or damage to other objects in the vicinity.

By using this product, you hereby signify that you have read this disclaimer and warning carefully and that you understand and agree to abide by the terms and conditions herein. You agree that you are solely responsible for your own conduct while using this product, and for any consequences thereof. You agree to use this product only for purposes that are proper and in accordance with all applicable laws, rules, and regulations, and all terms, precautions, practices, policies and guidelines we have made and may make available.

Glossary

WARNING: Failure to properly follow procedures may result in property damage, collateral damage, and serious or superficial injury.

CAUTION: Failure to properly follow procedures may result in property damage and serious injury.

NOTICE: Failure to properly follow procedures may result in property damage, a small possibility of injury, or no possibility of injury.

Before You Begin

It is essential to read and follow all of the instructions and warnings in the user manual, prior to assembly, setup or use, in order to operate the product correctly and avoid damage or serious injury. If you have any questions or problems during the installation, maintenance or use of this product, please contact the authorized dealer.

Safety Guidelines

Read the user manual to become familiar with the features of this product before operating. Failure to operate the product correctly can result in damage to the product, personal property, and cause serious injury. Failure to operate this product in a safe and responsible manner could result in injury or damage to the product or other property. This product is not intended for use by children without direct adult supervision.

Warning

1. DO NOT allow the product to come into contact with any kind of liquid. DO NOT leave the product out in the rain or near a source of moisture. DO NOT drop the product into water. If the inside of the battery comes into contact with water, chemical decomposition may occur, potentially resulting in the battery catching on fire, and may even lead to an explosion.

2. Put out any product fire using water, sand, fire blanket, or a dry powder fire extinguisher.

3. The product should be used in temperatures from 0°C to 40°C. Use of the product in environments above 40°C can lead to a fire or explosion. Use of the product below 0°C can lead to permanent damage.
4. Never disassemble or pierce the product in any way or the battery may leak, catch fire, or explode.
5. DO NOT drop or strike the product. DO NOT place heavy objects on the product.
6. DO NOT heat the product. DO NOT put the product in a microwave oven or in a pressurized container.
7. DO NOT leave the product near heat sources such as a furnace or heater. DO NOT leave the product inside of a vehicle on hot days. The ideal storage temperature is 22°C to °C.
8. DO NOT store the product fully discharged for an extended period. Otherwise, it will over discharge, which will lead to permanent damage.

Caution

Intricate components inside the stabilizer may be damaged upon impact and cause the gimbal to be damaged. Make sure there is nothing obstructing the gimbal when it is powering on. It is not water resistant, so DO NOT use any liquid cleansers. Only use a soft dry cloth to clean it. Keep it away from sand and dust to safeguard the sensors in the motors.


Notice

1. Disconnect the product when fully charged.
2. Discharge the battery to 40%-65% if it will not be used for 10 days or more. This can greatly extend the battery life.
3. Discharge and charge the battery completely once every three months to keep it in good condition.
4. Refer to the Specifications and Manual for more information about mobile device compatibility. An incompatible mobile device may not be balanced and may affect the stabilizer performance.
5. Hold the stabilizer still when it is powering up.
6. Fold the stabilizer correctly according to the manual before storage.

Important Notice


1. Charge 2 hours to the stabilizer via USB adapter before use.
2. Refer The manual to mounting, balancing the smart phone.
3. Press and hold 3 seconds to power on the stabilizer successfully.
4. Open smart phone's Bluetooth setting and search 'Gimbal Go' to connect, then open system camera and press the Shutter Button to take photo/videos; or use the 'Gimbal Go' APP to take photo/videos with the face/object tracking function.
5. overload or nothing mounted will cause stabilizer turn to standby mode, mount the proper smart phone, press the button once, the stabilizer will enter normal mode.
6. Special Notices: for Samsung's smart phone shooting mode Settings: Open the system camera, click on the Gear Settings Icon, set 'Press the Volume Key' to Photo/Camera, then press the Shutter Button of the stabilizer to take photo/videos.

Overview

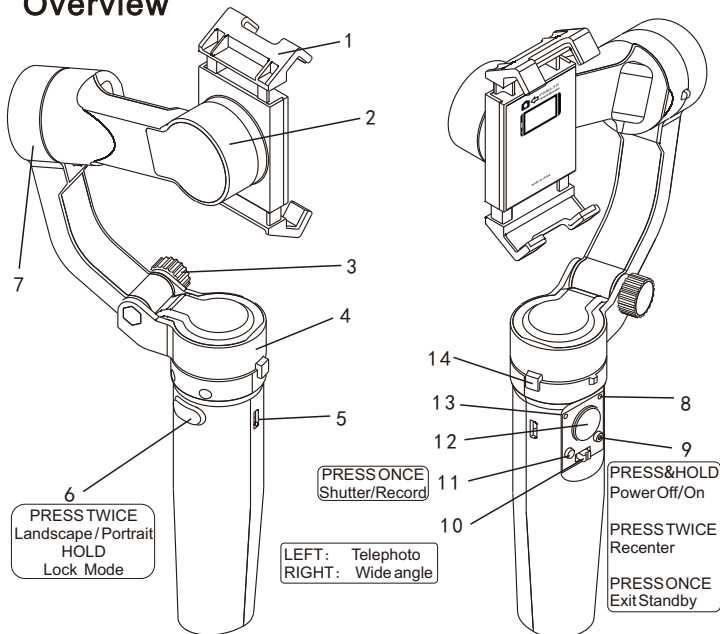


1. Mobile Phone Holder
2. Tilt Motor
3. Folding Knob
4. Pan Motor
5. Micro USB Charge Port
6. Trigger for mode change
7. Roll Motor
8. System Status Indicator
9. Power/Function Button
10. Slider for telephoto and wide angle
11. Shutter/Record Button
12. Joystick for Pan and Tilt
13. Charging Indicator
14. Axis Lock Clamp

Fold and Unfold

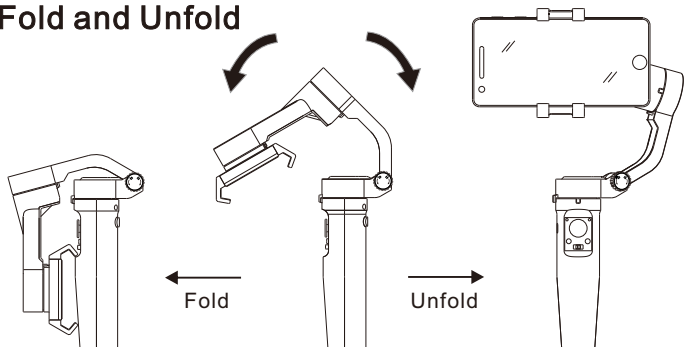


The gimbal is designed to be folded for easier storage and transportation. You can fold it only when it is powered off. Loosen the folding knob before fold or unfold and tighten the knob after fold or unfold. Unlock the three axis clamp before smart phone mounting and powering on.

Charging

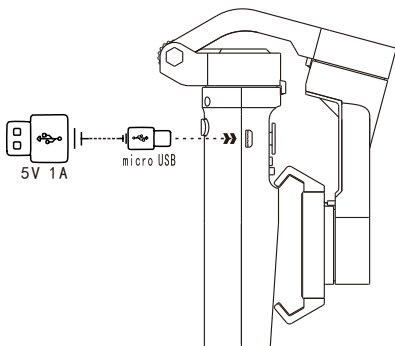


Connect a USB adapter (5V 1A) to the charging port(Micro USB) using the power cable (included). The indicator light is red when charging, and green when fully charged. Ensure use a safe USB adapter and charge in a safe environment.

Mounting and Balancing

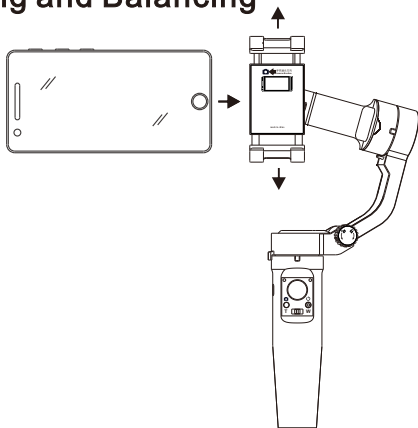


Make sure the phone holder is vertical and product is powered off before mounting a mobile phone. You may need to remove the phone case before installation.

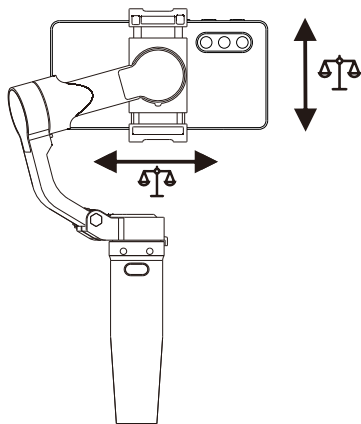

Hold the gimbal and move the mobile phone left or right (up or down) until the mobile phone remains balanced when released. The gimbal will enter standby mode when no mobile phone is mounted .

User interaction

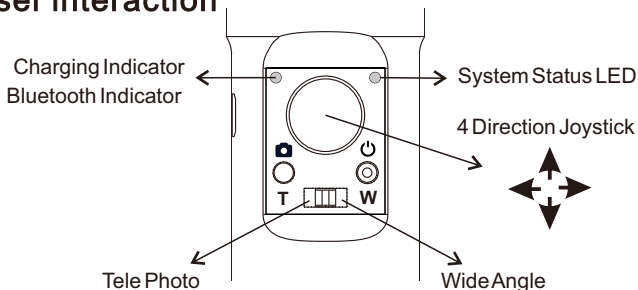

Charging & Bluetooth LED Indicator

- 1.Solid Red: Charging
- 2.Solid Green: Charge Complete
- 3.Blinks Red & Green: Fault Occur
- 4.Pulse Blue: Bluetooth Disconnected
- 5.Solid Blue: Bluetooth Connected

System Status LED Indicator

- 1.Solid Green: Normal Status
- 2.Pulse Green: Switching Mode
- 3.Pulse Red: Battery Low
- 4.Solid Red: Battery Too Low
- 5.Blinks Red & Green: Initialization

 
Power ON: Press and hold Power/Function Button for 3 second until Status LED change to Pulse Green, release the button.

Recenter: Press twice Power/Function Button quickly, the gimbal will recenter to Landscape or Portrait initial status.

Landscape or Portrait Translation: Press twice the Trigger Button to switch between landscape and portrait mode .

Power OFF: Press and hold Power/Function Button for 3 second until Status LED off , release the button.

APP: Please search the 'Gimbal Go'APP in Android Google Play or iOS APP Store, and install it .

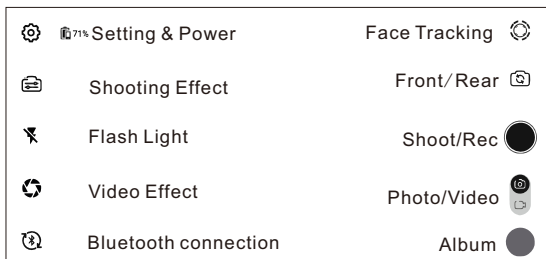

Specifications

Dimensions	285X125X103mm(Fold) 157X130X46mm(Unfold)
Weight	320g
Consumption	1. 1W(Ideal Conditions & Balanced)
Pan Range	-70° to 260°
Roll Range	-80° to 260°
Tilt Range	-75° to 285°
Max Speed	150° /s
Compatible Phone	140g to 240g
Battery Type	Width:55-86mm, Thickness ≤ 12mm
Charging Port	18650 Li-ion Battery, 2200mAh
Charging Temp.	Micro USB 5V 1A
Operating Temp.	5°C to 45°C
Charging Time	0°C to 45°C
Operating Time	about 2 hours
	about 6 to 7 hours(180g phone balanced)

Packing List

NO.	Description	Quantity
1	Foldable Smart Phone Gimbal	1
2	USB Charging Cable	1
3	Small tripod	1
4	Quick Start Guide	1

Warranty Support

Since the purchase of this product, the user enjoys a warranty service for 12 months, please consult the dealer for details.

The warranty does not cover the following situations:

1. Unauthorized maintenance, misuse, collision, negligence, abuse, liquid penetration, accident, modification.
2. Incorrect use of the product, or tearing, altering labels etc.
3. The warranty period has been exceeded.
4. Damage caused by force majeure such as fire, flood, lightning, etc.