

X7

无线充蓝牙电子时钟音响

温馨提示：

使用本产品前请您仔细阅读并严格遵循使用说明和警告事项，
并妥善保管，以备日后查阅

X7

X7 Bluetooth Audio with Alarm
Clock and in Wireless Charging

TIPS/IMPORTANT:

All safety and operation instructions should be read thoroughly before proceeding and please keep the handbook for future reference.

一、产品特点

X7是一款带无线充的多功能的蓝牙电子闹钟音箱
具备以下功能

 
 
- 1、对外无线充电
- 2、蓝牙音箱，蓝牙通话
- 3、插卡播放
- 4、收音机功能
- 5、3.5mm音频播放
- 6、大屏幕时钟显示，12/24小时切换
- 7、双闹钟功能，可调整音量大小，音源选择，贪睡功能
- 8、LED显示亮度调节
- 9、星期显示
- 10、USB接口可以对外充电
- 11、SLEEP定时关闭功能

二、包装配置

(购买后请仔细检查包装内的产品及配件)

- | | | | |
|-------|------|------|------|
| ①主机 | 1PCS | ②音频线 | 1PCS |
| ③电源 | 1PCS | ④说明书 | 1PCS |
| ⑤纽扣电池 | 1PCS | | |

三、主机按键和显示

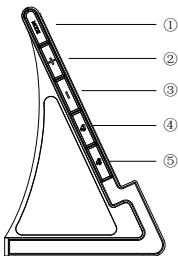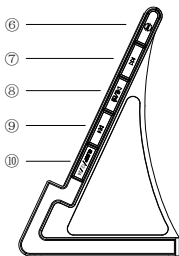

1、 A.Product Features

X7 is a multifunctional Bluetooth e-audio with alarm clock and in wireless charging.

With functions as follows



- External Wireless Charging
- Bluetooth Audio, Bluetooth Calling
- Card-inserting Playing
- Radio Function
- 3.5mm Music Player
- Clock Display on the Big Screen, 12 or 24 Hours Switching
- With Double Clocks, it has functions of the voice adjustment, the voice source and short-sleep setting
- Brightness Adjustment of LED Screen
- Week Displaying
- The USB outlet has the External Charging
- Timed Switch Function of Sleep Mode


2、 Package Settings

(You need to carefully check all products and accessories in package after purchasing.)

- | | | | |
|-----------------|------|--------------|------|
| ①Host | 1PCS | ②Audio Wire | 1PCS |
| ③Power Supply | 1PCS | ④Instruction | 1PCS |
| ⑤Button Battery | 1PCS | | |

   3、 B.Host Buttons and Functions

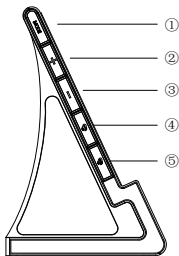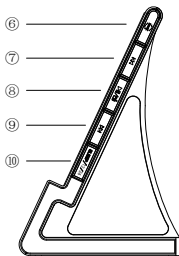

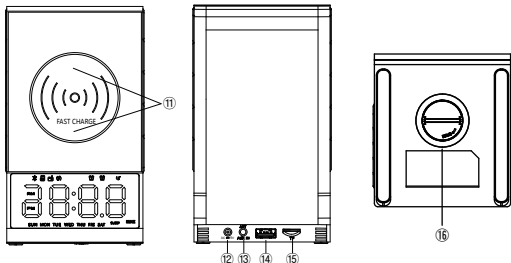


- ①开关功能与功能切换：蓝牙、TF、收音机、AUX切换
- ②音量+、调时间+
- ③音量-、调时间-
- ④闹钟1设置键、开启关闭闹钟1
- ⑤闹钟2设置键、开启关闭闹钟2
- ⑥LED显示亮度调节，时间设置进入键
- ⑦上一曲：播放上一首音乐，收音机上一个频道
- ⑧播放暂停，收音机自动搜台
- ⑨下一曲：播放下一首音乐，收音机下一个频道
- ⑩SLEEP定时开关功能，12与24小时切换
- ⑪2个无线充电发射线圈
- ⑫DC9V 电源插口
- ⑬3.5mm音频输入接口和收音机天线
- ⑭USB充电口
- ⑮TF卡座位
- ⑯纽扣电池安装位置

四、使用说明

4.1、开启关闭与切换功能

 
用机器自带的电源插入机器背面印有DC9V的插口即可开机使用（请一定要是用机器自配电源）。短按MODE开启和切换功能，长按关闭功能

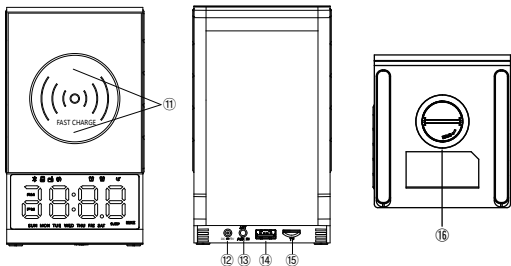

- ① Switch Function and Function Conversion: Bluetooth 、 TF、 Radio、 AUX Switch
- ② Turn up the Voice and Increase the Time
- ③ Turn down the Voice and Reduce the Time
- ④ Setting Button of Clock 1, Turn on and Turn off the Clock 1
- ⑤ Setting Button of Clock 2, Turn on and Turn off the Clock 2
- ⑥ Brightness Adjustment of LED Screen, Start Button of Time Setting
- ⑦ Last Sound: the last music will be played, or the last radio will be played
- ⑧ Pause: the music will be paused, or the radio will search automatically
- ⑨ Next Sound: the next music will be played, or the next radio will be played
- ⑩ Timed Switch Function of Sleep Mode: 12 or 24 Hours Switching
- ⑪ Two Wireless Charging Emission Rings
- ⑫ DC9V Outlet of Power Supply
- ⑬ 3.5mm Audio Outlet and Radio Antenna
- ⑭ USB Charging Outlet

4.2、无线充电功能

 把带有无线接收器的电子产品放在X7上可以对机器进行充电，手机有横放和竖放两种放置方式（如下图）

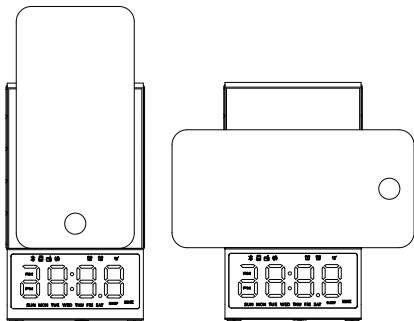

4.3、亮度显示操作及设置时间

●LED屏幕显示亮度分为4级可调节，短按 可以调节显示和关闭显示

●长按 进入时间设置，此时显示屏小时数字闪动短按+/-设置小时，完成后短按 确定并跳到分钟设置，此时显示屏分钟数字闪动，短按+/-设置分钟，完成后短按 确定并跳到星期设置，星期开始闪动短按+/-设置星期，完成后短按确定或无操作10秒自动完成（长按+/-快调，短按为慢调）

4.4、闹钟设置和使用

●开启和关闭闹钟：短按 开启闹钟并显示闹钟已设时间和音源5秒，显示屏上 常亮，短按关闭闹钟显示屏上 熄灭

●闹钟1设置：长按 ，小时闪烁，+/-调小时；短按 确认并且分钟开始闪烁，+/-调分钟；短按 音源符号开始闪烁，+/-调音源（有三种音源可以选择 为自带铃声、 为TF卡铃声、 为收音机铃声）；短按 星期闪烁，+/-调星期；短按 音量闪烁，+/-调闹钟音量，最后短按 完成并退出

⑮TF Card Placement

⑯Installation Placement of Button Battery

 
4、Instructions

4.1、 Turn on, Turn off and Switch Functions

Insert the built-in power supply into the DC9V outlet on the back of machine to turn it on(Please note you must use the built-in power supply for operating). Short press on the Mode button for turning on and switching, long press on the Mode button for turning off.

4.2、 Wireless Charging Function

When you have a electronic product with wireless receivers, you can put it on the X7 for charging. There are two ways to place the phone horizontally and vertically (as shown below).

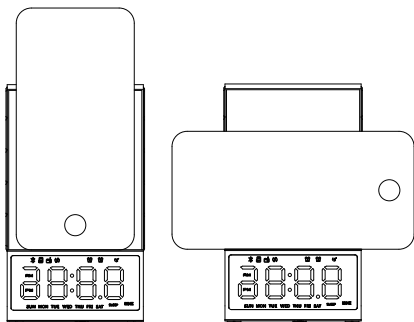

4.3、 Brightness Operating and Time Setting

●Brightness of LED Screen can be divided into 4 settings, which the short press  is the adjust display and close display.

设置或者10秒无操作自动退出（+/-长按快调，短按慢调）

●闹钟2设置：长按  小时闪烁，+/-调小时；短按  确认并且分钟开始闪烁，+/-调分钟；短按  音源符号开始闪烁，+/-调音源（有三种音源可以选择  为自带铃声、 为TF卡铃声、 为收音机铃声）；短按  音量闪烁，+/-调闹钟音量，最后短按  完成并退出设置或者10秒无操作自动退出（此闹钟为临时闹钟，只闹一次后会自动关闭，要再次使用需要重新开启）

●贪睡功能设置

在闹铃响起时，除对应的闹钟键外，其他按键都可以开启贪睡，贪睡5分钟后闹铃声再次响起

●闹铃响起后没有主动关闭闹钟的情况下，闹钟会持续响闹60分钟后停止

4.5、功能转换和使用

●短按机器MODE键可以切换功能，顺序为蓝牙 、TF播放 、收音机 、音频 、每选择一个功能屏幕上对应的图标就会亮起，也可以长按MODE关闭功能

●蓝牙模式

开启蓝牙模式，蓝牙图标闪烁，用可以连接蓝牙的设备搜索机器名称X7并连接。成功连接后蓝牙图标常亮并可以播放设备内的音频，手机连接后来电短按  可以接通电话

●TF模式

转换到TF模式， 闪烁，在背面印有TF的卡槽内插入TF卡， 常亮，可以播放TF卡内MP3格式的文件，上一曲、播放暂停、下一曲可以选择里面的文件和控制状态

●收音机模式

转换到收音机，长按  2秒进入自动搜台，系统会自动从87.5~108MHZ以0.1MHZ进步搜台，并按顺序储存搜索到的电台，完成后自动返回第一个频道播放，上一曲和下一曲来选择已储存的频道，长按上一曲和下一曲2秒可以手动搜索一个频道并开始播放（附送音频线必须插入主机背后印有ANT的音频扣作为FM收音机天线使用）

●And the long press  is the time setting. Then the Hour setting on the screen flashes, you can set the number of Hour by short pressing(+/-) and jump to the Minute setting by short pressing  as well. Next, the Minute setting on the screen flashes, you can set the number of Minute by short pressing(+/-) and jump to the Day setting of the week by short pressing  as well. After that, the Day setting of the week on the screen flashes, you can set the number of the Day of week by short pressing(+/-) and end up all settings by short pressing or without any operation within 10 seconds. (Long press(+/-) for fast adjustment, short press for slow adjustment)

4.4 、Alarm Clock Setting and Use

●Alarm Clock Switch: the alarm clock can be opened by short pressing   and the set time and song of the alarm would be displayed on the screen for 5 seconds. When the   on the screen always lights up, you can close the alarm by short pressing and the   on the screen will light off.

●Settings of Clock 1: when long pressing the  , the Hour setting flashes, you can adjust the number of Hour by pressing "+/-" . Then, you can jump to the Minute setting by short pressing the  . And the Minute setting flashes, you can adjust the number of Minute by pressing "+/-" . Next, you can jump to the Sound setting by short pressing the  . The Sound setting flashes, you can adjust the sounds by pressing "+/-" . Among that, we can select three kinds of sounds as the songs itself by pressing the  , as the TF card songs by pressing  , and as the radio songs by pressing  . When short pressing the  , the Day setting of week flashes, you can adjust the number of Day of the week by pressing

●音频模式

转换到音频模式，图标闪烁，用附送的3.5mm音频线插入机器背面印有AUX IN的插孔之后图标常亮，另一端插入播放器播放音频

●睡眠功能（SLEEP）

在机器开启功能后，短按印有SLEEP/12/24的按键可以开启睡眠功能，此时显示屏上SLEEP字符亮起并显示15字样，连续短按选择睡眠时间，依次为15、30、45、60、75、90分钟可以选择，完成后5秒机器自动跳转到正常显示，之后短按可以查看剩余睡眠时间，当设置的时间到了机器会自动关闭已开启的功能

4.6、USB充电

机器自带一个USB接口，可以对外5V充电（需要自备充电线）

4.7、电池使用

底部电池盖根据箭头方向旋转打开，放入附送电池(负极朝内)后盖上电池盖。此电池无法支持机器的正常使用，仅作为机器在断电情况下记忆时间，使来电后不需要重新调整时间。
※只支持3v cr 2032电池



" +/- " . And you can jump to the Voice setting by short pressing the  , the Voice setting flashes, you can adjust the volume of voice by pressing " +/- " . Finally, you can complete the operation by short pressing the  , or end up automatically without any operation within 10 seconds.(Long press(+/-) for fast adjustment, short press for slow adjustment.)

●Settings of Clock 2: when long pressing the  , the Hour setting flashes, you can adjust the number of Hour by pressing " +/- " . Then, you can jump to the Minute setting by short pressing the  . And the Minute setting flashes, you can adjust the number of Minute by pressing " +/- " . Next, you can jump to the Sound setting by short pressing the  . The Sound setting flashes, you can adjust the sounds by pressing " +/- " . Among that, we can select three kinds of sounds as the songs itself by pressing the  , as the TF card songs by pressing  , and as the radio songs by pressing  . When short pressing the  , the Voice setting flashes, you can adjust the volume of voice by pressing " +/- " . Finally, you can complete the operation by short pressing the  , or end up automatically without any operation within 10 seconds .(This alarm is the temporary alarm, and the alarm will be closed automatically after ringing once. Then, if you want to use the alarm again, you need to reset it.)

●Short-sleep Setting: after the alarm rings, all buttons can open the short-sleep mode except for the specific alarming button. When you are short sleeping for 5 minutes, the alarm rings again.

●When the alarm rings all the time and you don' t close it actively, the alarm will keep working for 60 minutes and shutdown after that.

产品保修卡<Warranty Card>

型号/MODEL		购买日期 Date of purchase	
购货单位 (个人) 名称 Purchase units(individual)Name			
联系电话 (Contact)		E-mail	
联系地址 (Address)			
故障原因 (Fault)			

保修条例 (Warranty regulations)

用户购机时，每台带有一本说明书及保修卡，请妥善保管以作保修证。至购机之日起，一年内本产品在正常使用下出现质量问题，持证用户享有免费维护服务。

以下不属于保修范围：

人为或不可抗拒因素造成损坏；

造成机器正常磨损；

如因人为、超过保修及不可抗拒因素造成的故障，我们将收取适当的零件成本费用，免收人工费。

4.5 、 Function Conversion and Use

●You can carry out the function conversion by short pressing the MODE, which the conversion sequence is Bluetooth  , TF Play  , Radio  , and Audio  . When operating any function, each sign of mating function will light up. And you can close the functions by long pressing the MODE.

●Bluetooth Mode: when opening the Bluetooth mode, the Bluetooth sign will flash, you can match the Bluetooth machine with X7. After successfully operating, the Bluetooth sign will light up all the time and the audio can be played. When the phone rings at this time, you can short press the /  for calling.

●TF Mode: when jumping to the TF mode, the  flashes, you can insert the card to the card groove with TF on the back. Further, when the  lights up all the time, the files in MP3 format inserted into the TF card groove can be played as well. Also, the files and statues can be operating by pressing the signs "Last" , "Pause" , and "Next" for controlling.

●Radio Mode: when jumping to the radio mode, the machine can enter into the automatic searching by long pressing the /  for 2 seconds. Then, the system will search automatically from 87.5 to 108MHz by 0.1MHz. And all radios can be saved in the radio stations in sequence. After completion, it returns to the first radio to play, and you can press "Last" and "Next" to select the saved radios. Also, you can manually search one radio and play by press "Last" and "Next" for 2 seconds. (The built-in audio wire must be insert into the audio outlet on the back of host with ANT, regarding as the antenna of radio.)

●Audio Mode:when jumping to the audio mode, the  flashes, and the  can light up all the time after inserting the one end of the built-in 3.5mm audio wire to the outlet on the back of host with AUX IN, and the other end into the player for playing.

●Sleep Mode: After the mode starts, the sleep mode can be opened by short pressing the button with "SLEEP/12/24" . At this time, the SLEEP sign on the screen lights up with displaying the number of 15, the sleep time can be set in 15, 30, 45, 60, 75, and 90 minutes freely by continuous short-pressing. After that, the machine will automatically jump to the normal display after 5 seconds. And you can see the remaining sleep time by short pressing. When the setting time is over, the started mode can be closed automatically.

4.6、 USB Charging

The machine with a USB outlet can support 5V charging, which you need to prepare for the charging wire by yourself.

4.7 、 Battery Use

The bottom battery cover can be opened up according to the arrow direction, then you can put the built-in battery into the machine in way of negative inward and close the cover. However, this battery can not support the normal use of machine, it is just as the memory time after power off, which let the machine not readjust the time when powering on.

※The machine only supports the 3V CR2032 Battery.



RoHS