 


Peach



— Peach Label Printer — — PE110 —



**EN**

Please read this user manual carefully before use.

GB

Please read the instruction manual carefully before use.

FR

Please read the instruction manual carefully before use.

IT

Please read the instruction manual carefully before use.

SE

Read the user manual carefully before use to get the most out of it.

SK

Please read the instructions for use carefully before use.

CZ

Please read the instructions for use carefully before use.

PL

Please read the user manual carefully before use.

Warning

- The paper tray must be clean. Dirt can jam the print head during printing and cause damage.
- Use alcohol to clean the paper tray and the print head.
- Do not take the printer apart or attempt to repair it yourself. Switch off the printer if it malfunctions.
- Charge the printer in a cool, well-ventilated room. Do not expose the printer to high humidity or high temperatures.
- Keep it away from water.
- If the printer emits strange odours or smoke, switch it off immediately and unplug it.
- Do not drop or shake the printer to avoid damage.
- Do not open the cover whilst it is printing.
- Do not touch the print head immediately after printing, as it will still be HOT.
- Use a soft, clean cloth to clean the outside of the printer.
- High temperatures can result in poor print quality.
- Use Peach label paper to achieve optimal results. Using other labels may result in poor print quality or damage to the printer.
- The durability of the printed labels depends on the quality of the label paper.
- Choose high-quality label paper if you want the labels to last a long time.
- Children must only use the printer under supervision. Store in a clean and dry environment.
- The printer is NOT supplied with an adapter. Use an adapter with a rating of 5V 1A.
- This printer can only be used in non-tropical environments.
- The printer may cause radio interference. Take the necessary precautions.



A Cover/Print head **2**
Lock button C Cut
button

D LED display
E Housing

Download the app

 
Android and Apple users can search for and install "Labelnize" on Google Play or the App Store. The second method is to scan the QR code.



Installing the label roll

1. Slide the lock button **2** to the other side to open cover A.
2. Insert the paper roll **2** into the paper tray. Refer to the illustration for correct positioning.
3. Unwind the paper until it protrudes slightly from the printer.
4. Close the cover A. Press the power/feed button D to calibrate the label and test the printer.


Notes: Use the label paper supplied by the printer manufacturer to achieve the best results.

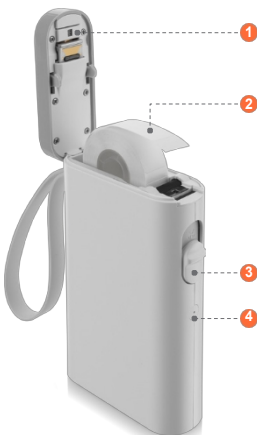

A Cover / print head **2**
Paper roll
C Cutting button
D Power / Feed button

Connect a printe

 1. Turn on Bluetooth on your smartphone
2. Press and hold the power button D to start the device.
3. Open the "Labelnize" app on your smartphone and tap "Not connected".

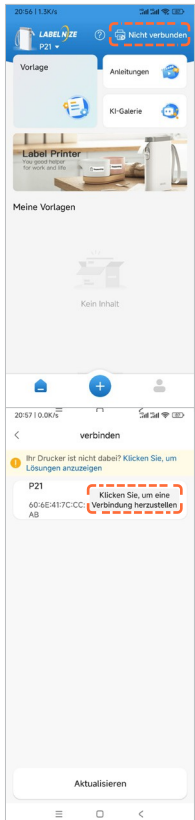

4. Search for "P21", tap "Click to connect"

Create a new labe

1. Tap "+" to edit the label



2. Tap the "⚙️" button to adjust the label size and paper type

Create a new label


- 3. Tap **"Text"** to enter the text
- 4. Edit the label as you wish using the available functions. Once you have finished editing, tap **"Print"**.



- 5. Select the number of copies and tap **"Print"**

How to select a label for printing

1. Tap "Template"

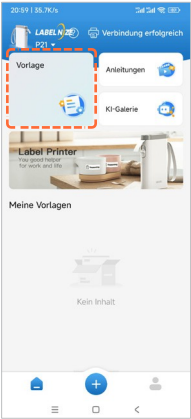

2. Select a template that suits your needs



How to select a label for printing

3. Tap the template to edit it

4. Tap "Print"



Troubleshoot ing

- **What are the dimensions of the supplied label roll?**

The supplied roll contains white labels measuring 15x40 mm and is located in the paper tray.

- **Do I need to register to use the printer?**

Registration is not required. Registered accounts can save and retrieve label templates.

- **Why is the printer printing blank labels?**

This may be because the label paper is loaded upside down; the labels must be facing upwards with the printed side showing.

- **Why is the printer continuously feeding labels?**

1. This may be because labels or residue are stuck to the sensors on cover A or in the paper tray.
2. This may be because labels or residue are stuck to print head A. The label paper could not be detected.
3. The sensors may be blocked by dirt. Clean the sensors and print head A.

- **Why does the printout look grey or faded?**

Use Peach label paper for best results. You can also try cleaning print head A with cleaning alcohol.

- **Why is the printer skipping a label or printing incompletely?**

1. Check that the label size and the software print template match.
2. Reinsert the label roll and press the feed button D once manually so that the printer can detect the label gap position.
3. Using non-genuine labels may result in poor print quality or mismatched sizes. Please use genuine labels.

- **Why has the printer suddenly stopped printing?**

Certain safety measures have been triggered. The most common reasons are that the printer has run out of paper or the battery is low.

- How can I centre the label content whilst editing?

1. On the right-hand side of the **"Text"** section, you can choose to align the text to the centre, left or right – click on this to adjust the text position within the text box.
2. For other templates or content, you can adjust the position by clicking on it and selecting the **"Align"** option. It can also be moved using your fingers.

LED display

Display	Status
Flashing green	Charging
No display	Battery is charged
Flashing red	Print head A is overheated or the battery is not sufficiently charged; printing cannot be completed
Solid red	Cover A is open or paper has run out; printing cannot be completed
Solid blue	Bluetooth connection successful

Technical specifications

Printing technology	Direct thermal
Resolution	203 DPI
Print speed	60 mm/s MAX
Supported paper width	14 mm (12 mm available)
Supported paper type	Single-label paper / continuous paper
Connection	Bluetooth
Paper cut	Manual
Battery	1200 mAh
Charging	USB TypeC
Input	5V 1A DC
Operating environment	5–40°C, 90% relative humidity
Storage environment	5–40°C, 90% relative humidity
Expected lifespan	50 km
Product dimensions	79.5 x 30 x 130.6 mm



3T Supplies AG, Peach Division
Chaltenbodenstrasse 6D
CH-8834 Schindellegi (Switzerland)
Tel: +41 44 787 68 30 Fax: +41 44 787 68 50
Email: support@peach.info

Status of the information · Last update · Version of the information ·
Versione delle informazioni · Estado de las informaciones ·
Uppgiftslämnare · Informationsstatus
· Status of information · Status of information · Status of information ·
Status of information: 04 / 2024
Ident. No.: PE110



Support information:
+8 00 8 070 60 10
support@peach.info

The contents of this manual are subject to change without notice, and components, hardware, software and technology may be updated to improve functionality. If you have any questions or problems, please contact sales or customer service.

Warning

- The paper tray must be clean. Any debris will get caught and damage the print head during printing.
- Use alcohol to clean the paper tray and print head.
- Do not dismantle the printer or attempt to repair it yourself. Switch off the printer if any faults occur.
- Charge in a cool, well-ventilated room. Do not expose the printer to high humidity or high temperatures.
- Keep away from water.
- If you notice any unusual smells or smoke coming from the printer, switch it off and unplug it immediately.
- Avoid dropping or shaking the printer to prevent damage.
- Do not open the cover whilst the printer is printing.
- Do not touch the print head immediately after printing, as it will be HOT.
- Use a soft, clean cloth to clean the outside of the printer.
- High temperatures may result in poor print quality.
- Use Peach label paper for best results. Using other label printers may result in poor print quality or damage to the printer.
- The durability of the printed labels depends on the quality of the label paper.
- Choose high-quality label paper if you want them to last.
- Children must only use the printer under supervision.
- Store in a clean and dry environment.
- The printer does NOT come with an adapter. Use one rated at 5V 1A.
- This printer can only be used in non-tropical environments.
- The printer may cause radio interference. Take any necessary precautionary measures.



A Cover/Print Head

2 Locking Button

C Cutting Button

D Indicator LED

E Body

Download the app

 
For Android and Apple users, you can search for "Labelnize" in Google Play or the App Store and install it. The second method is to scan the QR code.



Install label printer paper

1. Slide the locking button **2** to the other side to open the cover A.
2. Load the paper roll **2** into the paper tray. Refer to the image for the correct placement.
3. Unroll the paper until it protrudes slightly from the printer.
4. Close the cover A. Press the power/feed button D to calibrate the label and test the printer.


Notes: For best results, use label paper supplied by the printer manufacturer.

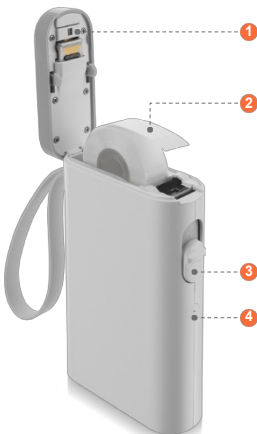


A Cover/Print Head **2**
Labelling Paper Roll
C Cut button
D Power / Feed Button

Connect Printer

 - 1. Turn on Bluetooth on your phone
- 2. Press and hold the power button to start the machine
- 3. Open the "Labelnize" app, tap "Unconnected"

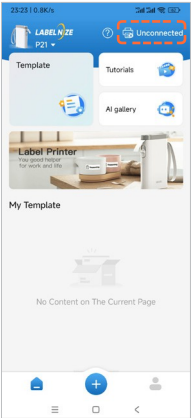

 - 4. Find "P21", tap "Click to connect"

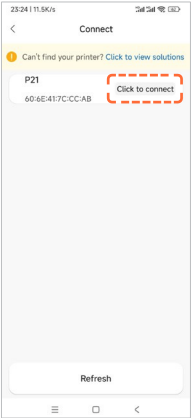


Connect Printer

1. Tap "+" to edit the label



 2. Click the "⚙️" button to customise the label size and paper type

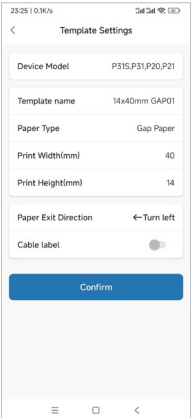

Connect Printer

- 3. Tap **"Text"** to enter text
- 4. Edit the label to suit your needs using the available functions. Once you have finished editing, tap **"Print"**

 


- 5. Select the number of copies and tap **"Print"**



How to choose a label to print

1. Click "Template"

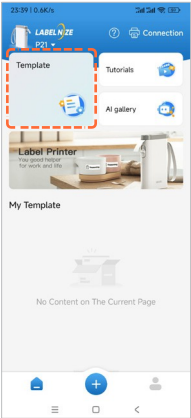

2. Select a template to suit your needs



How to choose a label to print

3. Click the template to edit

4. Click "Print"



Troubleshooting

- **What are the dimensions of the label roll included?**

The included roll contains white labels measuring 15x40mm and can be found inside the paper tray.

- **Do I need to register to use the printer?**

Registration is not required. Registered accounts can save and retrieve label templates.

- **Why is the printer printing blank labels?**

It may be because the label paper is loaded upside down; the labels must be face up.

- **Why does the printer keep feeding labels?**

1. It may be because there is a label or residue stuck on the sensors on cover A or in the paper tray.
2. It may be because there is a label or residue stuck on print head A. The label paper was not detected.
3. The sensors may be blocked by debris. Clean the sensors and print head A.

- **Why does the printout look grey or faded?**

For best results, use Peach label paper. You can also try cleaning print head A with rubbing alcohol.

- **Why does the printer skip a label or print incompletely?**

1. Check that the label size and the software print template match.
2. Reinstall the label roll and manually press the feed button D once to allow the printer to detect the label gap position.
3. Using non-genuine labels may result in poor print quality or mismatched sizes. Use genuine labels.

- **Why did the printer suddenly stop printing?**

Certain safety measures are in place. The most common reasons are usually that the printer has run out of paper or the battery is low.

- **How can I centre the label content when editing?**

1. On the right-hand side of the "Text" section, there are options to align the text to the centre, left or right – click to adjust the text position in the text box.
2. For other patterns or content, you can adjust the position by clicking on it and selecting the "Align" option. It can also be moved using your fingers.

Indicator LED

Indicator	Status
Flash Green	Charging
Light off	Fully charged
Flash Red	Print head overheating or low battery; printing cannot be completed
Steady red	Cover is open or out of paper; printing cannot be completed
Steady Blue	Bluetooth connection successful

Machine Parameters

Printing technology	Direct Thermal
Resolution	203 dpi
Print Speed	60 mm/s MAX
Supported Paper Width	14 mm (12 mm available)
Supported paper type	Gap paper / Continuous paper
Connection	Bluetooth
Paper cutting	Manual
Battery	1200 mAh
Charging	USB TypeC
Input	5V 1A DC
Operating environment	5–40°C, 90% RH (no condensation)
Storage Environment	5–40°C, 90% RH (no condensation)
Life expectancy	50 km
Product Dimensions	79.5 x 30 x 130.6 mm



3T Supplies AG, Peach Division
Chaltenbodenstrasse 6D
CH-8834 Schindellegi (Switzerland)
Tel: +41 44 787 68 30 Fax: +41 44 787 68 50
e-mail: support@peach.info

Status of information · Last information update · Version of
information · Versione delle informazioni · Estado de las
informaciones · Uppgiftslämnare · Informationsstatus
· Status of information · Status of information · Status of information ·
Status of information: 04 / 2024
Ident. No.: PE110



Support information:
+5 06 8 070 60 10
support@peach.info

 
The contents of this manual are subject to change without prior notice. The components, hardware, software and technology may be upgraded to improve functionality. Please contact sales or customer support if you have any questions or concerns.

Peach



— Peach Label Printer — — PE110 —



**EN**

Please read this user manual carefully before use.

GB

Please read the instruction manual carefully before use.

FR

Please read the instruction manual carefully before use.

IT

Please read the instruction manual carefully before use.

SE

Read the user manual carefully before use to get the most out of it.

SK

Please read the instructions for use carefully before use.

CZ

Please read the instructions for use carefully before use.

PL

Please read the user manual carefully before use.

Warning

- The paper tray must be clean. Any debris will stick to and damage the print head during printing.
- Use alcohol to clean the paper tray and the print head.
- Do not dismantle the printer or attempt to repair it yourself. Switch off the printer in the event of a malfunction.
- Set up the printer in a cool, well-ventilated room. Do not expose the printer to high humidity or high temperatures.
- Keep the printer away from water.
- If you notice any strange smells or smoke coming from the printer, switch it off and unplug it immediately.
- Avoid dropping or shaking the printer to prevent damage.
- Do not open the cover whilst printing.
- Do not touch the print head immediately after printing as it is HOT.
- Use a soft, clean cloth to clean the outside of the printer.
- High temperatures can result in poor print quality.
- Use Peach label paper for best results. Using other label printers may result in poor print quality or damage the printer.
- The durability of printed labels depends on the quality of the paper.
- Choose high-quality paper if you want the labels to last a long time.
- Children must only use the printer under supervision.
- Keep the printer in a clean, dry environment.
- The printer does NOT come with a power adapter. Please use a 5V 1A power adapter.
- This printer may only be used in non-tropical environments.
- The printer may cause radio interference. Take all necessary precautions.



A Cover / print head
 button C Cut button

D Indicator light
 E Machine body

Download the app

 
For Android and Apple users, you can search for "Labelnize" on Google Play or the App Store and install it. The second method is to scan the QR code.



Loading paper into the label printer

1. Slide the **2** locking button to the other side to open cover A.
2. Load the roll of paper **2** into the paper tray. Refer to the image to see how to position it correctly.
3. Unroll the paper so that it extends slightly beyond the printer.
4. Close the cover A. Press the power button D to calibrate the label and test the printer.


Notes: Use the label paper recommended by the printer manufacturer for best results.

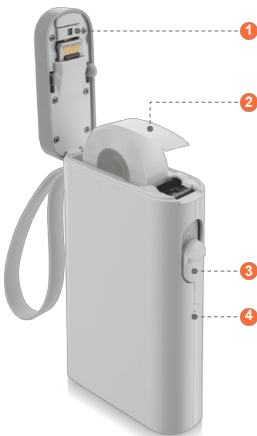

A Cover / Print head **2** Label roll
C Cut button
D Power button

Connecter the printer

 1. Turn on Bluetooth on your phone
2. Press and hold the power button to start the machine
3. Open the "Labelnize" app, tap "Not connected"

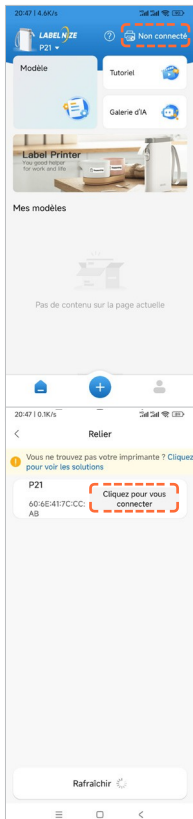

4. Find "P21", tap "Click to connect"

Create a new label

1. Tap "+" to edit the label



2. Click on the "⚙️" button to customise the label size and paper type

Create a new label

 
- 3. Tap **"Text"** to enter text
- 4. Customise the label to suit your needs using the available functions. Once you have finished editing, tap **"Print"**



- 5. Select the number of copies and tap **"Print"**

How to choose a label for printing

1. Click on "Template"

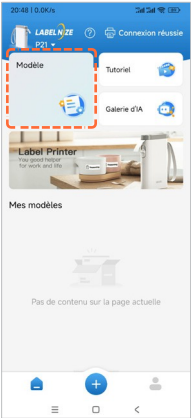


2. Select a template to suit your needs



How to choose a label for printing

 - 3. Click on the template you wish to edit
- 4. Click on "Print"

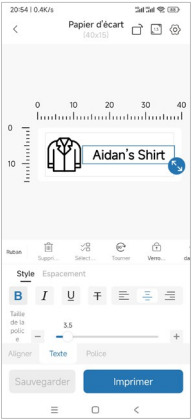

Breakdown assistance

• What are the dimensions of the label roll provided?

The included roll contains white labels measuring 15 x 40 mm and is located in the paper tray.

• Do I need to register to use the printer?

Registration is not required. Registered accounts can save and retrieve label templates.

• Why is the printer printing blank labels?

This may be because the label paper is inserted upside down; the labels must be placed face up.

• Why is the printer feeding labels continuously?

1. This may be due to labels or residue stuck to the sensors on cover A or in the paper tray.
2. There may be labels or residue stuck to the print head
 - A. The label has not been detected.
3. The sensors may be blocked by debris. Clean the sensors and print head A.

• Why is the printout grey or faded?

Use Peach label paper for best results. You can also try cleaning print head A with rubbing alcohol.

• Why is the printer skipping a label or printing incompletely?

1. Check that the label size and the print template in the software match.
2. Reinstall the label roll and press the power button D once manually to allow the printer to detect the position of the gap between the labels.
3. Using non-genuine labels may result in poor print quality or inconsistent sizes. Use genuine labels.

• Why has the printer suddenly stopped printing?

Certain safety measures are in place. The most common reasons are that the printer has run out of paper or that the battery is low.

- **How do I centre the label content when printing?**

1. On the right-hand side of the **"Text"** section, there are options to centre, left-align or right-align the text – click to adjust the text's position within the text box.
2. For other elements or content, you can adjust the position by clicking on them and selecting the **"Align"** option. You can also move them using your fingers.

LED indicator

Indicator	Status
Flashing green	Charging
Light off	Fully charged
Red flashing	The print head is overheating or the battery is low; printing cannot be completed.
Steady red light	The cover is open or there is no paper left; printing cannot be completed.
Solid blue	Bluetooth connection successful

Machine settings

Printing technology	Direct thermal
Resolution	203 DPI
Print speed	60 mm/s MAX
Supported paper width	14 mm (12 mm available)
Supported paper types	Perforated paper / Continuous paper
Connection	Bluetooth
Paper cutting	Manual
Battery	1200 mAh
Charging	USB TypeC
Input	5V 1A DC
Operating environment	5–40°C, 90% RH (non-condensing)
Storage environment	5–40°C, 90% RH (non-condensing)
Life expectancy	50 km
Product dimensions	79.5 x 30 x 130.6 mm



3T Supplies AG, Peach Division
Chaltenbodenstrasse 6D
CH-8834 Schindellegi (Switzerland)
Tel: +41 44 787 68 30 Fax: +41 44 787 68 50
Email: support@peach.info

Status of information · Last information update · Version of
information · Versione delle informazioni · Estado de las
informaciones · Uppgiftslämnare · Informationsstatus
· Status of information · Status of information · Status of information ·
Status of information: 04 / 2024
Ident. No.: PE110



Support information:
+8 00 8 070 80 10
support@peach.info

The contents of this manual are subject to change without notice. Components, hardware, software and technology may be upgraded to improve functionality.
Please contact the sales department or customer service if you have any questions or concerns.

Warning

- The paper tray must be kept clean. Any debris could become trapped and damage the print head during printing.
- Use alcohol to clean the paper tray and the print head.
- Do not dismantle the printer or attempt to repair it yourself. Switch off the printer in the event of a malfunction.
- Recharge the printer in a cool, well-ventilated room. Do not expose the printer to damp or high temperatures.
- Keep away from water.
- If the printer emits any strange odours or fumes, switch it off and unplug it immediately.
- Avoid dropping or shaking the printer to prevent damage.
- Do not open the cover whilst printing.
- Do not touch the print head immediately after printing as it will be hot.
- Use a soft, clean cloth to clean the outside of the printer.
- High temperatures can cause poor print quality.
- For best results, use Peach label paper. Using other label printers may result in poor print quality or damage to the printer.
- The durability of printed labels depends on the quality of the label paper.
- Choose high-quality label paper if you want your labels to last a long time.
- Children should only use the printer under supervision.
- Store in a clean, dry place.
- The printer is NOT supplied with an adapter. Use one with a power rating of 5V 1A.
- This printer may only be used in non-tropical environments.
- The printer may cause radio interference. Take the necessary precautions.



A Cover / print head 2 Lock
button C Cut button

D LED indicator
E Body

Download the app

 
For Android and Apple users, you can search for "Labelnize" on Google Play or the App Store and install it. The second method involves scanning the QR code.



Loading the label printer paper

1. Slide the lock button **2** to the other side to open the cover A.
2. Load the roll of paper in **2** to the paper tray. Refer to the image for the correct positioning.
3. Unroll the paper so that it extends slightly beyond the printer.
4. Close the cover A. Press the power button D to calibrate the label and test the printer.


Note: For best results, use the label paper supplied by the printer manufacturer.

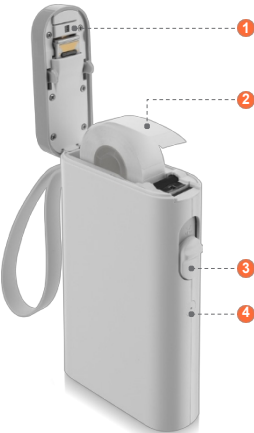

A Cover / print head **2** Roll of label paper
C Cut button
The power button

Connect the printer

 1. Turn on Bluetooth on your phone
2. Press and hold the power button to start the machine
3. Open the "Labelnize" app, tap "Not connected".

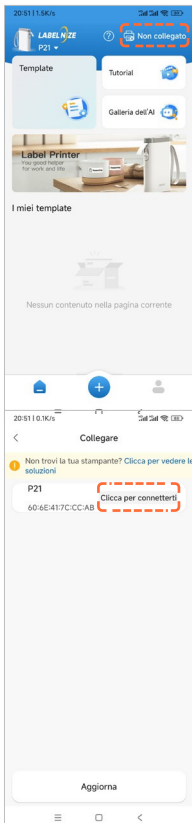

4. Find "P21", tap "Click to connect".

Create a new label

1. Tap "  " to edit the label



2. Tap "  " on the button to customise the label format and paper type

Create a new label

3. Tap **"Text"** to enter the text

 
4. Edit the label to suit your needs using the available functions. Once you have finished editing, tap **"Print"**.

5. Select the number of copies and tap **"Print"**.



How to choose a label to print

1. Click on "Template"

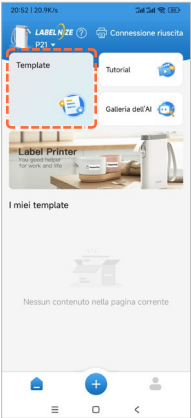

2. Select a template to suit your needs



How to choose a label to print

3. Click on the template you wish to edit

4. Click on "Print".



Troubleshooting

- **What are the dimensions of the supplied label roll?**

The supplied roll contains 15x40 mm white labels and is located inside the paper tray.

- **Do I need to register to use the printer?**

Registration is not required. Registered accounts can save and retrieve label templates.

- **Why is the printer printing blank labels?**

This may be because the label paper is loaded upside down; the labels must face upwards.

- **Why is the printer feeding labels continuously?**

1. This may be because there are labels or residue stuck to the sensors on cover A or in the paper tray.

2. There may be labels or residue stuck to print head A. The label paper has not been detected.

3. The sensors may be blocked by debris. Clean the sensors and print head A.

- **Why does the print appear grey or faded?**

For best results, use Peach label paper. You can also try cleaning print head A with rubbing alcohol.

- **Why is the printer skipping a label or printing incompletely?**

1. Check that the label size and the print template in the software match.

2. Reinstall the label roll and manually press the power button D once to allow the printer to detect the position of the gap between the labels.

3. Using non-genuine labels may result in poor print quality or mismatched dimensions. Use genuine labels.

- **Why has the printer suddenly stopped printing?**

Some safety measures have been implemented. The most common reasons are: the printer has run out of paper or the battery is flat.

- How can I centre the label content whilst editing?

1. On the right-hand side of the 'Text' section, there are options to align text to the centre, left or right: click to adjust the position of the text in the text box.

2. For other models or content, you can adjust the position by clicking on them and selecting the **"Align"** option. You can also move them using your fingers.

LED indicator

Indicator	Status
Green Flash	Charging
Light off	Light off
Red Flash	Print head overheating or low battery; printing cannot be completed
Steady red	The cover is open or the paper has run out; printing cannot be completed.
Solid blue	Bluetooth connection successful

Machine parameters

Printing technology	Direct thermal
Resolution	203 DPI
Print speed	60 mm/s MAX
Supported paper width	14 mm (12 mm available)
Supported paper type	Blank paper / continuous paper
Connection	Bluetooth
Paper cutting	Manual
Battery	1200 mAh
Charging	USB TypeC
Input	5V 1A DC
Operating environment	5–40°C, 90% RH (non-condensing)
Storage environment	5–40°C, 90% RH (non-condensing)
Expected lifespan	50 km
Product dimensions	79.5 x 30 x 130.6 mm



3T Supplies AG, Peach Division
Chaltenbodenstrasse 6D
CH-8834 Schindellegi (Switzerland)
Tel: +41 44 787 68 30 Fax: +41 44 787 68 50
Email: support@peach.info

Status of information · Last information update · Version of
information · Versione delle informazioni · Estado de las
informaciones · Uppgiftslämnare · Informationsstatus
· Status of information · Status of information · Status of information ·
Status of information: 04 / 2024
Ident. No.: PE110



Support information:
+8 00 8 070 60 10
support@peach.info

The contents of this manual are subject to change without notice. Components, hardware, software and technology may be updated to improve functionality. If you have any questions or concerns, please contact the sales department or customer support.

 
Peach



— Peach Label Printer —

— PE110 —



**EN**

Please read this user manual carefully before use.

GB

Please read the instruction manual carefully before use.

FR

Please read the instruction manual carefully before use.

IT

Please read the instruction manual carefully before use.

SE

Read the user manual carefully before use to get the most out of it.

SK

Please read the instructions carefully before use.

CZ

Please read the instructions for use carefully before use.

PL

Please read the user manual carefully before use.

Tips for best use

- The paper tray must be clean. Any debris may get stuck and damage the print head during printing.
- Use alcohol to clean the paper tray and print head.
- Do not take the printer apart and do not attempt to carry out any repairs yourself. Switch off the printer if a fault occurs.
- Set up the printer in a cool, well-ventilated room. Do not expose the printer to high humidity or high temperatures.
- Keep the printer away from water.
- If you notice any strange smells or smoke coming from the printer, switch it off immediately and unplug it.
- Avoid dropping or shaking the printer to prevent damage.
- Do not open the cover whilst printing is in progress.
- Do not touch the print head immediately after printing as it may be HOT.
- Use a soft, clean cloth to clean the outside of the printer.
- High temperatures can result in poor print quality.
- Use Peach label paper for best results. Using other label printers may result in poor print quality or damage to the printer.
- The lifespan of the printed labels depends on the quality of the label paper.
- Choose high-quality label paper if you want them to last a long time.
- Children must only use the printer under supervision.
- Store in a clean and dry environment.
- The printer does NOT come with an adapter. Use an adapter with a rating of 5V 1A.
- This printer is only suitable for use in non-tropical environments.
- The printer may cause radio interference. Take all necessary precautions.



A Cover/print head
2 Lock button
C Cut button

D LED indicator
E Body

App download

 
For Android and Apple users, you can search for "Labelnize" in Google Play or the App Store and install it. The other method is to scan the QR code.



Load paper into the label printer

1. Slide the lock button **2** in the opposite direction to open the cover A.
2. Load the paper roll **2** to the paper tray. See the illustration for the correct position.
3. Unroll the paper until it protrudes slightly from the printer.
4. Close the cover A. Press the power/feed button D to calibrate the label and test the printer.


Notes: Use label paper from the printer manufacturer for best results.

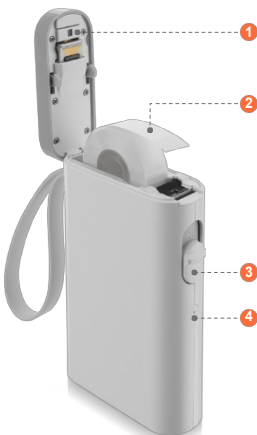

A Cover / print head **2**
Roll of label paper
C Cutting button
D Power/feed button

Anslut label the printer

 
1. Turn on Bluetooth on your phone
2. Press and hold the power button to start the printer
3. Open the "Labelnize" app and tap "Unconnected"

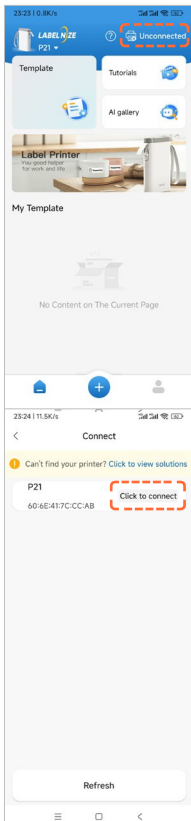

4. Find "P21", tap "Tap to connect"

Create a new label

 1. Tap "+" to edit the label

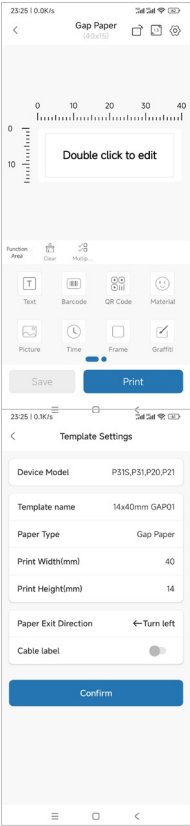


2. Tap the "⚙️" button to customise the label size and paper type

Create a new label


- 3. Tap **"Text"** to enter text
- 4. Edit the labels as you wish using the available functions. Once you have finished editing, click **"Print"**

 - 5. Select the number of copies and click **"Print"**

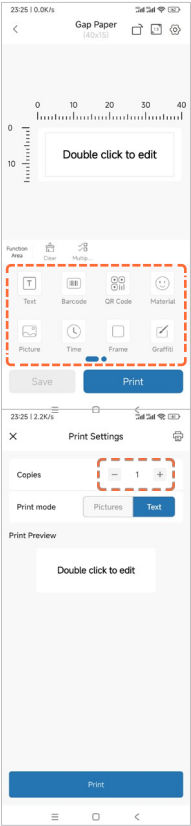

How to choose a label to print

 1. Click on "Template"

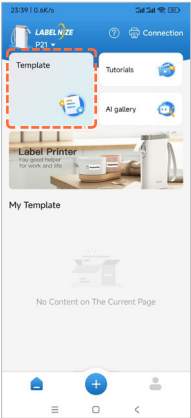


2. Select a template based on your needs



How to choose a label to print

3. Click on the template you wish to edit

 4. Click on "Print"

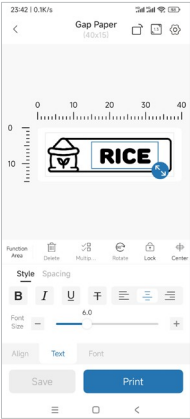

Rock climbing

- **What are the dimensions of the supplied label roll?**

The included roll contains white labels measuring 15x40 mm and is located in the paper tray.

- **Do I need to register to use the printer?**

Registration is not necessary. Registered accounts can save and retrieve label templates.

- **Why is the printer printing blank labels?**

This may be because the label paper is inserted upside down; the labels must be facing upwards.

- **Why is the printer feeding labels continuously?**

1. This may be because labels or debris have become stuck on the sensors on cover A or in the paper tray.
2. This may be because labels or debris have become stuck on print head A. The label paper could not be detected.
3. The sensors may be blocked by debris. Clean the sensors and print head A.

- **Why does the print look grey or faded?**

Use Peach label paper for best results. You can also try cleaning print head A with alcohol.

- **Why does the printer skip a label or print incompletely?**

1. Check that the label size and the software's print template match.
2. Reinsert the label roll and press the feed button D once manually so that the printer can detect the position of the label gap.
3. Using non-genuine labels may result in poor print quality or incorrect label sizes. Use genuine labels.

- **Why did the printer suddenly stop printing?**

Certain safety measures have been implemented. The most common causes are that the printer has run out of paper or that the battery level is low.

- **How can I centre the label content when editing?**

1. On the right-hand side of the **"Text"** section, there are options for centring, left or right – click to adjust the text's position in the text box.

2. For other patterns or content, you can adjust the position by clicking on it and selecting the **"Adjust"** option. It can also be moved using your fingers.

The indicator lights mean

Indicator	Status
Flashing Green sound	Charging
Light off	Fully charged
Flashing red light	The print head is overheating or the battery is low; printing cannot be completed
Solid red light	The cover is open or the paper has run out; printing cannot be completed
Steady blue light	Bluetooth connection successful

Portable label printer – facts

Printing technology	Direct thermal
Resolution	203 DPI
Print speed	60 mm/s MAX
Supported paper width	14 mm (12 mm available)
Supported paper types	Gap paper / continuous paper
Connection	Bluetooth
Paper cutting	Manual
Battery	1200 mAh
Charging	USB TypeC
Input	5V 1A DC
Operating environment	5–40°C, 90% RH (non-condensing)
Storage environment	5–40°C, 90% RH (non-condensing)
Expected lifespan	50 km
Product dimensions	79.5 x 30 x 130.6 mm



3T Supplies AG, Peach Division
Chaltenbodenstrasse 6D
CH-8834 Schindellegi (Switzerland)
Tel: +41 44 787 68 30 Fax: +41 44 787 68 50
Email: support@peach.info

Status of information · Last information update · Version of information · Versione delle informazioni · Estado de las informaciones · Uppgiftslämnare · Informationsstatus
· Status of information · Status of information · Status of information ·
Status of information: 04 / 2024
Ident. No.: PE110



Support information:
+8 00 8 070 60 10
support@peach.info

The contents of this manual are subject to change without prior notice. Components, hardware, software and technology may be upgraded to improve functionality.

Please contact sales or customer service if you have any questions or concerns. Swedish PEACH support: j.ling-vannerus@peach.info

Warning

- The paper tray must be clean. Any dirt will get caught during printing and damage the print head.
- Use alcohol to clean the paper tray and print head.
- Do not dismantle the printer or attempt to repair it yourself. If any faults occur, switch off the printer.
- Charge in a cool, well-ventilated room. Do not expose the printer to high humidity or temperatures.
- Keep out of reach of water.
- If the printer emits any unusual odours or smoke, switch it off immediately and unplug it from the mains.
- Do not drop or shake the printer to avoid damaging it.
- Do not open the cover whilst printing.
- Do not touch the print head immediately after printing, as it will be HOT.
- Use a soft, clean cloth to clean the outside of the printer.
- High temperatures may result in poor print quality.
- For best results, use Peach label paper. Using other types of label paper may result in poor print quality or damage to the printer.
- The durability of printed labels depends on the quality of the label paper.
- If you need your labels to last, choose high-quality label paper.
- Children may only use the printer under adult supervision.
- Store the printer in a clean, dry place.
- The printer is NOT supplied with an adapter. Use one with a rated output of 5 V 1 A.
- This printer may only be used in a non-tropical environment.
- The printer may cause radio interference. Take all necessary precautions.



A Cover/print head **2**
 Lock button C Cut
 button

D Indicator LED
 E Body

Download the app


Android and Apple users can search for "Labelnize" in the Google Play Store or App Store and install it. Alternatively, scan the QR code.



Load the paper into the label printer

1. Slide the **2** locking button to the other side to open cover A.
2. Insert the **2** paper roll into the paper tray. Refer to the illustration for the correct position.
3. Unroll the paper sufficiently so that it protrudes slightly from the printer.
4. Close cover A. Press the power/feed button D to calibrate the label and test the printer.


Notes: For best results, use label paper recommended by the printer manufacturer.

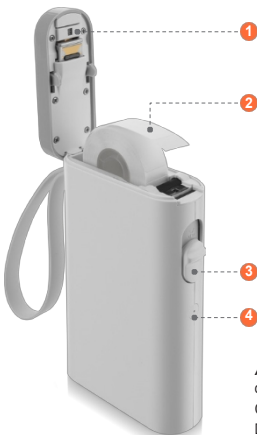


A Cover/print head **2** Roll of label paper
C Cut button
D Power/Feed button

Connect the printer

- 1. Turn on Bluetooth on your phone
- 2. Press and hold the power button to start the machine
- 3. Open the "Labelnize" app, tap "Offline"

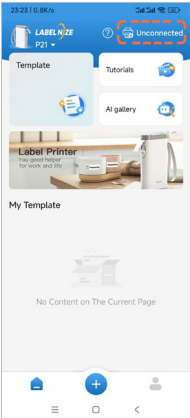

- 4. Find "P21", tap "Connect by clicking"

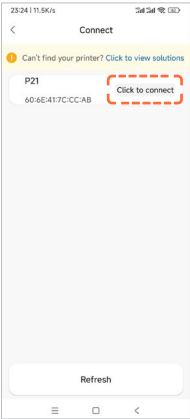


Create a new label

1. Tap "+" to customise the label




2. Tap the "⚙️" button to adjust the label size and paper type

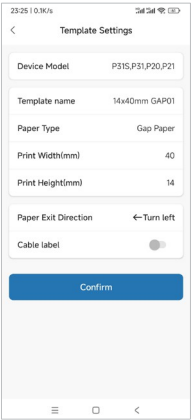

Create a new label


- 3. Tap **"Text"** to enter text
- 4. Customise the label to your requirements using the available functions. Once you have finished, tap **"Print"**

- 5. Select the number of copies and tap **"Print"**

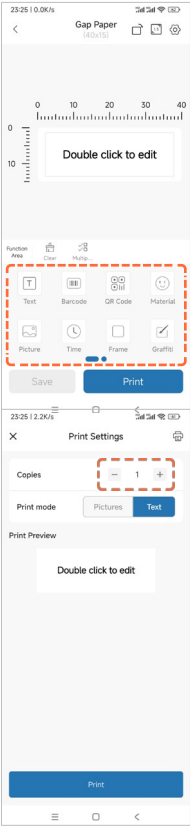

How to choose a label for printing

1. Click on "Template"

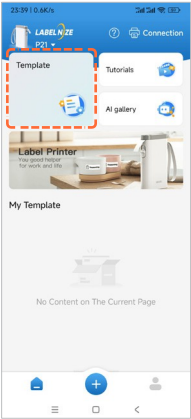


2. Select a template to suit your needs



How to choose a label for printing

3. Click on the template you want to edit

4. Click on "Print"

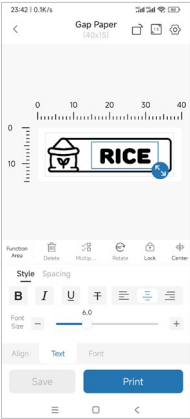

Troubleshooting

- **What are the dimensions of the supplied roll of labels?**

The supplied roll contains white labels measuring 15 x 40 mm, which you will find inside the paper tray.

- **Do I need to register to use the printer?**

Registration is not required. Registered accounts can save and download label templates.

- **Why is the printer printing blank labels?**

This may be because the label paper is inserted upside down; the labels must face upwards.

- **Why is the printer feeding labels continuously?**

1. This may be caused by a label or residue stuck to the sensors on cover A or in the paper tray.
2. This may be caused by a label or residue stuck to print head A. The label paper could not be detected.
3. The sensors may be blocked by dirt. Clean the sensors and print head A.

- **Why is the printout grey or faded?**

For best results, use Peach label paper. You can also try cleaning print head A with alcohol.

- **Why does the printer skip a label or print incompletely?**

1. Check that the label size matches the software print template.
2. Reinstall the label roll and press the feed button D once manually so that the printer can detect the position of the gap between the labels.
3. Using non-genuine labels may result in poor print quality or inconsistent sizes. Use genuine labels.

- **Why has the printer suddenly stopped printing?**

Certain safety measures are in place. The most common reasons are that the printer has run out of paper or the battery is flat.

- **How can I centre the label text when editing?**

1. On the right-hand side of the "Text" section, you can choose to centre or align to the left, or right-click to adjust the position of the text within the text box.

2. For other designs or content, you can adjust the position by clicking on it and selecting the **"Align"** option. You can also move it using your fingers.

LED indicator

Indicator	Status
Flashing green	Charging
Light off	Fully charged
Flashing red	Print head overheating or battery low, printing cannot be completed
Solid red	The cover is open or the paper has run out; printing cannot be completed
Solid blue	Bluetooth connection successful

Machine parameters

Printing technology	Direct thermal
Decision	203 DPI
Print speed	60 mm/s MAX
Supported paper width	14 mm (12 mm available)
Supported paper type	Spaced paper / Continuous paper
Connection	Bluetooth
Paper cutting	Manual
Battery	1200 mAh
Charging	USB TypeC
Input	5V 1A DC
Operating environment	5–40°C, 90% RH (non-condensing)
Storage environment	5–40°C, 90% RH (non-condensing)
Service life	50 km
Product dimensions	79.5 x 30 x 130.6 mm



3T Supplies AG, Peach Division
Chaltenbodenstrasse 6D
CH-8834 Schindellegi (Switzerland)
Tel: +41 44 787 68 30 Fax: +41 44 787 68 50
Email: support@peach.info

Status of information · Last information update · Version of information · Versione delle informazioni · Estado de las informaciones · Uppgiftslämnare · Informationsstatus
· Status of information · Status of information · Status of information ·
Status of information: 04 / 2024
Ident. No.: PE110



Support information:
+8 00 8 070 60 10
support@peach.info

The contents of this manual are subject to change without prior notice. Components, hardware, software and technologies may be updated to improve functionality. If you have any questions or concerns, please contact your dealer or customer support.

 
Peach



— Peach Label Printer —

— PE110 —



**EN**

Please read this user manual carefully before use.

GB

Please read the instruction manual carefully before use.

FR

Please read the instruction manual carefully before use.

IT

Please read the instruction manual carefully before use.

SE

Please read the instructions carefully before use to ensure you get the most out of the product.

SK

Please read the instructions for use carefully before use.

CZ

Please read the instructions for use carefully before use.

PL

Please read the user manual carefully before use.

Warning

- The paper tray must be clean. Any dirt will get caught during printing and damage the print head.
- Use alcohol to clean the paper tray and print head.
- Do not dismantle the printer or attempt to repair it yourself. If any fault occurs, switch off the printer.
- Charge in a cool, well-ventilated room. Do not expose the printer to high humidity or temperatures.
- Keep out of reach of water.
- If the printer emits strange odours or smoke, switch it off immediately and unplug it from the socket.
- Do not drop or shake the printer, as this may cause damage.
- Do not open the cover whilst printing.
- Do not touch the print head immediately after printing, as it will be HOT.
- Use a soft, clean cloth to clean the printer's exterior.
- High temperatures may result in poor print quality.
- For best results, use Peach label paper. Using other types of label paper may result in poor print quality or damage to the printer.
- The durability of printed labels depends on the quality of the label paper.
- If you need your labels to last, choose high-quality label paper.
- Children should only use the printer under supervision.
- Store the printer in a clean and dry environment.
- The printer is NOT supplied with a power adapter. Use one with a rated current of 5 V 1 A.
- This printer must not be used in a tropical climate.
- The printer may cause radio interference. Take all necessary precautions.



A Cover / print head **2**

Lock button C Cut
button

D LED indicator
E Body

Download the app

 
Android and Apple users can search for "Labelnize" on Google Play or the App Store and install it. Alternatively, you can scan the QR code.



Installing the label printer

1. Slide the locking button ② to the other side to open cover A.
2. Insert the roll of paper ② into the paper tray. See the illustration for the correct position.
3. Unroll the roll of paper so that it protrudes slightly from the printer.
4. Close cover A. 5. Press the power/feed button D to calibrate the label and test the printer.


Notes: The labeller is equipped with a printer. For best results, use label paper recommended by the printer manufacturer.

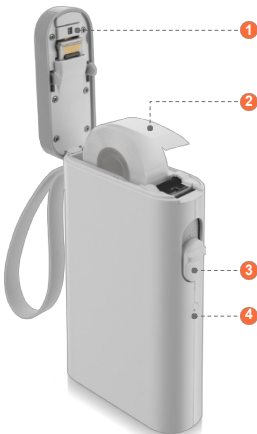


A Cover/print head ②
Roll of label paper
C Cut button
D Power/feed button

Connecting a printer

 1. Turn on Bluetooth on your phone
2. Press and hold the power button to turn on the device
3. Open the "**Labelnize**" app on your smartphone and tap "**Not connected**".

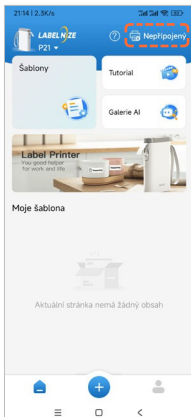

 4. Search for "**P21**", then tap "**Click to connect**".

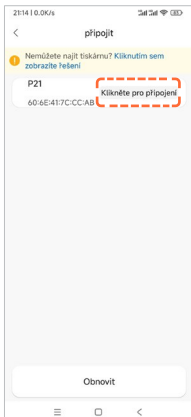


Create a new label

1. Tap "  " to customise the label



 
2. Tap the "  " button to customise the label size and paper type.

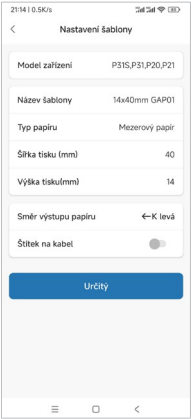

Create a new label

3. Tap **"Text"** to enter text

 
4. Customise the label to your requirements using the available functions. Once you have finished, tap **"Print"**

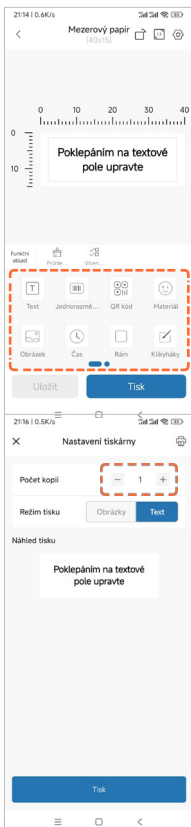

5. Select the number of copies and click **"Print"**.

How to choose a label for printing

 1. Click on "Templates"

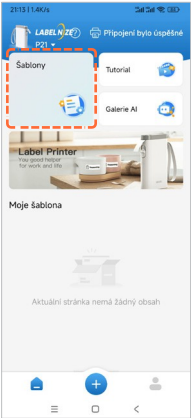

2. Select a template to suit your needs



How to choose a label for printing

3. Click on the template you want to edit

4. Click the "Print" button



Troubleshooting

- **Question: What are the dimensions of the included roll of labels?**

The included roll contains white labels measuring 15x40 mm, which you will find inside the paper tray.

- **Do I need to register to use the printer?**

Registration is not required. Registered accounts can save and load label templates.

- **Why is the printer printing blank labels?**

This may be because the label paper is inserted upside down; the labels must be face up.

- **Why is the printer feeding labels continuously?**

1. This may be because labels or debris are stuck to the sensors on cover A or in the paper tray.

2. This may be because a label or residue has stuck to print head A. The label paper could not be detected.

3. The sensors may be blocked by dirt. Clean the sensors and print head A.

- **Why does the printout look grey or faded?**

For best results, use Peach label paper. You can also try cleaning print head A with alcohol.

- **Why is the printer skipping a label or printing incompletely?**

1. Check that the label size matches the software print template.

2. Reinstall the label roll and manually press the feed button D once so that the printer can detect the gap between the labels.

3. Using non-genuine labels may result in poor print quality or incorrect sizing. Use genuine labels.

- **Why has the printer suddenly stopped printing?**

Certain safety measures are in place. The most common reasons are that the printer has run out of paper or that the battery is flat.

- **How can I centre the label content when editing?**

1. On the right-hand side of the "Text" section, there are options to align the text to the centre, left or right – click to adjust the position of the text in the text field.

2. For other patterns or content, you can adjust the position by clicking on it and selecting the "Align" option. You can also move it using your fingers.

LED indicatc

Indicator	Status
Green flash	Charging
Light off	Fully charged
Red flash	Print head overheating or low battery, print cannot be completed
Steady red	The cover is open or the paper has run out; printing cannot be completed
Solid blue	Bluetooth connection successful

Machine specification

Printing technology	Direct thermal
Resolution	203 DPI
Print speed	60 mm/s MAX
Supported paper width	14 mm (12 mm available)
Supported paper type	Spaced paper / continuous paper
Connection	Bluetooth
Paper cutting	Manual
Battery	1200 mAh
Charging	USB TypeC
Input	5V 1A DC
Operating environment	5–40°C, 90% RH (non-condensing)
Storage environment	5–40°C, 90% RH (non-condensing)
Expected service life	50 km
Product dimensions	79.5 x 30 x 130.6 mm



3T Supplies AG, Peach Division
 Chaltenbodenstrasse 6D
 CH-8834 Schindellegi (Switzerland)
 Tel: +41 44 787 68 30 Fax: +41 44 787 68 50
 Email: support@peach.info

Status of information · Last information update · Version of information · Versione delle informazioni · Estado de las informaciones · Uppgiftslämnare · Informationsstatus
 · Status of information · Status of information · Status of information ·
 Status of information: 04 / 2024
 Ident. No.: PE110



Support information:
 +5 06 8 070 60 10
 support@peach.info

The contents of this manual are subject to change without prior notice. Components, hardware, software and technology may be updated to improve functionality. If you have any questions or require further clarification, please contact your dealer or customer support.

Warning

- The paper tray must be clean. Any dirt may damage the print head during printing.
- Use alcohol to clean the paper tray and print head.
- Do not dismantle the printer or attempt to repair it yourself. If any faults occur, switch off the printer.
- Charge in a cool, well-ventilated room. Do not expose the printer to high humidity or high temperatures.
- Keep away from water. Do not allow contact with water.
- If the printer emits strange odours or smoke, switch it off immediately and disconnect it from the power supply.
- Avoid dropping or shaking the printer to prevent damage.
- Do not open the cover whilst printing.
- Do not touch the print head immediately after printing, as it will be HOT.
- Use a soft, clean cloth to clean the outside of the printer.
- High temperatures may result in poor print quality.
- For best print quality, use Peach brand labels. Using labels from other manufacturers may result in poor print quality or damage to the printer.
- The durability of printed labels depends on the quality of the label paper.
- If you want the labels to be durable, choose high-quality label paper.
- Children must only use the printer under supervision.
- Store in a clean and dry place.
- A power supply is not included with the printer. Use a standard power supply with a voltage of 5 V and a current of 1 A.
- The printer may only be used in non-tropical environments.
- The printer may cause radio interference. Take all necessary precautions.



A Cover / print head **2** Lock
button C Cut button

D LED indicator
E Body

Download the app

 
Android and Apple users can search for "Labelnize" in the Google Play or App Store and install it. Alternatively, you can scan the QR code.



Install the label printer paper

1. Slide the locking button **2** to the other side to open cover A.
2. Load the roll of paper **2** into the paper tray. The correct way to position the paper is shown in the illustration.
3. Unroll the paper until it protrudes slightly from the printer.
4. Close cover A. Press the power/feed button D to calibrate the label and test the printer.


Notes: For best results, use label paper supplied by the printer manufacturer.

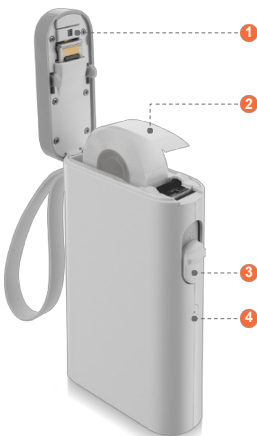

A Cover / print head **2** Roll of label paper
C Cut button
D Power/Feed button

Connecting the printer

 1. Turn on Bluetooth on your phone
2. Press and hold the power button to start the device
3. Open the "Labelnize" app, tap **"Not connected"**

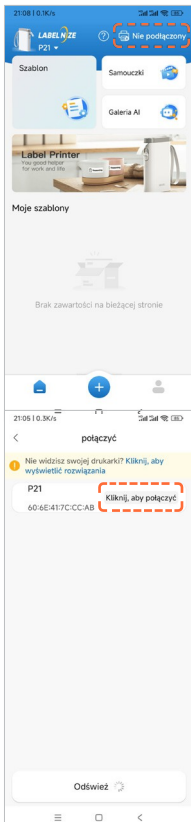


4. Find **"P21"**, tap **"Tap to connect"**

Creating a new label

1. Tap " + " to edit the label



 2. Tap the "⚙️" button to adjust the label size and paper type

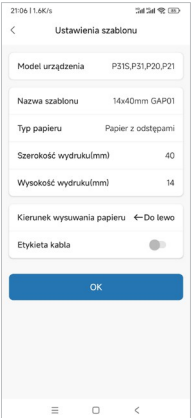

Creating a new label

- 3. Tap **"Text"** to enter text
- 4. Edit the label as required using the available functions. Once you have finished editing, tap **"Print"**

 


- 5. Select the number of copies and tap **"Print"**



How to choose a label to print

1. Click "Template"

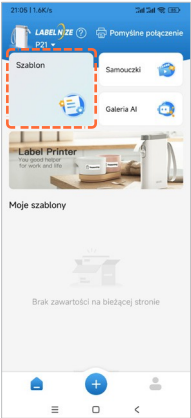

2. Choose a template to suit your needs



How to choose a label to print

- 3. Click on the template to edit
- 4. Click "**Print**"



Problem-solving

- **What are the dimensions of the included label roll?**

The included roll contains white labels measuring 15x40 mm and is located in the paper tray.

- **Do I need to register to use the printer?**

Registration is not mandatory, but it is very useful. Registered accounts can save and download label templates.

- **Why is the printer printing blank labels?**

This may be because the label paper is inserted upside down; the labels must face upwards.

- **Why is the printer feeding labels continuously?**

1. This may be caused by labels or residue sticking to the sensors on cover A or in the paper tray.

2. This may be caused by a label or residue sticking to print head A. The label paper has not been detected.

3. The sensors may be blocked by debris. Clean the sensors and print head A.

- **Why is the print grey or faded?**

For best results, use Peach brand labels. You can also try cleaning the print head with alcohol.

- **Why is the printer skipping labels or printing incompletely?**

1. Check that the label size and the software print template match.

2. Reinstall the label roll and manually press the feed button D once so that the printer detects the gap between the labels.

3. Using non-genuine labels may result in poor print quality or size mismatch. We recommend using genuine Peach labels.

- **Why has the printer suddenly stopped printing?**

Certain safety measures have been implemented. The most common causes are the printer running out of paper or the battery being low.

- **How can I centre the label content whilst editing?**

1. On the right-hand side of the "Text" section, there are options for centring,

to the left or to the right – click to adjust the text's position in the text box.

2. For other designs or content, you can adjust the position by clicking on them and selecting the **"Align"** option. You can also move the text using your fingers.

LED indicator

Indicator	Status
Green flash	Charging
Light off	Fully charged
Red flash	Print head overheating or low battery level; printing cannot be completed
Steady red	The cover is open or there is no paper; printing cannot be completed
Solid blue	Bluetooth connection successful

Machine specifications

Printing technology	Direct thermal
Resolution	203 DPI
Print speed	60 mm/s MAX
Supported paper width	14 mm (12 mm available)
Supported paper type	Intermittent paper / continuous paper
Connection	Bluetooth
Paper cutting	Manual
Battery	1200 mAh
Charging	USB TypeC
Input	5V 1A DC
Operating environment	5–40°C, 90% RH (non-condensing)
Storage environment	5–40°C, 90% RH (non-condensing)
Expected service life	50 km
Product dimensions	79.5 x 30 x 130.6 mm



3T Supplies AG, Peach Division
Chaltenbodenstrasse 6D
CH-8834 Schindellegi (Switzerland)
Tel: +41 44 787 68 30 Fax: +41 44 787 68 50
Email: support@peach.info

Status of information · Last information update · Version of
information · Versione delle informazioni · Estado de las
informaciones · Uppgiftslämnare · Informationsstatus
· Status of information · Status of information · Status of information ·
Status of information: 04 / 2024
Ident. No.: PE110



Support information:
+8 00 8 070 60 10
support@peach.info

The content of this manual is subject to change without prior notice. Components, hardware, software and technology may be upgraded to ensure better functionality. Please direct any questions or concerns to the sales or customer service department.