

User


Manual



Safety Instructions

- Do not switch on or operate the unit before you have read the instruction manual.
- Do not look into the lens directly——this can cause eye damage.
- Do not let children get close to the projector as they may look into the lens directly.
- Do not turn on the projector before connecting with other components.
- Do not attempt to disassemble the machine, if the disassembly of the safety risks, will not be responsible.
- Do not cover the surroundings of the projector with soft materials such as blankets, and it is recommended to place the device on a table for use.
- Do not use the projector in a wet environment, do not place liquids on or close to the projector. Please pull out the power plug from the wall plug if the projector overheats and smoke appears.
- Do not block the air inlet and ensure the projector is placed in a well-ventilated location.


Projector Overview

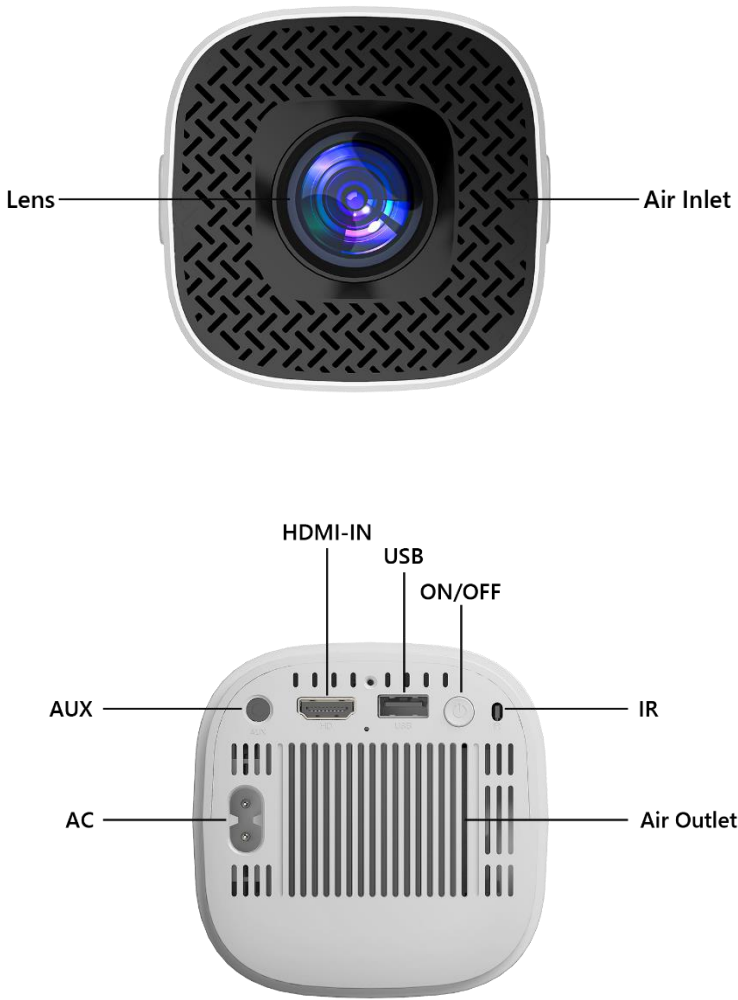

Do not block the air inlet and outlet.


Interface Description

- USB: Open and access files from the connected USB Device in the file manager and media center.
- HDMI IN: Display the picture of laptop and TVBOX through HDMI-in.
- AUX: Connect the 3.5mm audio device for Audio output.

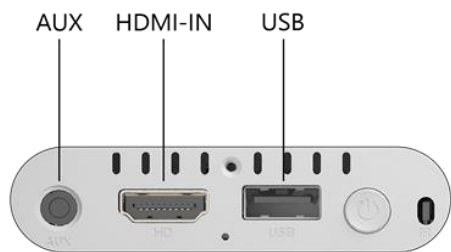


Android Desk

Select the different menus icon to enter the application interface from the User interface.

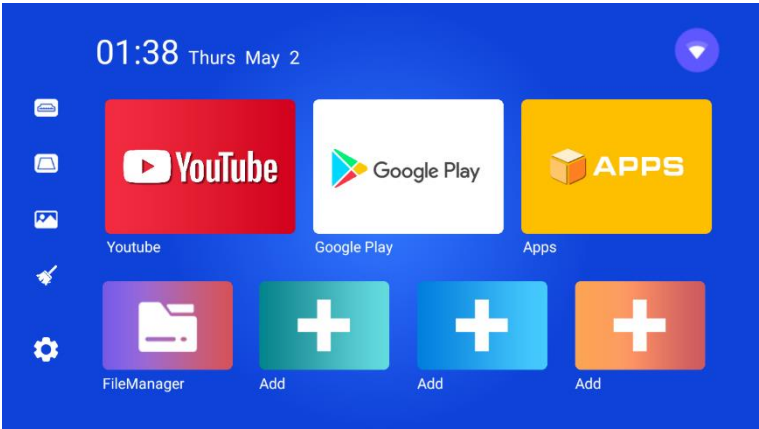


My Apps

Select the application you want to use.

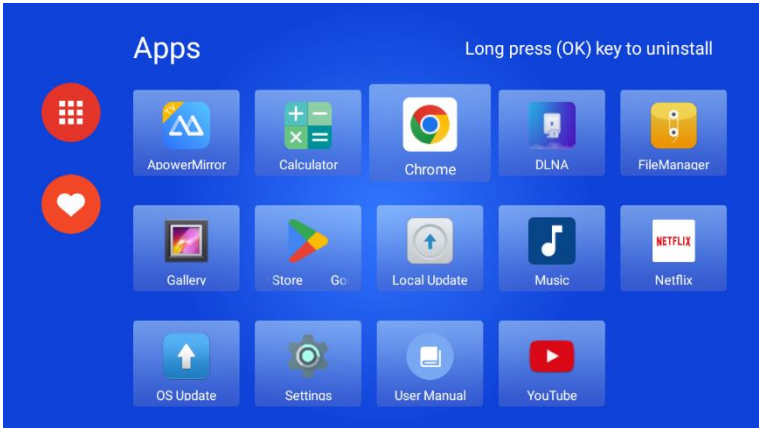


File Manager

You can view external storage devices such as USB drives in the file manager.

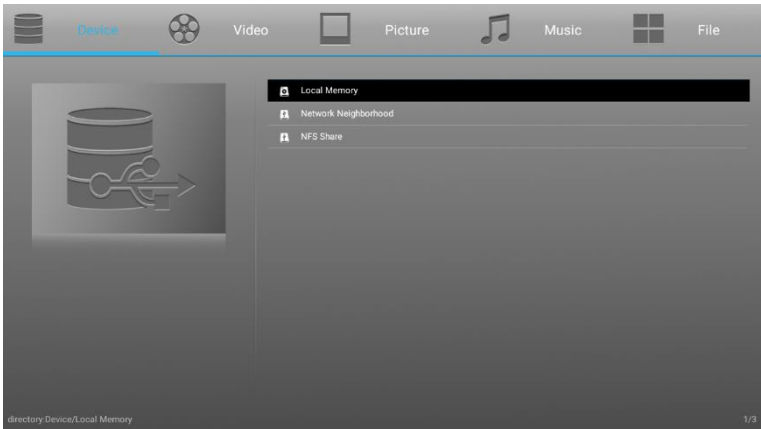

OS Update

You can view firmware version information, and system updates will be pushed when connected to the internet. Follow the system prompts to perform the update.

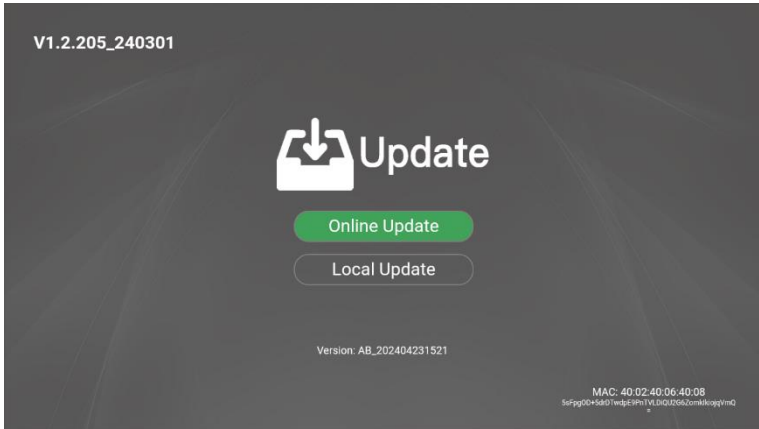


Projection

Keystone Correction


There are two ways of automatic keystone correction and manual keystone correction in this system.

Select in the “Settings” and go to “Keystone Correction”. After entering, turn off the “Auto” option, and you can make a manual keystone correction adjustment, turn on the “Auto” option and the system will enter the automatic keystone correction mode.

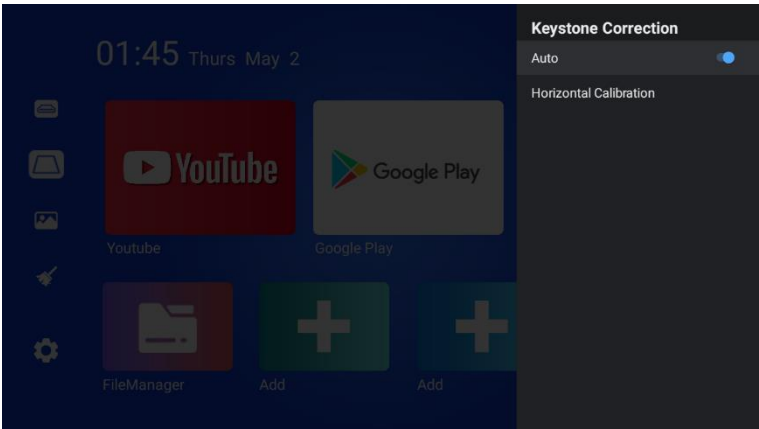


Manual keystone correction

Use the "OK" key of the remote control to switch the points to be adjusted, and then use the "direction key" to adjust different points. The "menu" key can reset the display effect, and the "return" key can return to the upper screen and save the adjustment effect.

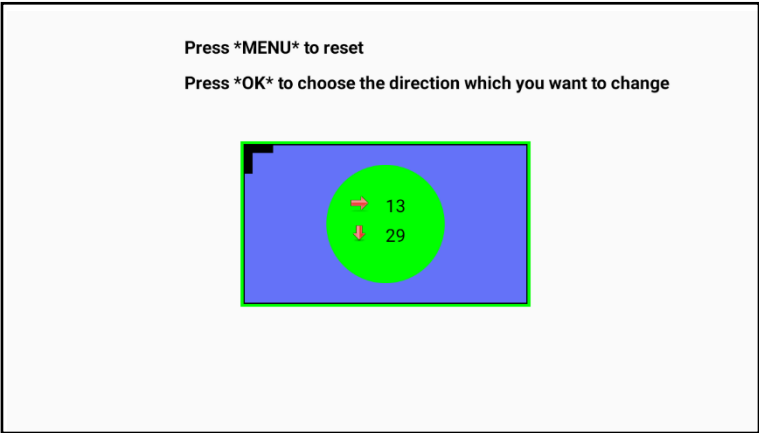


Projection Mode

Select and enter "Projection Mode", there are four options: "Front" "Rear" "Front/Upside Down" and "Rear/Upside Down".

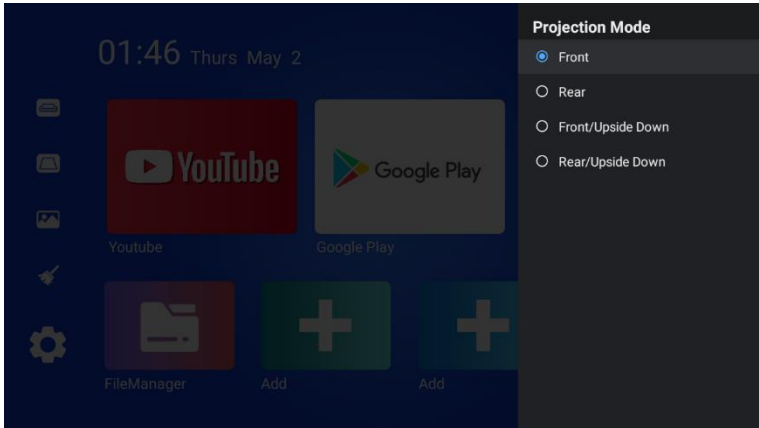

Screen Percent

Select and enter the "Screen Percent" option, and use the "up, down, left and right" keys of the remote control to adjust the display zoom, the "menu" key can reset the

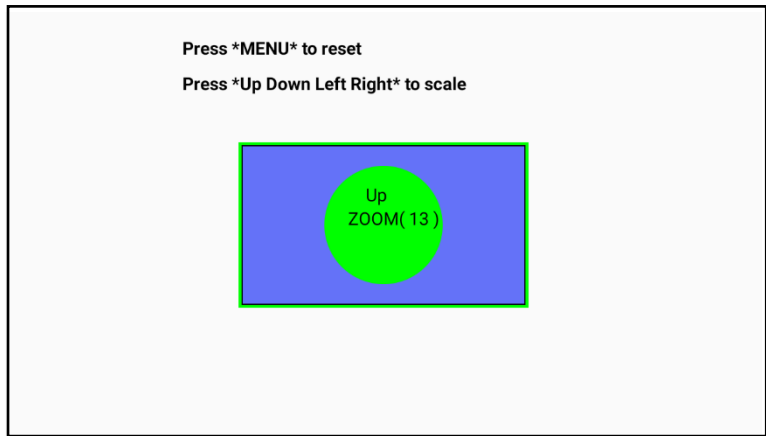


display effect, and use the "back" key to return to the "Settings" interface to save the adjustment effect.

Settings

Network Connect

Enter **Settings > Network** , In the Wi-Fi settings interface, connect to a network using one of the following methods:


- Select the target Wi-Fi network from the available network list. If the network is encrypted, you'll need to enter the password.
- Pull down the page, select **"Add new network,"** and follow the on-screen prompts to enter the network name and access password to complete the Wi-Fi connection.

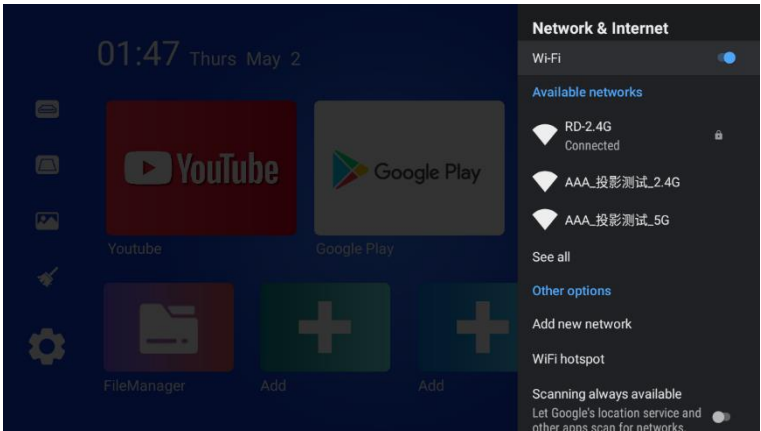

App Uninstall


- Go to **Settings > Apps > See all apps**. This will display all installed applications.
- Select the application you want to uninstall.

- On the app details page, select **"Uninstall"** and follow the on-screen prompts to complete the uninstallation process.

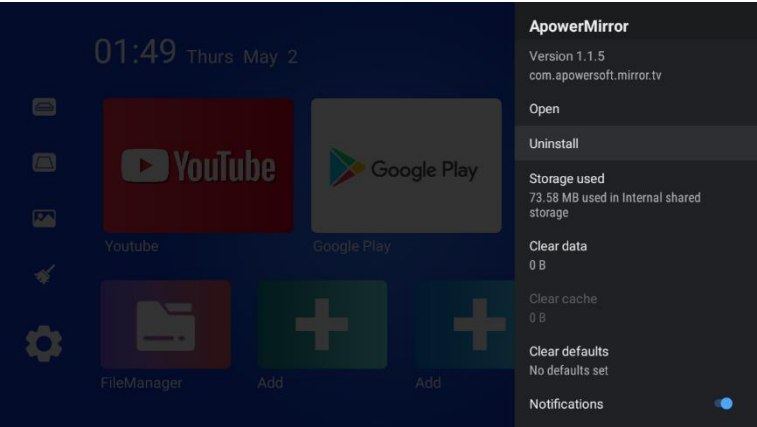

Reset

- Enter **Settings > Device Preferences**.
- Select **"Reset"** and follow the on-screen prompts to complete the system reset.

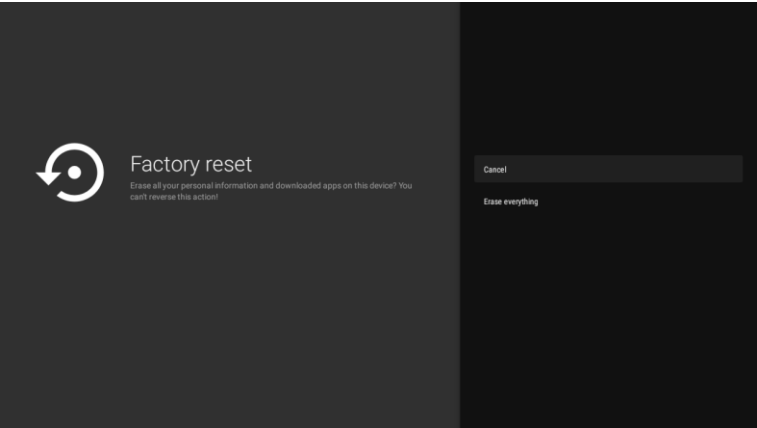

Common Troubleshooting Methods

- If the product fails to connect to the internet, check the network connection and ensure the wireless network settings are correct.
- If you encounter audio output issues or anomalies, check the audio connection and adjust the volume settings.
- If there is no display or display abnormalities, ensure the HDMI connection is secure and try replacing the HDMI cable.
- If the product fails to power on, check the power connection and ensure the power outlet is functioning properly.
- For other issues, please refer to the user manual or contact the relevant personnel for assistance.

Disclaimers

Our company reserve the right to make changes about the contents of this instruction manual without any advance notice. Please kindly understand.

Contact us

Hello, if you encounter any problems in use, or have any suggestions and function requests for this product, please contact us, we will help you solve it in time. Thank you for your company!

Contact information

- E-mail address: support@szhxws.com