

1

4G LTE Mobile WIFI User Manual



 
Please use this video link: <https://youtu.be/Urf-tGtbZQY>

2

2. Overview

The portable wireless router provides a simple way to share 4G with any Wi-Fi enabled devices.

2.1 Package contents



*Charger type depends on the importing country.

2.2 Application



4G Portable Router

2.3 Device overview



3

Button	Description
Power key	Press and hold for 5 seconds to turn the device on/off. Short press to put the LED in either active or sleep mode.
WPS KEY	Press and hold WPS for 3 seconds until WPS LED blink, the device enter pairing mode. Press any button to put the LED in either active or sleep mode.
Reset key	Reset button is located inside the back cover and is used to restore factory settings.

3.1 LED display

The LED display is interpreted as follows:



Item	LED display
Network indicator	LED is blue when connected to the internet or flashes when internet disconnected.
Wi-Fi indicator	LED is red when there's no network service or SIM card.
Wi-Fi indicator	LED is blue when Wi-Fi is active.
SIM indicator	LED is blue when you get a new message or flashes when inbox is full.
Battery indicator	LED is red when battery is low. Light blue LED and slow flashing during working. Light blue LED and quick flashing during charging. Light blue LED when full charged.

 
Power saving mode

If no Wi-Fi access or button pressing to the device within 30 seconds, all LED lights will automatically be off except battery LED.
Press any button / USB cable to connect device and PC / charging to light LED.
If no Wi-Fi access to the device within 30 mins, network dialing disconnects automatically.
Press any key or when Wi-Fi user access to device, Wi-Fi turn on.
If no Wi-Fi access to the device within 30 minutes, all LED lights will be automatically off. The Wi-Fi AP function will turn off automatically.
Press any button to turn Wi-Fi AP on.


4

3.5 Installing the device

Step 1: Open the back cover:
Note: Suggest to put your fingertips of two thumbs into the hole slot at the same time and pull the cover upwards to open.



 
Step 2: Insert SIM card and SD card to the card slot.
WARNING! Do not insert the micro SD card to the slot before opening the slot cover. Follow the mark on the slot to open and lock.

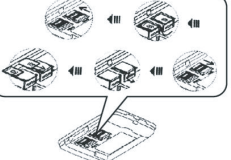

Step 3: Install battery.



 Step 4: Close the back cover:




5

3.6 Connecting in Wi-Fi mode

Wi-Fi name (SSID) and Wi-Fi key is located on the label under the battery.
Step 1: Use the Wi-Fi manager on the Wi-Fi embedded device to select Wi-Fi name (SSID).
From a Windows PC: Right-click Wireless network connection on the task bar and select "View Available Networks".
Choose SSID from the list of available networks.
From a Mac: Computer->System Preferences->Network->Airport, Click "Advanced" to choose SSID from the available networks.
From an iOS device: Settings->Wi-Fi, Choose SSID from the available networks.
From an Android device: Settings->Wireless controls->Wi-Fi settings: Choose SSID from the available networks.
Step 2: Enter the Wi-Fi key when prompted for a security key.

3. Quick Setup

 Launch the internet browser and enter <http://192.168.1.1> to refer to the label under the battery to the address bar. Enter the password to log in to the device configuration page.
Default high password: admin.
Log in and click "Settings" to configure the back settings.
Wi-Fi settings:
SSID: Set the Wi-Fi name of this device.
Security: Configure the security mode for Wi-Fi connection.

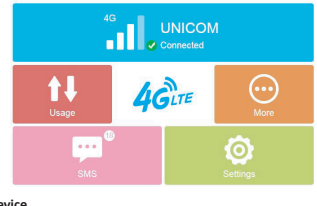

3. Charging the device

You have two ways to charge your device.
Charge with an adapter: adapter must support four wire line, or it won't be charged!
Connect a USB cable between the device and the head of the adapter and plug it into a power socket to start charging.
When the device is powered off, it takes a maximum of 3 hours before being fully charged.
Charging via USB
You can also charge the device by connecting it to a PC with the USB CABLE.
When the device is powered off, it will take a maximum of 4 hours to finish charging.
Note: In order to protect the battery, when low power LED indicator flashes, charge the device on time.

6

4. Safety and use

We recommend that you this chapter carefully before using this device. My Company disclaims any liability for damage, which may result as a consequence of improper use of the device or of use contrary to the instructions contained herein.



Do not watch on your device when its use is prohibited or when using the device may cause interference or danger.
Follow rules or regulations in hospitals and health care facilities. Switch off your device near medical apparatus.
Switch off your device in an aircraft. The device may cause interference to aircraft control signals.
Do not attempt to disassemble your device or its accessories. Only qualified personnel are allowed to service or repair the device.
Do not place magnetic storage media near our device. Radiation from the device may erase the information stored on them.
Do not subject your device to high temperatures or use it in a place with flammable gas such as a petrol station.
Enter your device and its accessories away from children. Do not allow children to use your device without supervision.
Only use approved batteries and chargers to avoid the risk of explosion.
Observe the laws or regulations on device use. Respect others' privacy and legal rights when using your device.

It is recommended that the equipment only be used in an environment where the temperature is between -10° C and 50° C and humidity is between 10% to 90%.

折后尺寸75*100mm