



User Manual

KR-088A

EN KR-088A Steam Styler Hair Straightener

SAFETY INSTRUCTIONS

WARNING - THIS APPLIANCE SHOULD NOT BE USED NEAR BATHTUBS, SHOWERS, BASINS OR OTHER VESSELS CONTAINING WATER OR OTHER LIQUIDS.




This product is not suitable for use in bath or shower.

THE STYLER SHOULD BE UNPLUGGED FROM MAIN POWER SUPPLY WHEN NOT IN USE

- ▶ Do not leave the Styler unattended when switched on.
- ▶ Allow the Styler to cool down before storing it.
- ▶ Do not immerse in water or other liquids.
- ▶ Do not place Styler on soft material e.g. carpet, bedding, towels, rugs etc.
- ▶ Always ensure the voltage to be used corresponds to the voltage stated on the unit.
- ▶ Keep this product out of reach of children.
- ▶ Avoid allowing any part of the hot plates to contact the face, neck or scalp.
- ▶ Do not wrap the cord around the unit. Check cord regularly for any sign of damage.
- ▶ Damaged cords can be dangerous. If the cord of this unit becomes damaged, discontinue use immediately, contact us for repair or replacement in order to avoid a hazard.

- ▶ We do not accept responsibility for damages to the product, persons or other items, caused by misuse, abuse or non-compliance of these instructions.
- ▶ Do not use any other liquid other than water in your Styler to avoid damage to unit.

HOW TO FILL THE WATER TANK

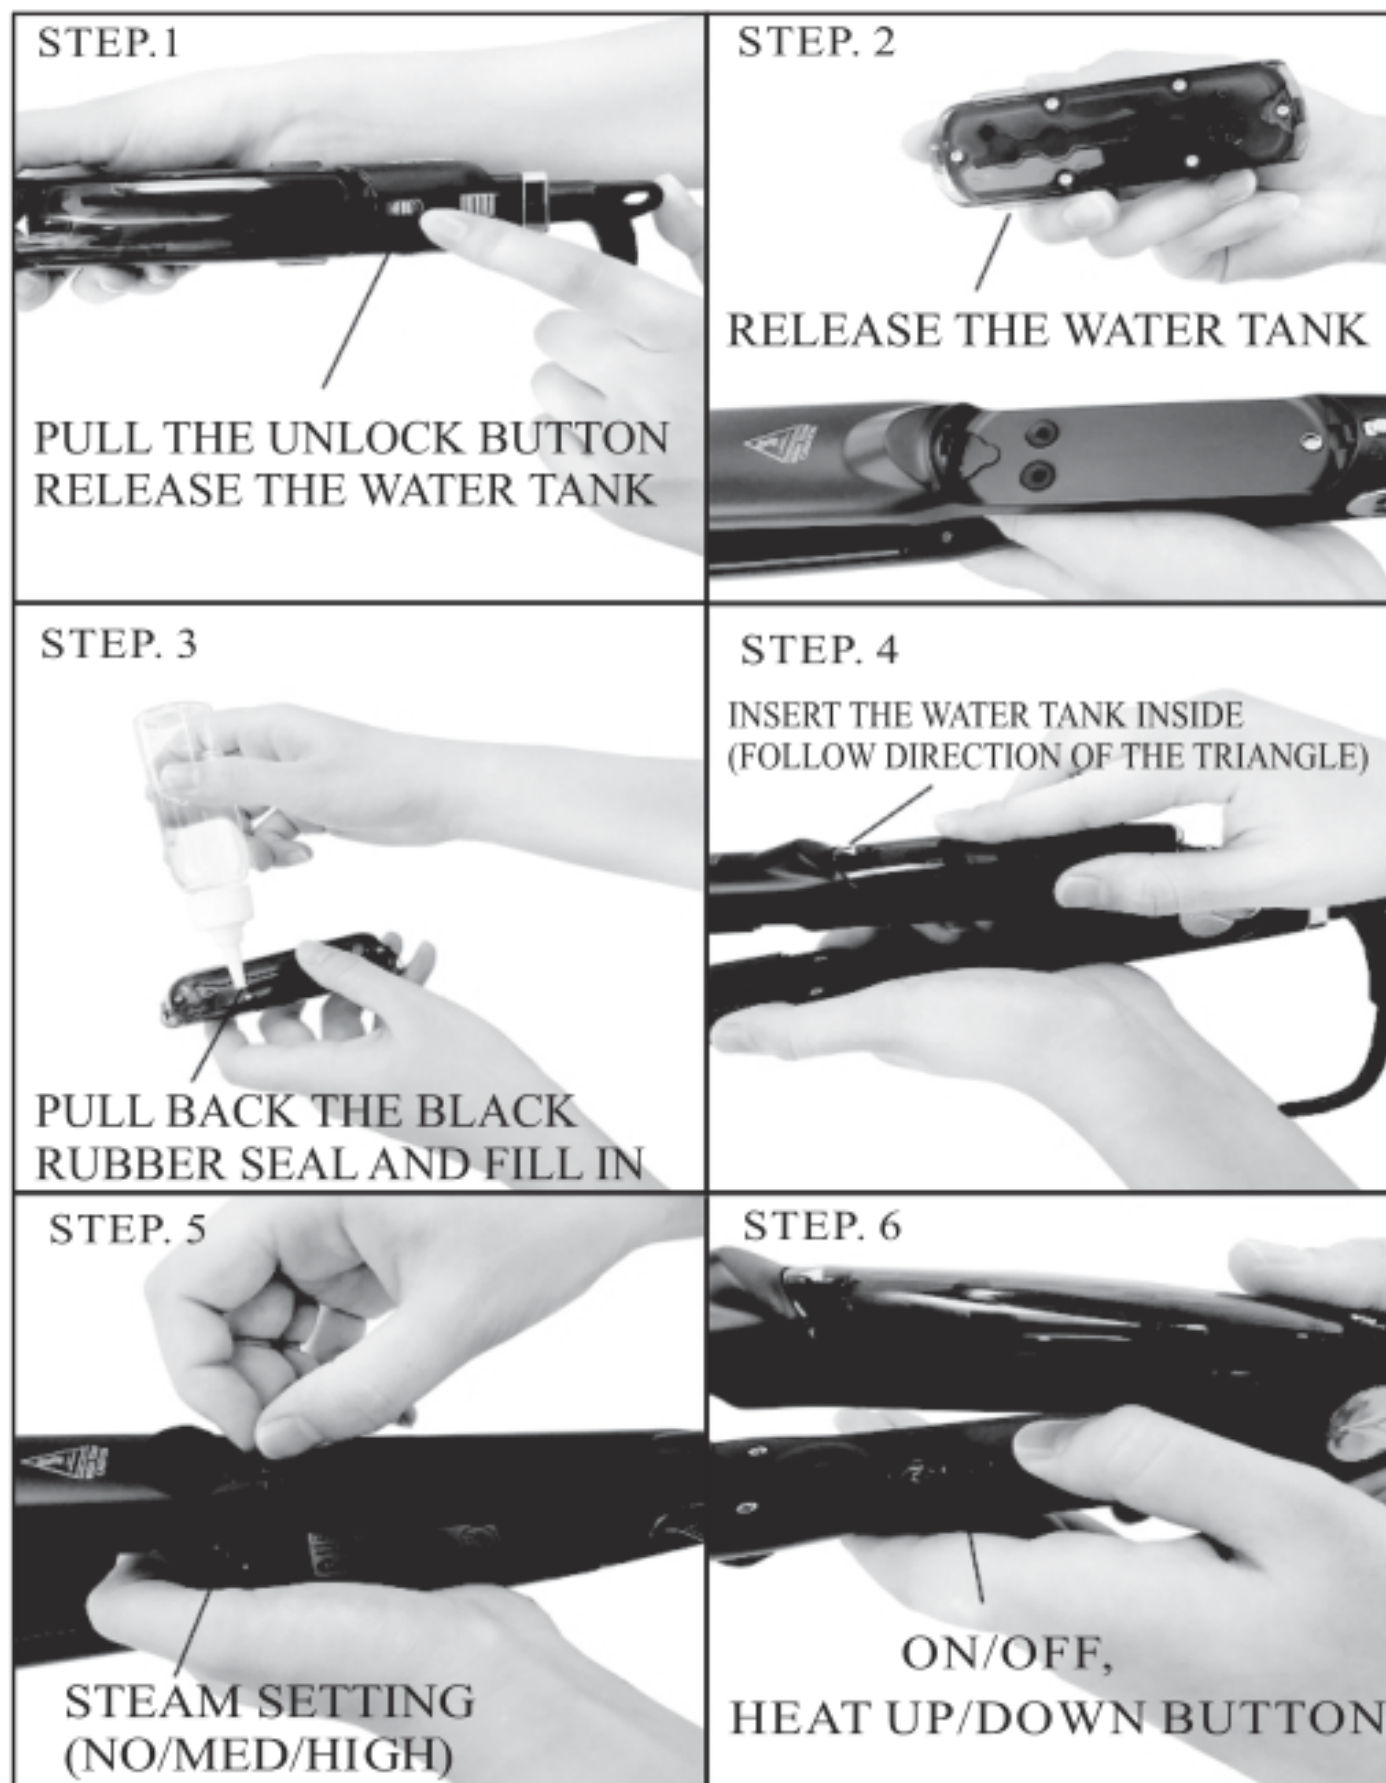


STEAM RELEASE SETTING

There are 3 settings on the Steam Release Dial. Please see the underside of the Styler. See diagram below.


The settings are:

1. FIG.1 OFF - No Steam
2. FIG.2 - Medium Steam
3. FIG.3 - High Steam

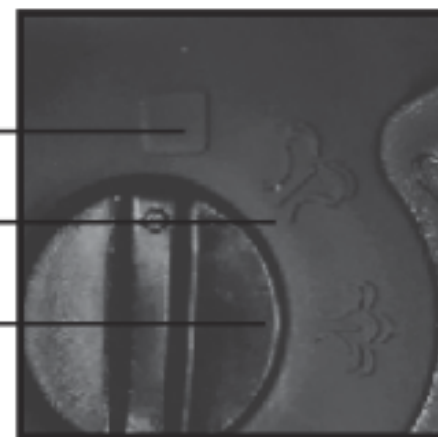


To release the Steam turn the button clockwise to the desired steam position.


***CAUTION:** Note the Steam activates over 100°C/212°F

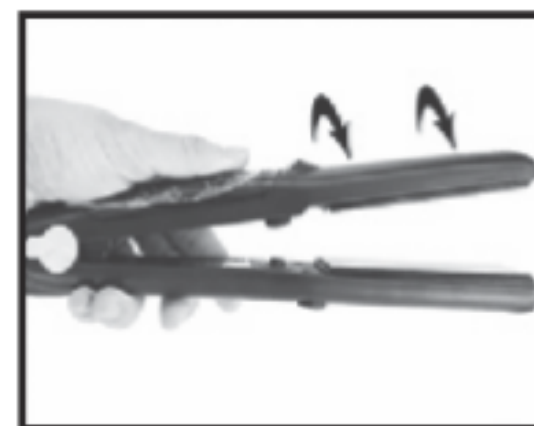

As you start to use the Styler you will notice steam start to come through the steam vents.

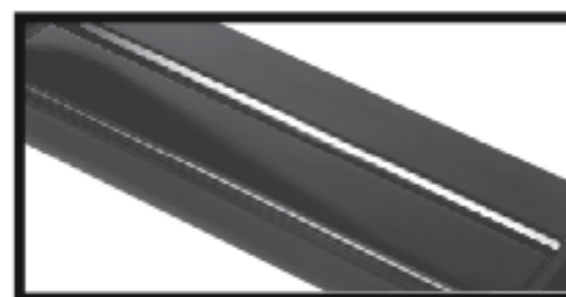

FEATURES & BENEFITS

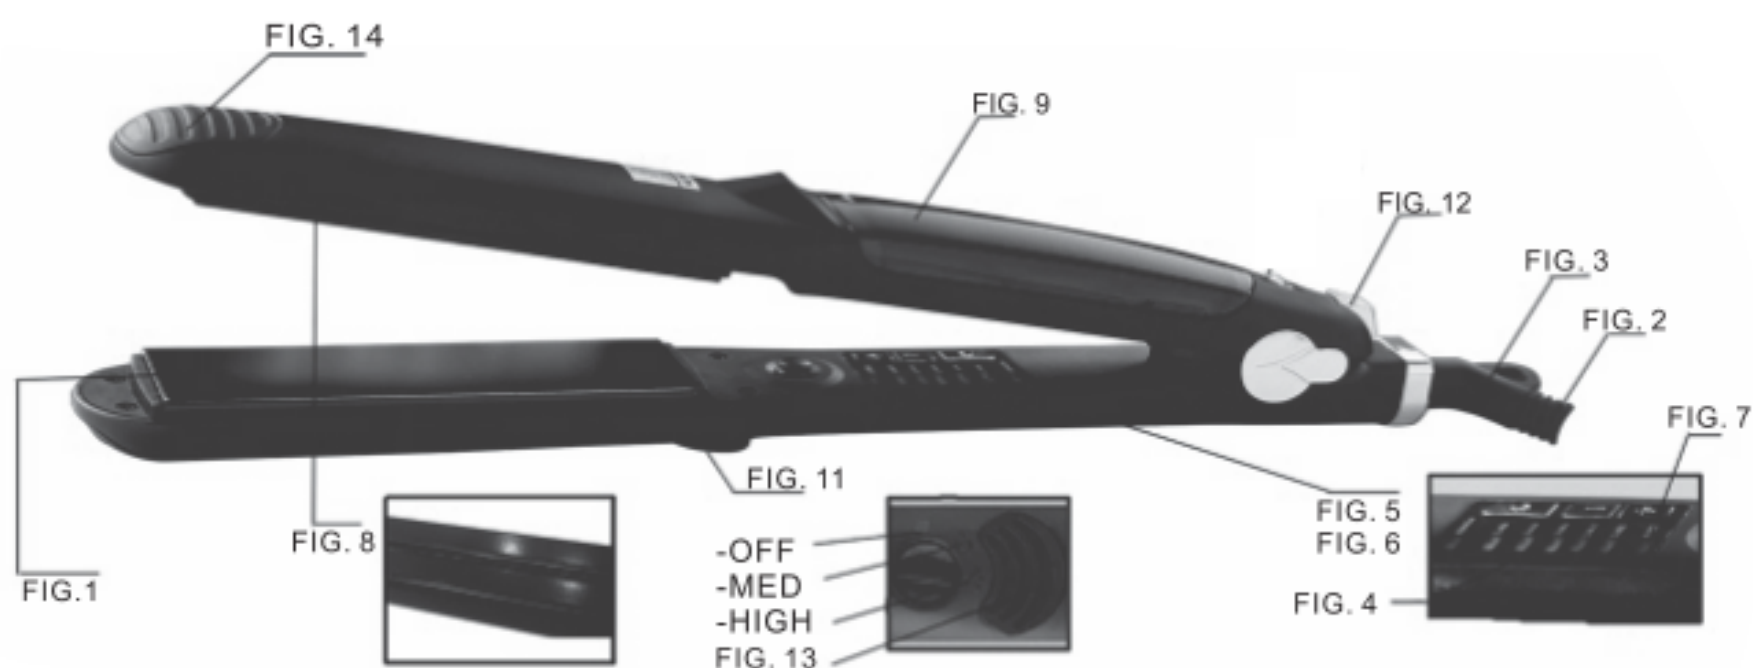

- FIG 1. EXTRA WIDE CERAMIC TOURMALINE PLATES 1 1/4"
- FIG 2. 2.5 METRE EXTRA-LONG (8.2') PROFESSIONAL BURN RESISTANT CORD
- FIG 3. 360° SWIVEL CORD
- FIG 4. DIGITAL GREEN LED LIGHT INDICATOR
- FIG 5. DIGITAL LED LIGHT TEMPERATURE CONTROL HEATS UP TO 450°F/235°C
- FIG 6. 6 DIGITAL TEMPERATURE SETTINGS
- FIG 7. SEPARATE ON/OFF BUTTON WITH LED FLASHING LIGHT INDICATOR
- FIG 8. 5 CONDITIONING STEAM VENTS
- FIG 9. WATER TANK
- FIG 10. TANK - LOCK SWITCH
- FIG 11. 3 CONDITIONING STEAM SETTINGS OFF/MED/HIGH
- FIG 12. PLATE LOCKING SWITCH FOR STORAGE AND TRAVEL
- FIG 13. BUILT IN HEAT RESISTANT PAD
- FIG 14. HEAT- PROOF TIP
- DUAL VOLTAGE-GREAT FOR TRAVEL
- 1 HOUR AUTO SHUT OFF

INSTRUCTIONS FOR USE

- ▶ Before use, make sure hair is clean and tangle -free.
- ▶ Fill the tank to your desired level with water. (Our product will have $\pm 10^{\circ}\text{C}$ temperature difference).
- ▶ Before use remove yellow protective film from the surface plates.
- ▶ Plug in the unit, press and hold the on-off switch until LED light turns on.
- ▶ Temperature flash until desired temperature is reached and then the unit will stop flash when ready to use.
- ▶ Run the straightener through the entire length of the hair, without stopping.
- ▶ Repeat only twice per section to prevent hair damage.

STRAIGHTENING YOUR HAIR

STEP1: Prep your hair. Make sure your hair is clean & tangle -free.

STEP2: This information below is geared at persons with medium & shoulder length hair. Take a 2 wide x 1/4" thick section of hair. Move the Styler over the sectioned hair starting at the roots about 1/4" away from the scalp. Run the Styler slowly through to the ends of the hair with light pressure.

STEP3: Repeat this process, section by section until your hair is completely straight, soft and smooth.

CURLING YOUR HAIR

The steam Styler's rounded edge plates enable you to also create curls and light waves.

STEP1: Prep your hair. make sure your hair is clean & tangle -free.

STEP2: Take a small section of hair, and insert it into your Styler. Your sections can vary in size for depending on the size of curl you are trying to obtain.

STEP 3: Twist your wrist, (the one holding the Styler), about a half-turn, then pull, and twist again. For a beach wave, keep the ends of your hair out of the Styler. Repeat on entire head.

STEP4 (ALTERNATE): Twist and pull just as Step 3 indicated, but for a tighter curl, twist the mid-shaft to ends around the entire iron mimicking what you would do with a curling iron.

TIP: You may want to change the direction of your curls near you face based on personal preference.

SUGGESTED STYLER TEMPERATURE SETTING	HAIR TYPE
LOW 150°C = 304°F	Fragile, very fine textured hair
Medium 190°C = 374°F	Normal, medium textured Hair
High 235°C = 450°F	Thick resistance, coarse textured Hair

CLEANING AND MAINTENANCE

Ensure the unit is unplugged and cool. To maintain the effectiveness of your product, wipe clean after use with a damp cloth. Do not use an abrasive cleaning fluid to clean, as damage will occur.

SERVICE AND WARRANTY

This product has been checked and is free of defects. We warrant this product against any defects that are due to faulty material or workmanship for the warranty period from the original date of consumer purchase. If the product should become defective within the warranty period, we will repair any such defect or elect to replace the product or any part of it without charge provided there is proof of purchase. This does not mean an extension of the warranty period.

If you find the water tank has a little water that is normal, as our product is 100% tested with water as part of our quality control procedure.

128G铜版纸，不过胶
尺寸：95*125MM
折页装订
黑白印刷