

Bluetooth OBDII

User Guide


Bluetooth OBDII for Android

1. Install OBDII




2. Install **Torque** Android software

a) Copy software to phone from CD

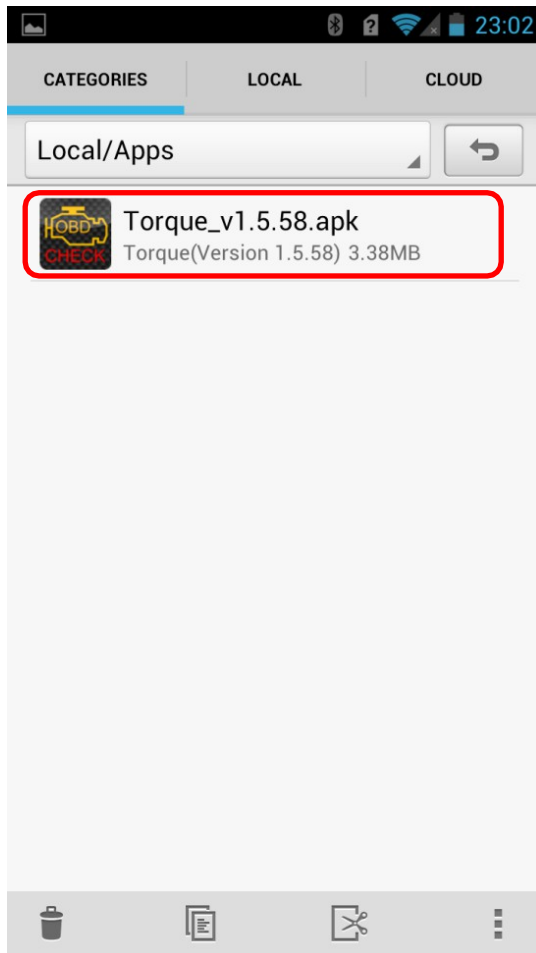


b) Install software

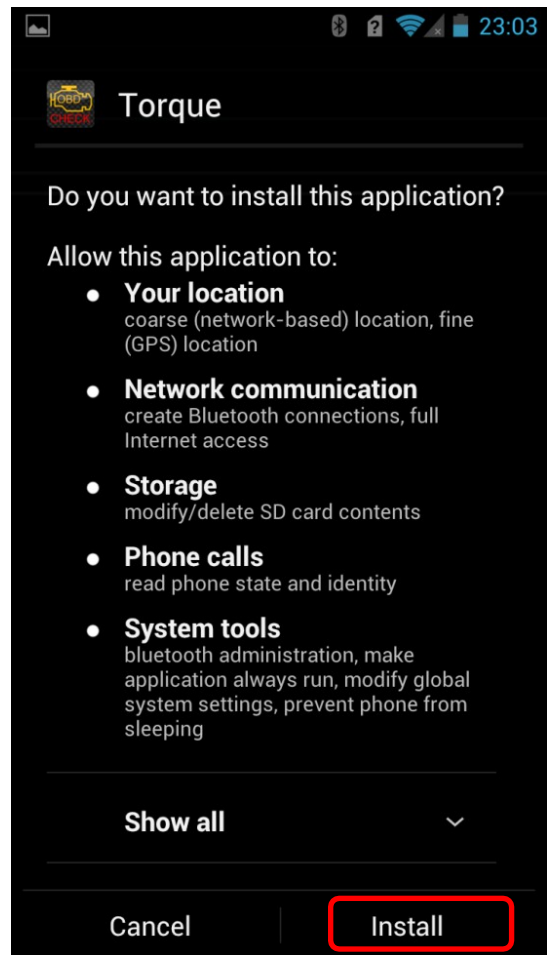


3. Connect OBDII


a) Search OBDII Bluetooth

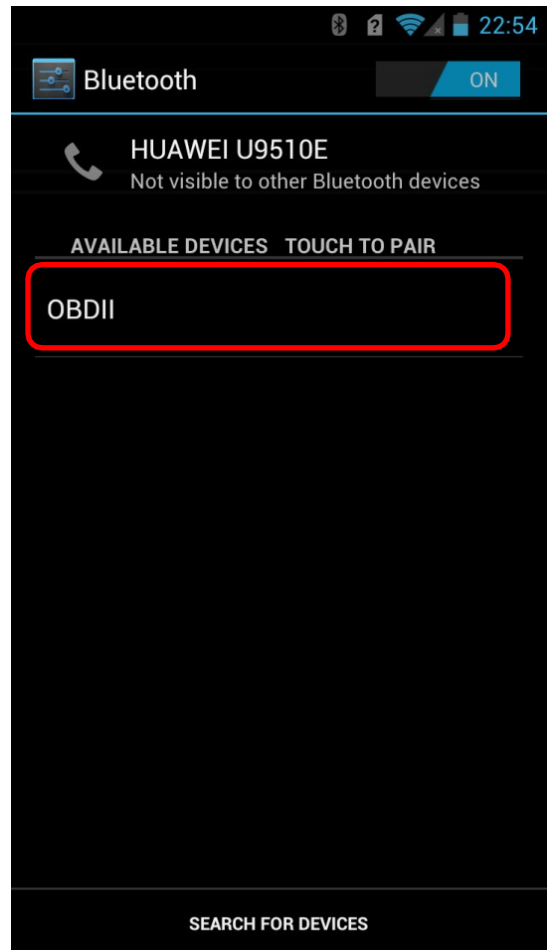

- b) Enter the password "1234"


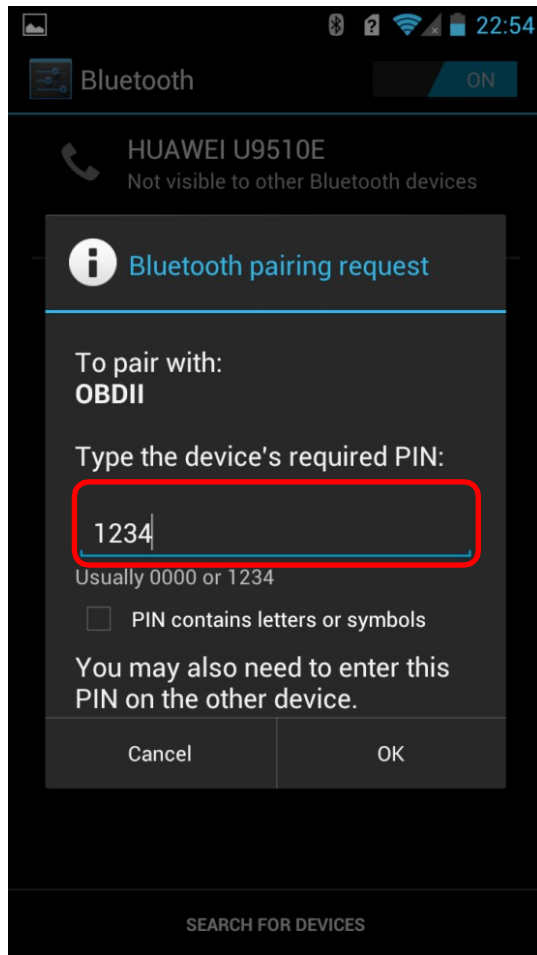


- c) Connection successful


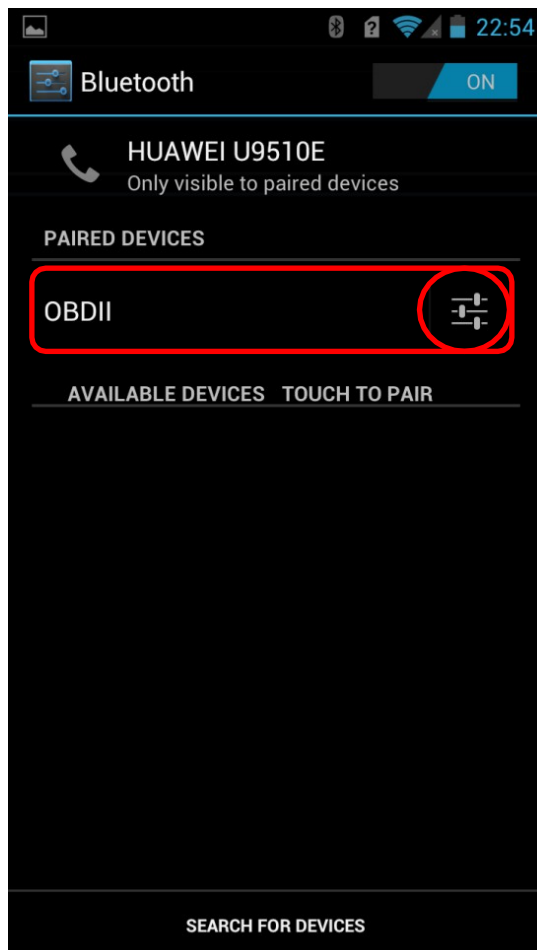


4. Run software



Click the **Menu** button to set up the Bluetooth connection

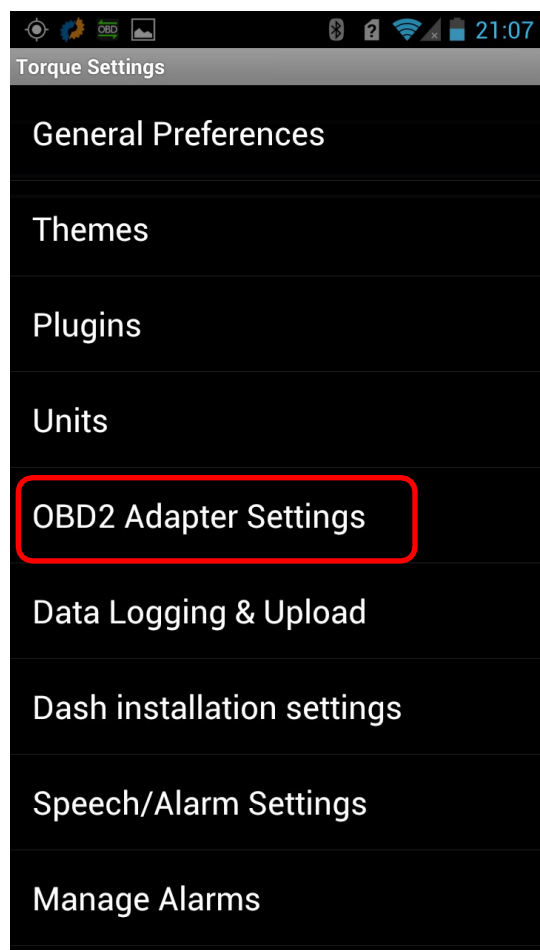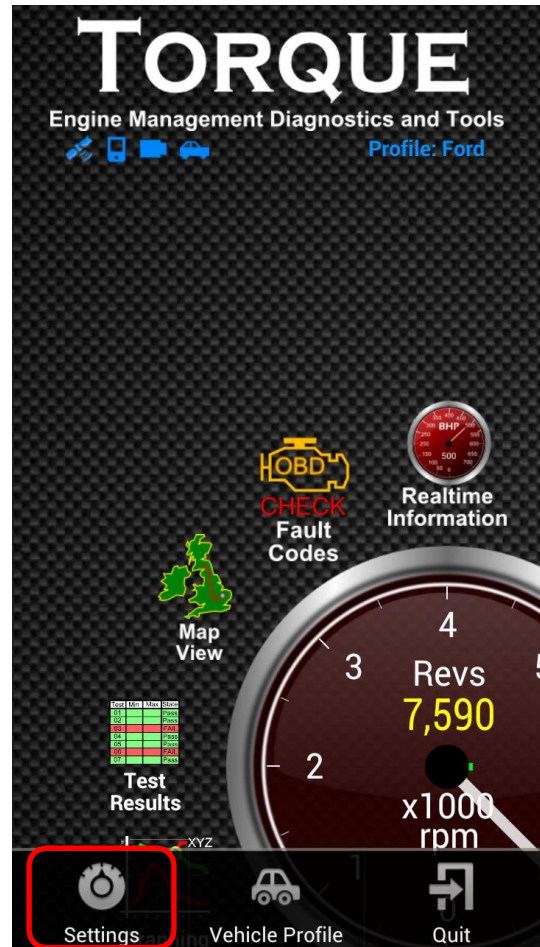

a) Select **Bluetooth** as the connection type

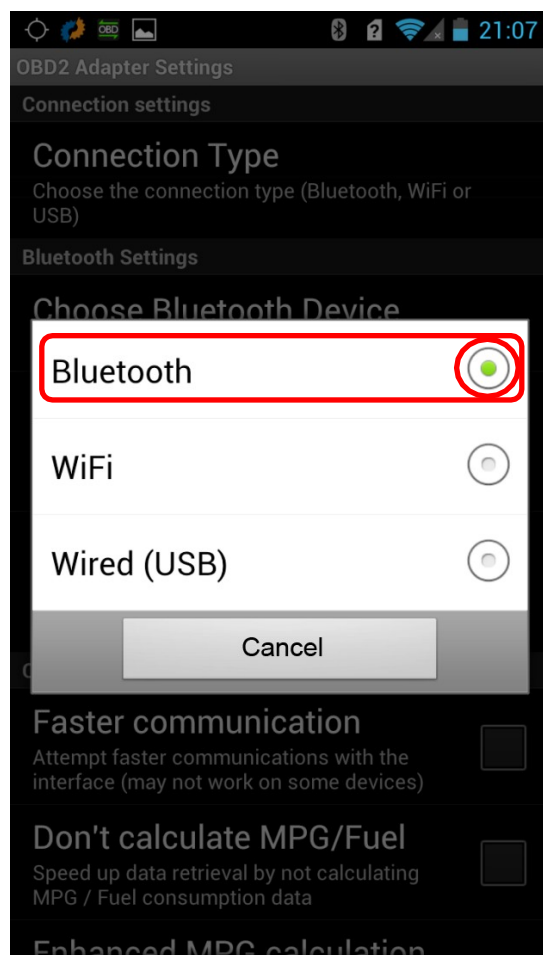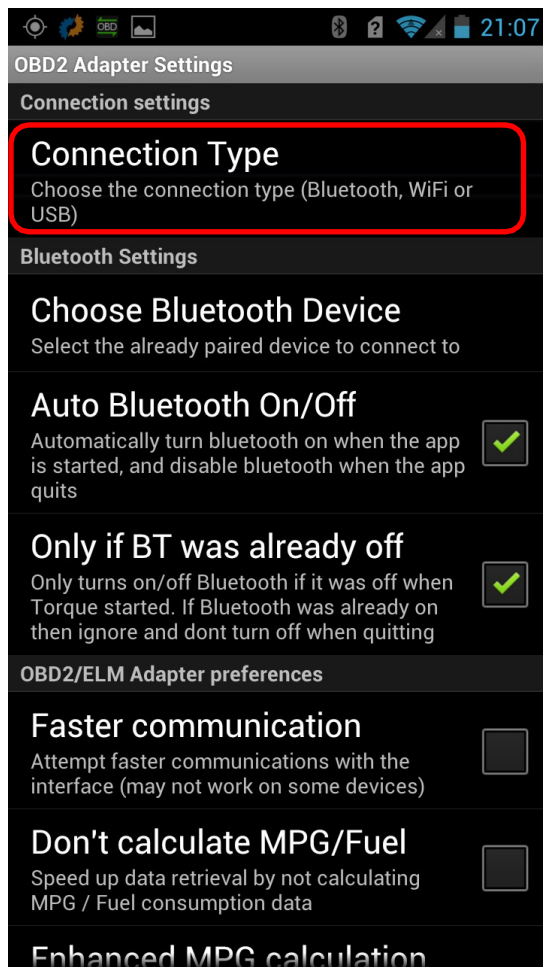

b) Select the Bluetooth device as **OBdII**

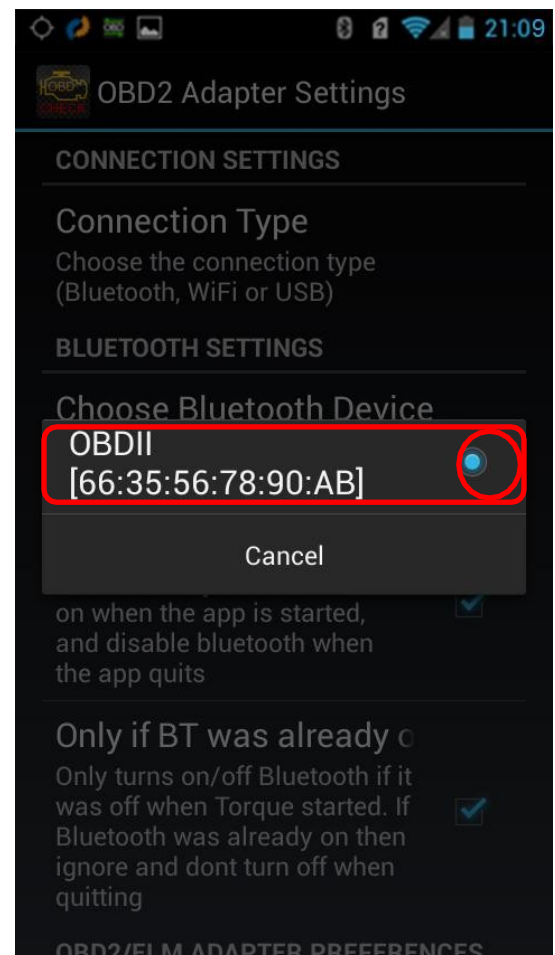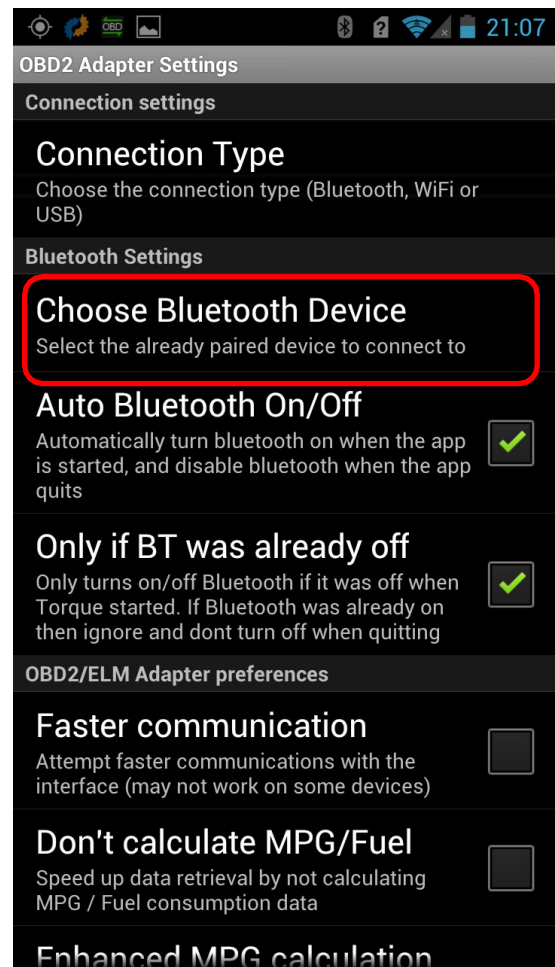

Exit Torque, and re-run the software. Connection successful





Adapter Status Information

Bluetooth Enabled

Is the device bluetooth enabled?

Yes

OK

Connection to adapter

Are you connected to the bluetooth adapter?

Yes

OK

Connection to ECU

Can the adapter talk OK to the vehicle ECU?

Yes

OK

Adapter Error Count

This should stay on 0, if not then you potentially have a faulty adapter.

0 errors, 0 other faults

OK

Adapter Manufacturer

Who made the bluetooth OBD adapter

OB2II to RS232 Interpreter

Adapter Version

The firmware version of the adapter

ELM327 v1.5

Adapter Notes

Information about the bluetooth adapter

Cheap clone versions of this adapter (mostly found

