


稳拍器自拍杆 L08
SELFIE STICK TRIPOD



使用说明

取出自拍器

先拉出杆子再向上滑动即可取出自拍器

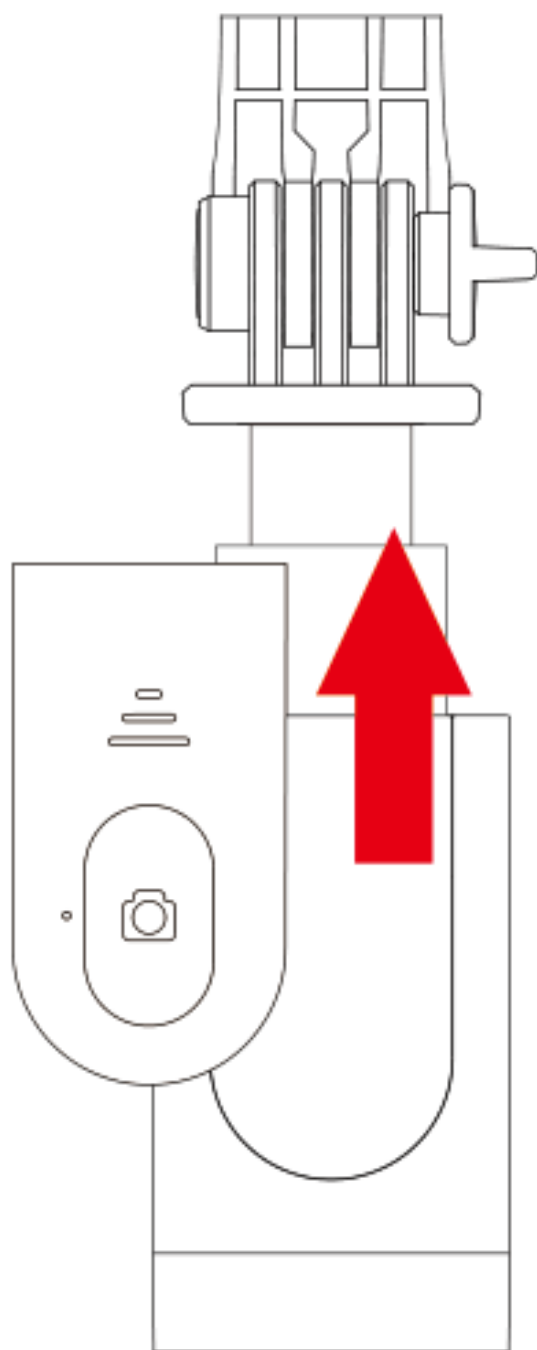


怎样使用自拍器


- 长时间的按压将在2秒内开启。机器打开后，LED指示灯就会闪烁，使用手机搜索蓝牙“Gimbal Selfie”来匹配，LED指示灯在与手机配对后将熄灭。
- 点击按钮来拍照，LED指示灯闪烁一次。
- 没有配对连接状态的180秒，自动关机。
- 在匹配连接状态中，600秒没有任何操作，自动关机。
- 长按3秒关闭;当关闭时，LED指示灯会闪烁3次。

怎样打开三脚架


在手柄底部位置向外打开，秒变三脚架

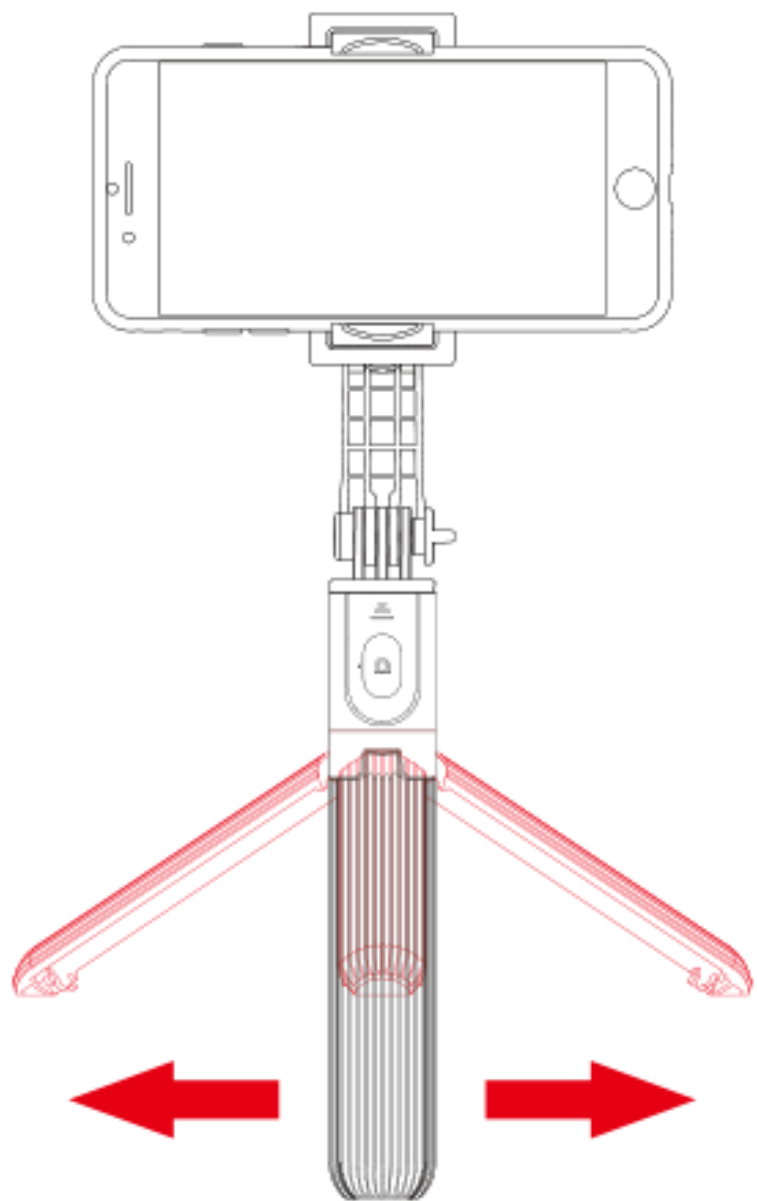

云台支架使用方法

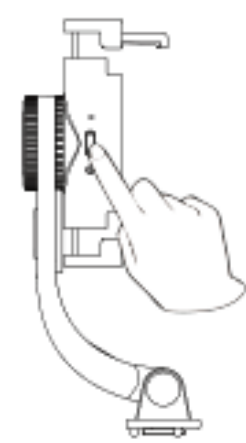

夹好手机并保持自然平衡，长按云台电源键5秒开机，长按3秒关机。

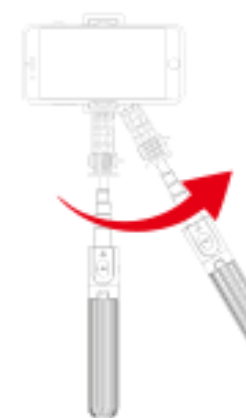



开机之后绿灯闪烁进入稳拍模式，左右晃动手柄，云台始终保持同一水平方向。



单击一下云台支架电源键横竖拍切换；手动向左(右)拨超过45°持续2秒，云台自动向左(向右)旋转90°。


自拍杆模式

当云台没电或者关机时候，滑动一下解锁键，变成三脚架模式。

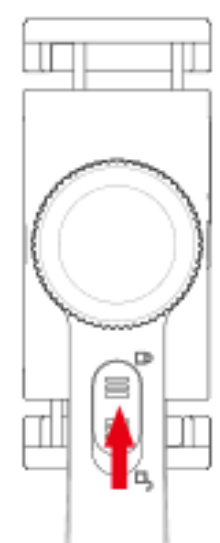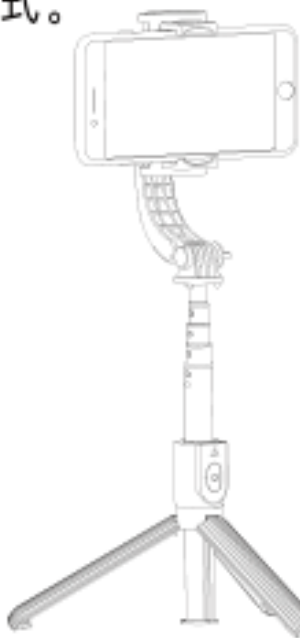

云台电量低的时候，会有红灯闪烁提醒，此时要使用Micro USB接口充电；充电过程表示红灯长亮；完成充电后红灯熄灭。

Micro USB接口

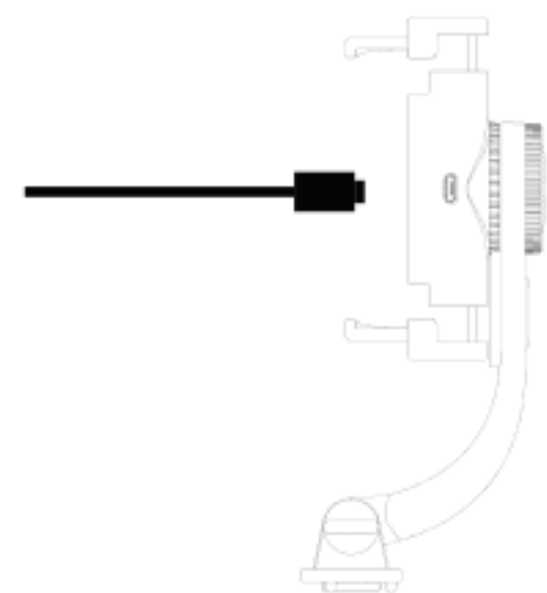

提醒

- 如果本机经历过剧烈温度或湿度变化，开机出现不平衡现象，请如下操作：将云台关机然后拆下，如图所示平放在桌面开机，然后连续短按按5次云台电源键，出现蜂鸣后手动关机；开机之后云台功能即可恢复正常。
- 自拍杆兼容Android4.2.2（如果你在手机相机选项下改变了系统的“音量键功能”，一定要把它改成默认，或者“拍照”，让自拍杆正常工作）
- 空载会有异响是正常的，夹上手机就不会异响。
- 手机夹住的时候必须要贴紧夹子。

- 稳拍模式：最佳使用在3节伸缩杆内（50cm内）
- 自拍杆模式：建议使用5节伸缩杆（70cm内）

感谢您的支持！

FC CE RoHS


GIMBAL STABILIZER L08
SELFIE STICK TRIPOD



User Manual

Remove the remote control

Pull out the lever and then slide up to remove the selfie stick.

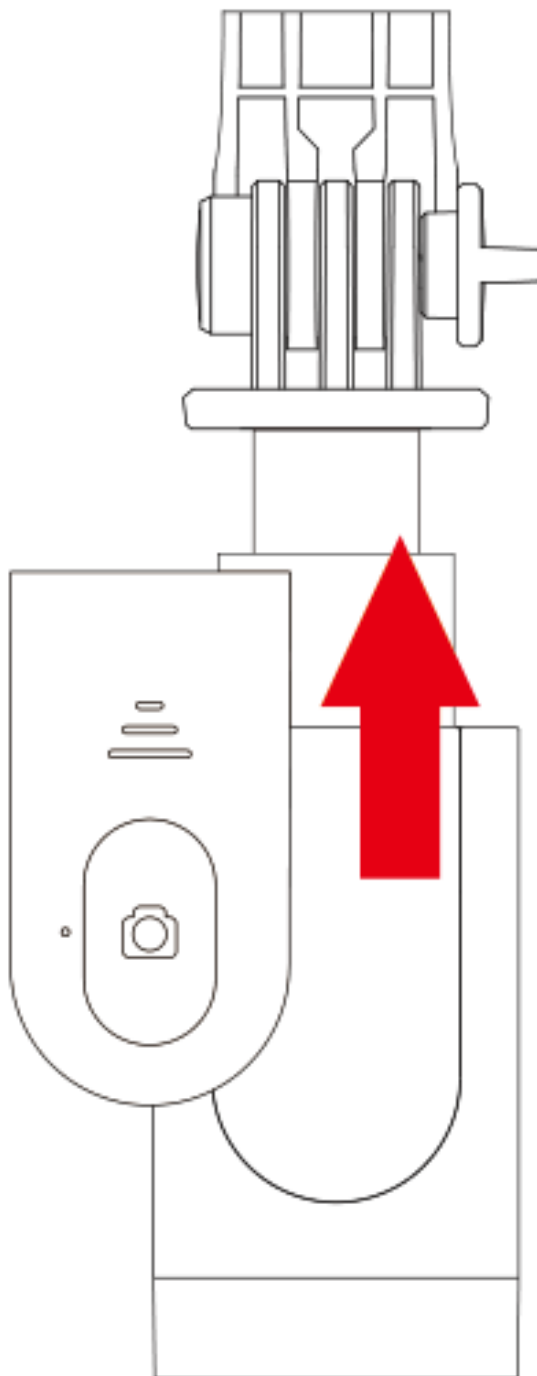


How to use


- The long press will open in 2 seconds. When the machine is turned on, the LED indicator flashes and matches with Bluetooth "Selfie" by mobile phone search. The LED indicator will go out after matching with the mobile phone.
- Click the button to take a picture and the LED flashes once.
- There is no pairing connection status for 180s and automatically shuts down.
- In the matching connection state, 600s without any action, automatically shut down.
- Press and hold for 3s to turn it off, and when off, the LED flashes 3 times.

How to open a tripod


Open outwards at the handle position and it can be turned into tripod mode.

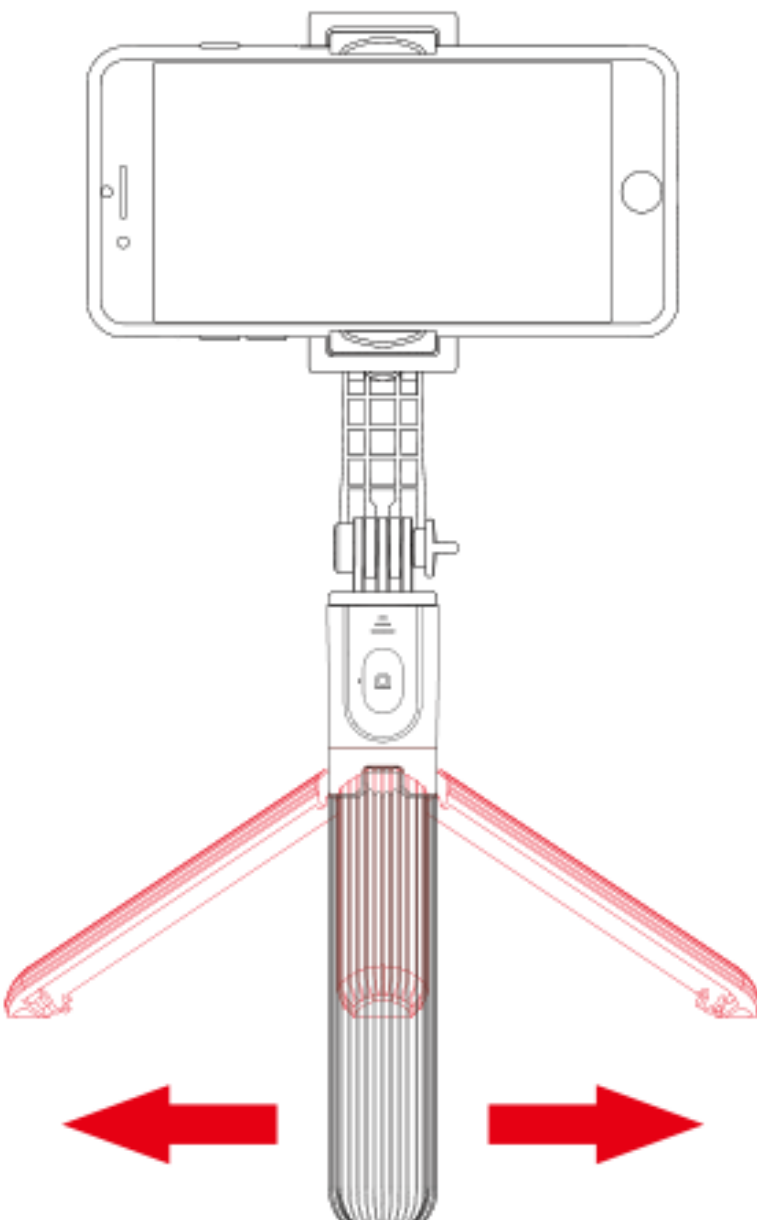

Usage mode of pan-tilt holder

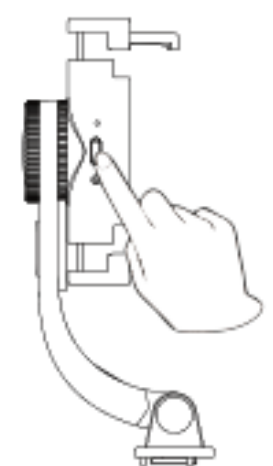

After clamping the phone and keeping the phone in natural balance, press and hold Pan-tilt power key for 5 seconds to start up, Press and hold for 3 seconds to shut down.

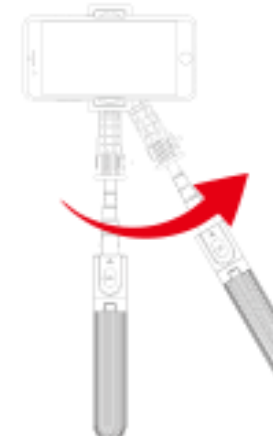


After starting up, the green light flashes to enter stable mode, shake the handle left and right, the phone will always maintain a constant direction.



Click the power button of the pan head bracket to switch between horizontal and vertical beats; manually dial left (right) for more than 45° for 2 seconds, and the pan head automatically rotates 90° to the left (right).


Selfie stick mode

When the pan-tilt is not available or turned off, swipe the unlock key to turn it into tripod mode.

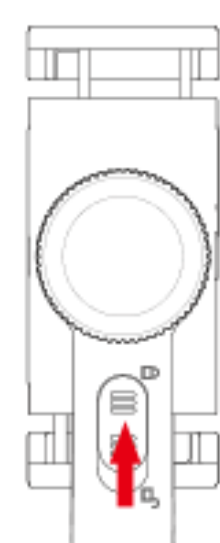

When battery of the pan-tilt is low, there will be a red light flashing to remind you that you need to use the micro USB interface to charge; the charging process indicates that the red light is on for a long time; after charging, the red light goes out.

Micro USB

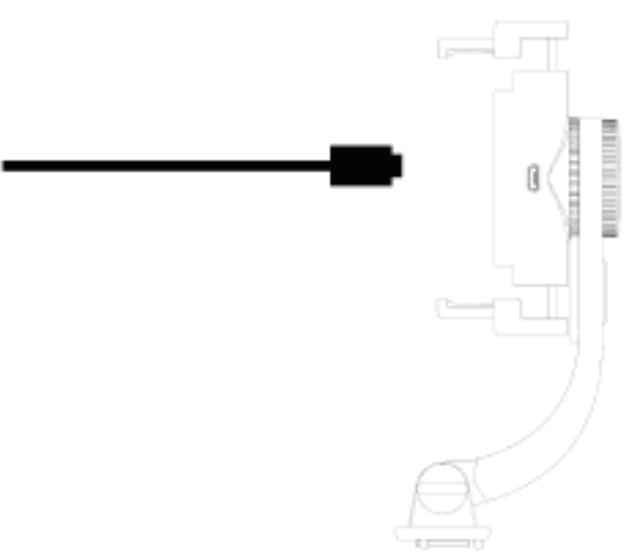

REMIND

- If the machine has experienced severe temperature or humidity changes, and the machine is unbalanced during startup, please operate as follows: Turn off the pan-tilt holder and remove it, just like this. Lay it flat on the desktop and turn on the power, then press the pan-tilt power key for five times continuously, and manual shutdown after beep; After power on, the pan tilt function can be restored to normal.
- The selfie stick is compatible with Android 4.2.2, Android devices and IOS 5.0 or above of iPhone (if you change the "volume key" function of the system under the camera option of mobile phone, you must change it to the default, or "take photos" to make the selfie stick work normally)
- When clamping the phone, it must be pressed against the phone clip.

- Stable Mode: Best use in 3 telescopic rods (within 50cm)
- Selfie Stick Tripod Mode: 5 telescopic rods are recommended (within 70cm)

Thank you for your support!

FC CE RoHS