
ACTION CAMERA

USER MANUAL

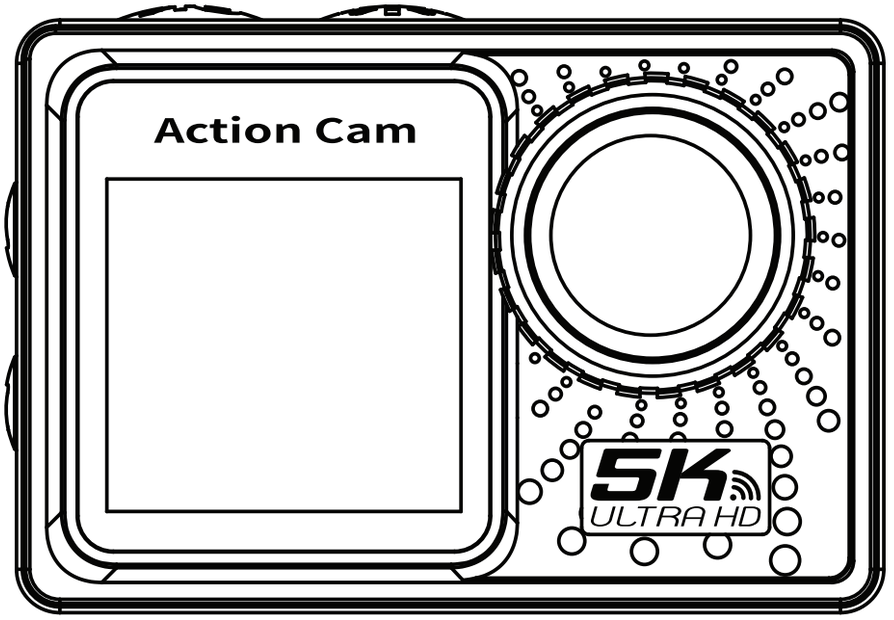

5K ULTRA HD

24MP

Waterproof

Wi-Fi

Operation note

1. This product is high precision products, do not fall or impact.
2. Please don't close to the camera with strong magnetic objects, such as magnets and motors, in addition to avoid the product near the issue of strong radio waves of objects, strong magnetic field may can cause product failure, or destroy images and sound.
3. Please don't place the camera at a higher temperature or direct sunlight.
4. Please choose the brand Micro SD card, ordinary card can not guarantee normal use.
5. Please don't store the micro SD card in or near the strong macnetic place to avoid missing Micro SD card storage data.
6. Charging process, if overheating, smoke, or smel, please pull out the power immediately, stop charging to avoid fire.
7. Please put the product out of reach of children when charging, power line may cause a child's accidental suffocation or shock
8. Please send the product in a cool, dry place and the vast dust.

Foreword

This sport camera is a High-end HD camera product which could meet the customer's needs , with powerful function for take HD videos, photos, Slow motion, voice recording, video dlisplay, and changeable battery, it's the best choice for outdoor sports photography, home security monitoring, waterproof photography, you can record your life whenever and wherever you want.

Multipurpose


Car recorder


Outdoor sports



Marine Sports


Diving

Product Feature


> Provide waterproof function waterproof shell, convenient for you to shoot wonderful water sports, waterproof shell can be deep waterproof 30 meters
> Shooting function
> Video resolution Max 5K @30fps
> Wide-angle170°
> 24MP HD Lens
> Low power consumption, the WiFi opened 90 minutes available
> Ultra HD 2”+1.4” display screen, display and replay video shot
> Changeable battery, easy to replace, prolong the service life
> Charging function while recording
> Supports up to 128GB memory card
> Multiple video recording formats 5K, 4K, 2.7K, 1080P, 720P
> MP4 video format
> JPG photo format
> Photo modes: Photo, Auto, Burst, Timer
> Video modes: Video, Slowly, Loop, Lapse
> Mini appearance


Function introduction

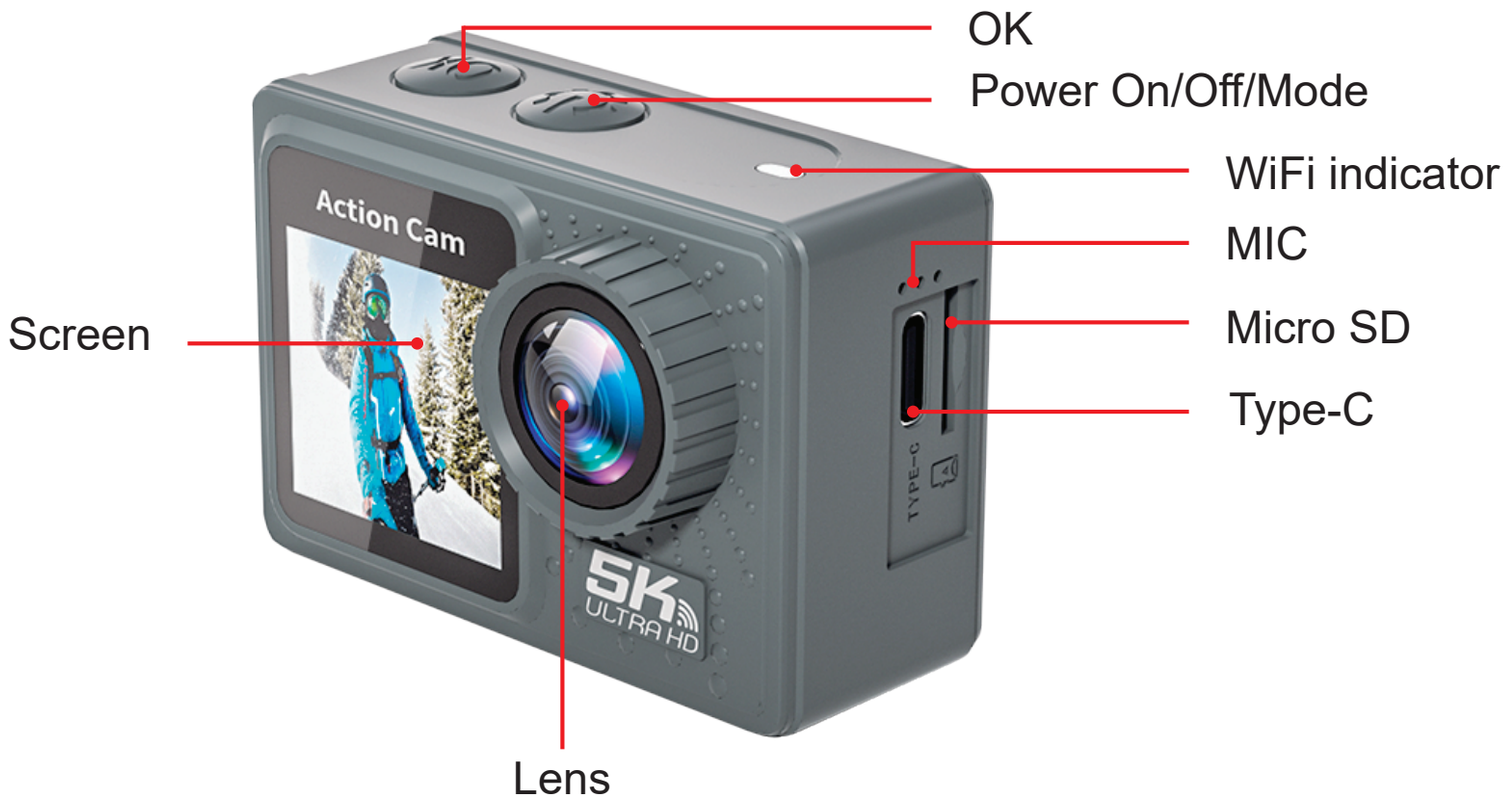




Open guidance

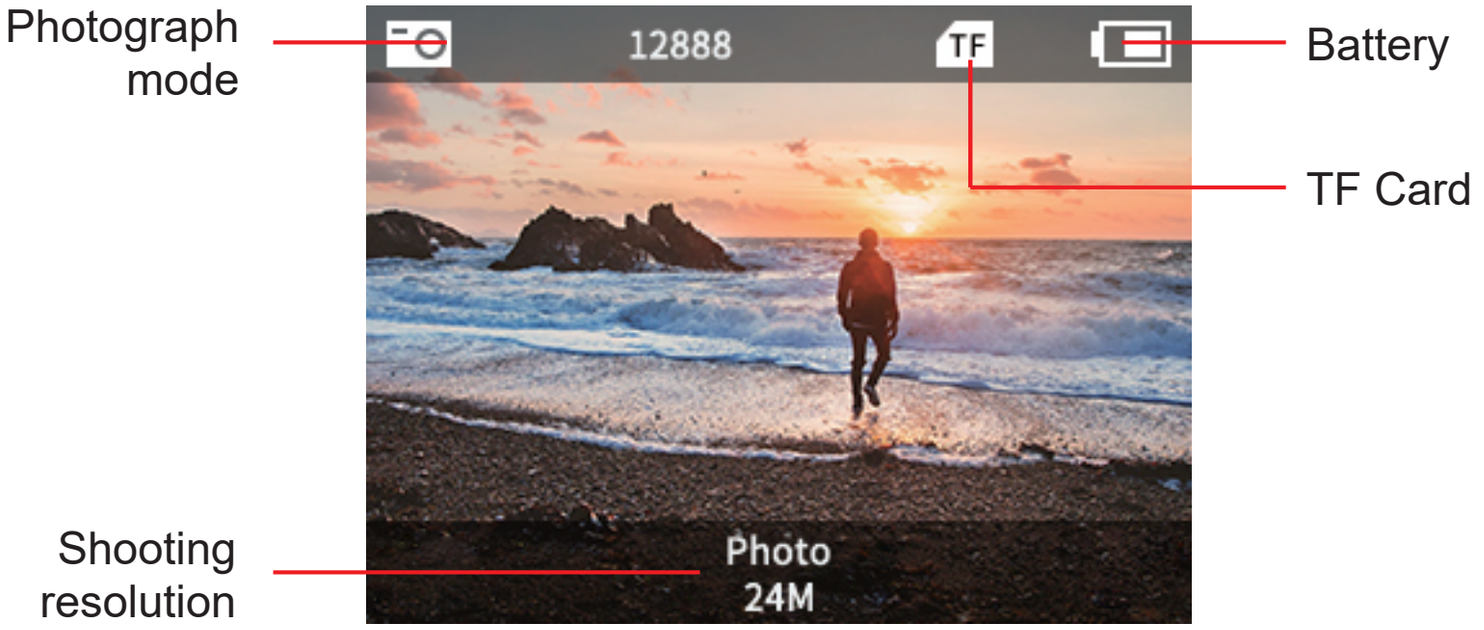

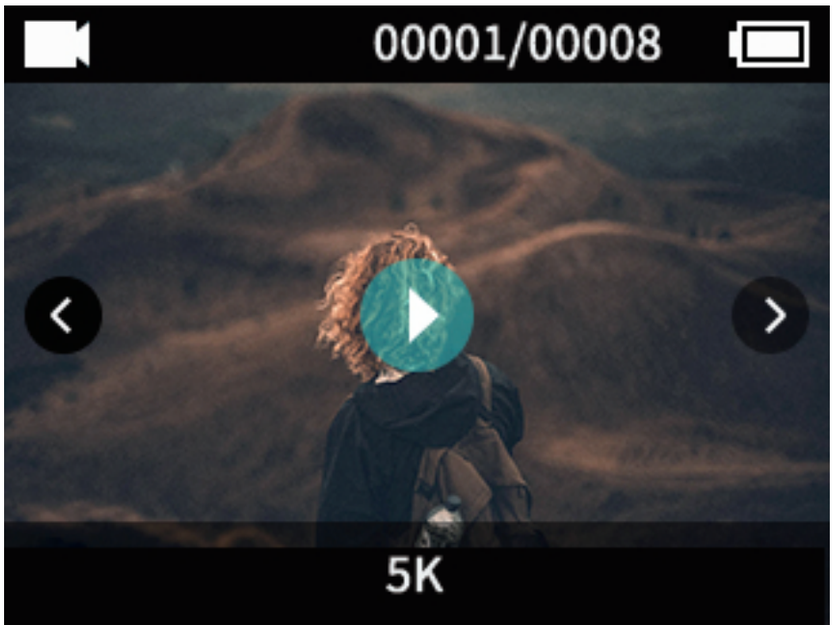


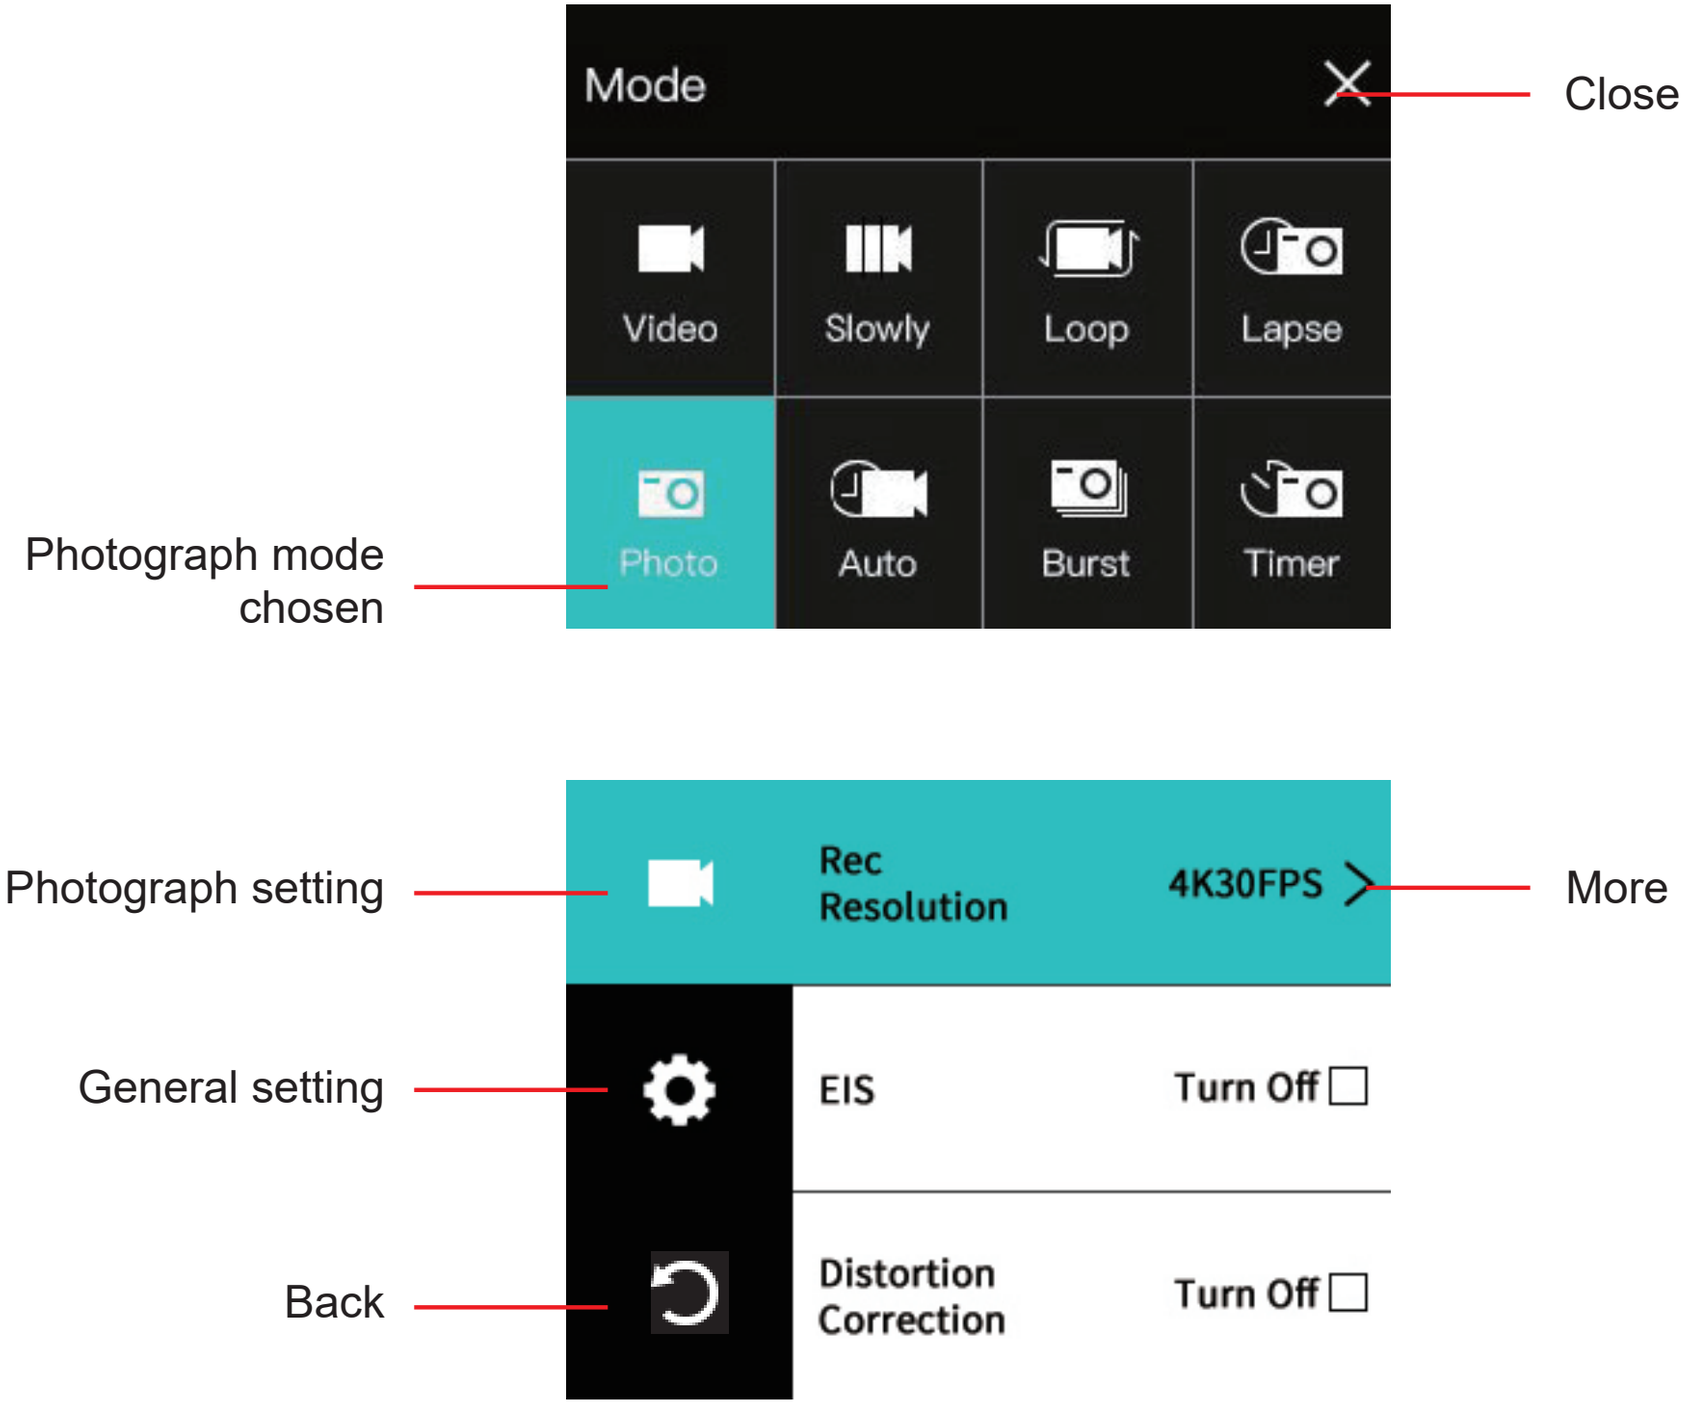
Mode
Close
Video
Slowly
Loop
Lapse
Photo
Auto
Burst
Timer
Photograph mode chosen
Photograph setting
Rec Resolution
4K30FPS
More
General setting
EIS
Turn Off
Back
Distortion Correction
Turn Off

Accessories

 camera	 waterproof case	 remote control	 fixed base
 switch support	 pedestal	 bicycle bracket	 back clip
 commutator	 helmet pedestal	 bandage	 wire cable + ribbon
 3M mat	 manual	 data cable	

Assembly diagram

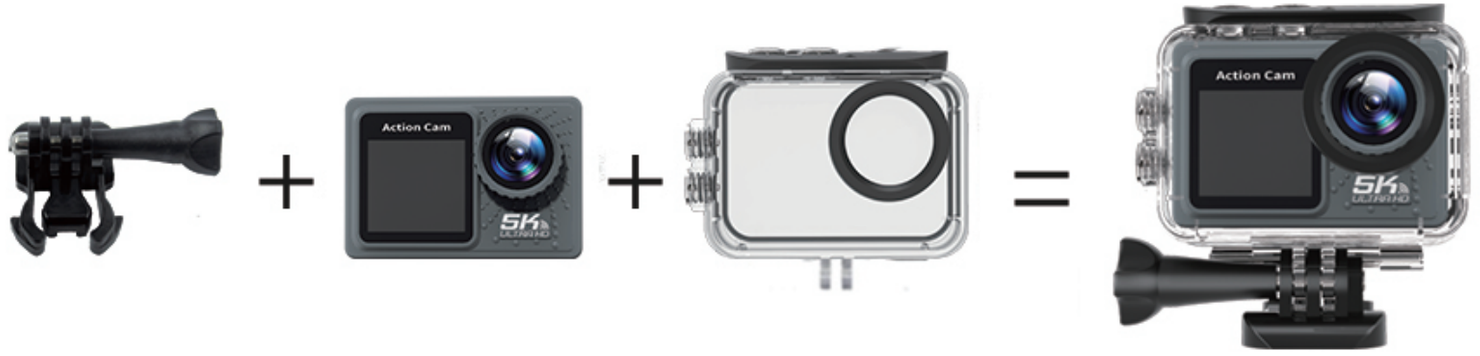





Use operation instructions

1. Insert Micro SD card

Note: Please select the brand MicroSD card, formatted on the computer and then use, ordinary neutral card can not guarantee the normal use of work.

2. Install and remove the battery

A. Pull the cover down can open the battery cover.

B. According the battery marked positive and negative symbols and arrows indicate direction, the correct battery into the camera until the installation is in place.

C. Battery power indicator: please refer to the icon.

D. Remove the battery, removed out of the battery after open battery cover.

3. Battery charging

A. With USB line connection to computer or power adapter, the camera can be charged.

B. Can charging while recording.

C. Shutdown state can also charge.

4. Camera on/off

A. Long press and hold the boot key 3-5 seconds can turned on / off the camera

B. Open screen that boot, turn off the screen that is off.

5. Turn WiFi on/off

Turn on WIFI: Long press the UP button to open WiFi.

Turn off WIFI: Short press the UP button to turn off WiFi.

6. Mode conversion(mode)

After booting up, short press on/off key. You can switch between recording/photographing.

7. Indicator light

Work indicator light: Blue light, flashing during operation; After the work is completed, the blue light remains on.

When turning on WiFi, the blue light flashes; After WiFi connection, the blue light remains on.

Charging indicator light: Red light, always on during charging, fully charged, red light off.

8. How to set photography and photography options

a. Recording: The camera enters recording mode and presses the confirm button to start recording. At the same time as recording, the symbol above the screen flashes, and then press the confirm button to stop recording, At the same time, the sign stops flashing.

Recording mode: Video, Slowly(1080P 4X/1080P 2X/720P 8X/720P 4X), Loop(2 Min/3 Min/5 Min), Lapse(0.5 Sec/1 Sec/2 Sec/5 Sec/10 Sec/30 Sec/60 Sec).

b. Turn on the power for the camera and camera settings, enter the mode button to select the camera mode, and when there is a camera icon in the upper left corner of the screen, enter the camera mode at this time, and press the confirm button to take a photo.
Photo mode: Photo, Auto(3 Sec/10 Sec/15 Sec/20 Sec/30 Sec), Burst(3P/s, 5P/s, 10P/s), Timer(3 Sec/5 Sec/10 Sec/20 Sec).
C. Store, play, and delete
After the video recording is completed, use the data cable to copy the recorded video to the computer for playback, or take out the memory card and use the card reader to read the image data in the card.
File deletion: In the file playback interface, long press the OK key to delete a single file.

9. Switch between large and small screens

Long press the key to switch the screen size (dual screens cannot be displayed at the same time)

10. WiFi install and use

Before use the WiFi function, please download and install the application “ XDV PRO ”on your smart phone.
Note:earch “XDV PRO” from app store for IOS; Search“ iSmart DV2 "from Android Play Store for android.
Steps to connect WiFi.
A. After powering on, long press the up button to open WiFi, and the screen will display "WiFi Information"
B. Open the WiFi on your phone, searching the wif SSID" X17-******" and connect (the original password is 1234567890):
C. Open “XDV PRO” APP program ,with the APP, you can real-time preview is shooting pictures, remote video, photos, fileplayback / download / delete / share.
D. APP install guide, the phone system requires Android 4.1 and above or IOS7 or above, scan the “XDV PRO” APP two-dimensional code, press the prompts to complete the installation.

Search“XDV PRO”from App Store for IOS
Search“XDV PRO”from Android Play Store for android

Android Play Store

Apple Store


Parameter

LED display screen	2.0+1.4 inch TPS
Lens	170°A+ High resolution wide angle lens
Language optional	Simplified Chinese/Traditional Chinese/English/Japanese/Korean/Russian/ German/French/Italian/Spanish/Portuguese/Thai/Polish/Dutch
Video encoding resolution	5K 30fps; 4K 60fps/30fps; 2.7K 30fps; 1080P 120fps/60fps/30fps; 720P 240fps/120fps/60fps/30fps;
Video format	MP4
Photo resolution	24MP/16MP/13MP/8MP
Photo mode	Photo, Auto, Burst, Timer
Auto take photos	3 Sec/10 Sec/15 Sec/20 Sec/30 Sec
Burst	3P/s, 5P/s, 10P/s
Timer	3 Sec/5 Sec/10 Sec/20 Sec
Video mode	Video, Slowly, Loop, Lapse
Slowly	1080P 4X/1080P 2X/720P 8X/720P 4X
Loop	2 Min/3 Min/5 Min
Lapse	0.5 Sec/1 Sec/2 Sec/5 Sec/10 Sec/30 Sec/60 Sec
Image Stabilization	Support
Zoom	4x
Storage	Micro SD card up to 128G
Power Frequency	50Hz/60Hz/Auto
USB	TYPE-C
Power	5V 1A
Battery	1050mA
Recording time	5K/90 minutes
Charging time	About 2 hours
Outline dimension	60 x 30.4 x 41 mm
Weight	60g
Working temperature	-10°C~+55°C
Storage temperature	-20°C~+70°C

Notes: Specifications could be subject to modification due to upgrading or updating.
Please regard the actual product as thestandard form.

运动相机

使用说明书

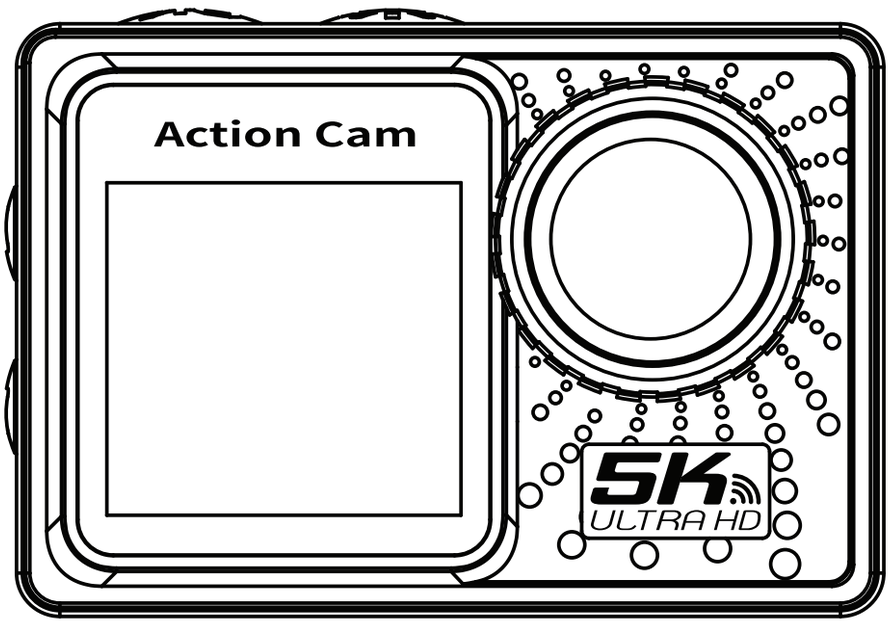

5K ULTRA HD

24MP

Waterproof

Wi-Fi

操作注意事项

1.本产品是高精密产品，请勿摔落或撞击。
2.请勿将摄像机靠近具有强磁的物体,如磁铁和电机,另外也要避免将产品靠近发出较强的无线电波的物体,强磁场可能会引起产品故障,或者破坏图像及声音。
3.请勿将摄像机放置在温度较高或阳光直射的地方。
4.请选择品牌的Micro SD卡，普通卡不能保证能正常使用。
5.请勿将微型Micro SD卡存放在或靠近强磁的地方。避免丢失的Micro SD卡中的存储资料。
6.充电过程中，如果出现过热，冒烟，或者发出异味，请立即拔出电源，停止充电，避免发生火灾。
7.充电时，请将产品置于儿童无法接触到的地方，电源线可能会导致儿童意外窒息或受到电击
8.请将产品置于阴凉，干燥且绝尘的地方。

前言

此款产品是针对市场需求推出的一款高端高清运动露营产品，该产品具有行业领先的数码录影，拍照、慢摄影、语音、视频显示，电池可拆卸等功能，是您户外运动、家庭安防、深度防水等功能，可满足您随时随地的拍摄。

多用途


行车记录


户外运动


水上运动


潜水

产品特性

> 提供防水功能的防水外壳，方便您拍摄精彩的水上运动，防水外壳可以深度防水30米
> 拍摄功能
> 视频分辨率最大5K @30fps
> 广角170°高清镜头
> 2400万高清镜头
> 功耗低，在WIFI开启下可用90分钟左右
> 超高清2.0+1.4英寸双屏，播放拍摄精彩视频和照片
> 电池可拆卸，方便更换电池，延长使用寿命
> 边充电边录影功能
> 最高可扩展至128G储存卡
> 多种视频录制格式 5K, 4K, 2.7K, 1080P, 720P
> MP4视频格式
> JPG照片格式
> 多种拍照模式：普通拍照、自动拍照、连续拍照、定时拍照
> 多种录影模式：普通录像、慢摄像、循环录影、缩时录像
> 小巧外观

产品示意图



OK

电源/模式

WiFi指示灯

麦克风

内存卡插口

Type-C口

显示屏

镜头



上键/放大/WiFi

下键/缩小/
前后屏切换

喇叭

电池盖


显示屏


电源指示灯

工作指示灯

操作指导



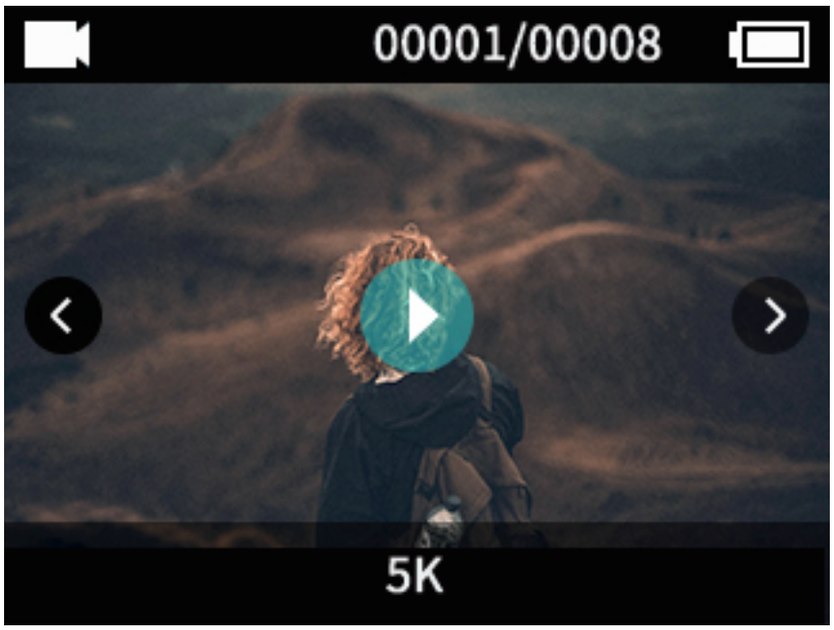


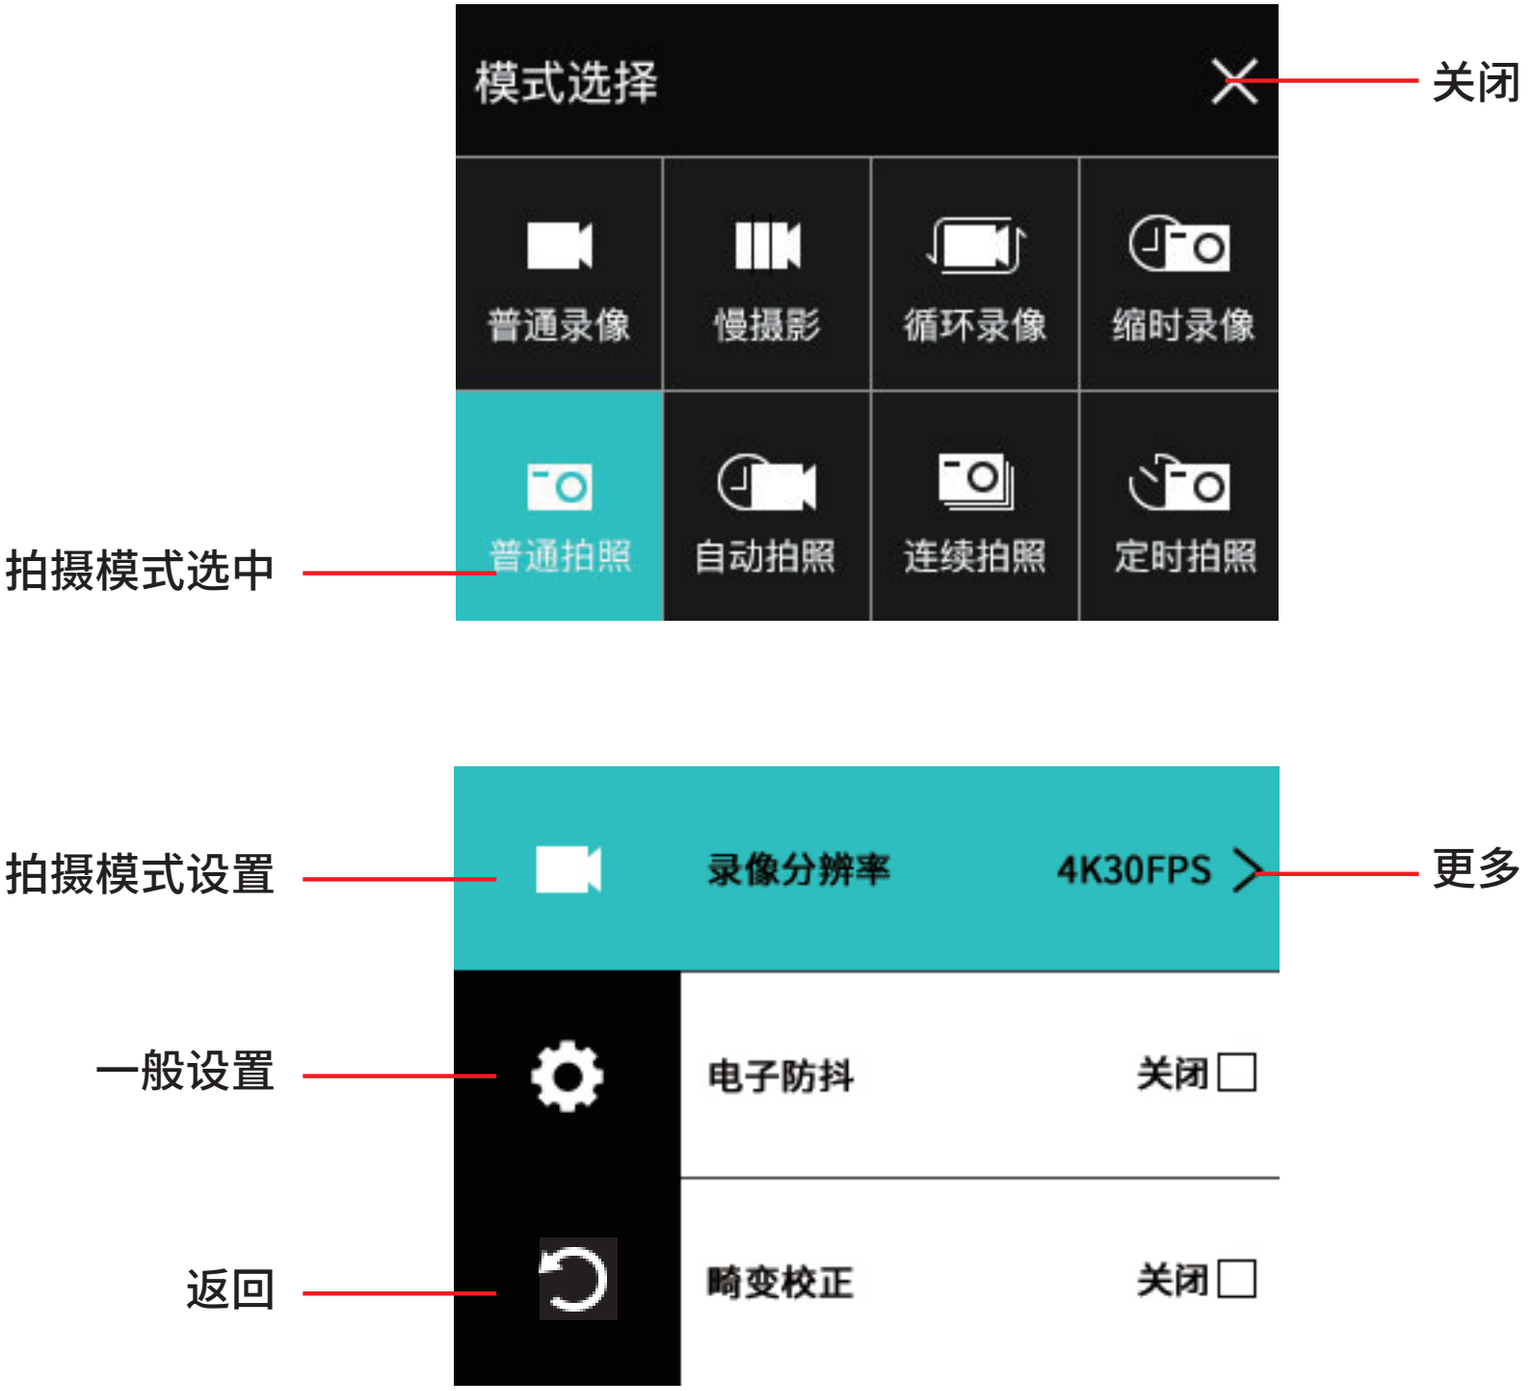
模式选择
关闭
普通录像
慢摄影
循环录像
缩时录像
普通拍照
自动拍照
连续拍照
定时拍照
拍摄模式选中
拍摄模式设置
录像分辨率
4K30FPS
更多
一般设置
电子防抖
关闭
返回
畸变校正
关闭

配件示意图

 相机	 防水壳	 遥控器	 转换底座
 转接支架	 防水支架	 自行车支架	 背夹
 转接头	 头盔座	 绑带	 扎带+钢丝绳
 3M胶	 说明书	 数据线	

装配应用图

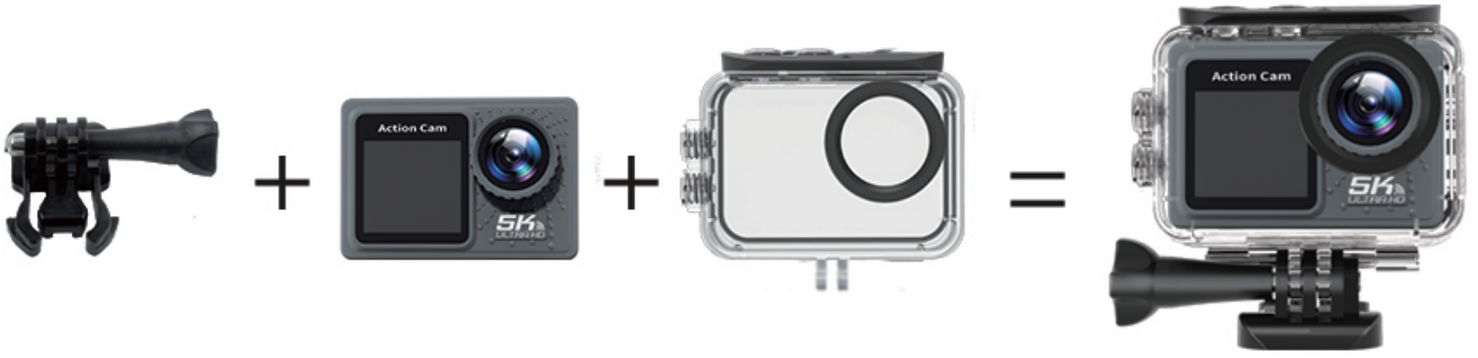
Action Cam
5K
ULTRA HD
Action Cam
5K
ULTRA HD


Action Cam
5K
ULTRA HD
Action Cam
5K
ULTRA HD


Action Cam
5K
ULTRA HD

使用操作

1、插入Micro SD卡

注意：请选择品牌的MicroSD卡，在电脑上格式化后再使用，普通中性卡不能保证能正常使用工作。

2、安装和取出电池

a.向下拨动电池盖可将它打开。

b.按照电池上标示的正负符号和箭头指示方向，正确的把电池装入像机内，直到安装到位。

c.电池的电量指示：请参考图示。

d.取出电池，将电池盖拨出即可取出电池。

3、电池充电

a. 用USB线连接电脑或电源适配器均能进行充电。

b.可边充电边录影功能。

c.关机状态也可以充电。

4、摄像机开机和关机

a.长按住开机键3-5秒左右即可开机/关机。

b.打开屏幕即开机，关闭屏幕即关机。

5. 打开和关闭WIFI

打开WIFI：长按上键打开WiFi。

关闭WIFI：短按上键关闭WiFi。

6. 模式转换(mode)

开机后，短按开/关键。可在录影/拍照之间进行切换。

7. 指示灯

充电指示灯：红灯，充电时红灯常亮；充满，红灯熄灭。

工作指示灯：蓝灯，开机后蓝灯常亮；拍摄时，蓝灯闪亮。

WIFI指示灯：黄灯，开启WIFI时，黄灯闪亮；APP连接后，黄灯长亮；关闭WIFI，黄灯熄灭。

8. 拍照与录像

a.录像：摄像机进入到录像模式，按确认键开始录像，录像的同时屏幕上方 ■ 标志闪烁，再按确认键停止录像，

同时 ■ 标志停止闪烁。

录像模式：普通录像、慢摄影（1080P 4X/1080P 2X/720P 8X/720P 4X）、循环录像（2分钟/3分钟/5分钟）、缩时录像 (0.5秒/1秒/2秒/5秒/10秒/30秒/30秒/60秒)

b.拍照：摄像机选择拍照模式，屏幕左上角有拍照标志时，此时进入拍照模式，按确认键进行拍照。

拍照方式：普通拍照、自动拍照（3秒/10秒/15秒/20秒/30秒）、连续拍照（3张/5张/10张）、定时拍照（3秒/5秒/10秒/20秒）。

c.储存、播放、删除

完成录影后，使用数据线，将所录得视频复制到电脑里播放，也可将内存卡取出，使用读卡器来读取卡中的影像资料。

文件删除：在文件回放界面，长按OK键，可删除单个文件。

9.大小屏切换

长按下键切换大小屏（双屏不可同时显示）

10.WiFi的安装和使用

在使用WIFI功能前，请先在智能手机上安装好“XDV PRO”APP程序。

备注：安卓智能机请上安卓应用商店下载，IOS智能机请上苹果商店下载。连接步骤：

a.开机后，长按上键打开WiFi，屏上出现“WiFi信息”；

b.打开手机上的WiFi连接，搜到WiFi SSID“X17-******”并连接上（原始密码是1234567890）；

c.点开“XDV PRO”APP程序，在APP上可实时预览正在拍摄的画面，可远程录影，拍照，文件回放/下载/删除/分享。

APP安装，手机系统要求安卓4.1及以上或IOS7或以上，扫描“XDV PRO”APP二维码，按提示完成安装。

可在iOS软件应用市场搜索“XDV PRO”

可在Android Play Store搜索“XDV PRO”

Android Play Store

apple Store

参数

显示屏	2.0+1.4 inch TPS
镜头	170°A+ 级高解析度广角镜头
语言	简体中文/繁体中文/英语/日语/韩语/俄语/德语/法语/意大利语/西班牙语/ 葡萄牙语/泰语/波兰语/荷兰语
视频分辨率	5K 30fps; 4K 60fps/30fps; 2.7K 30fps; 1080P 120fps/60fps/30fps; 720P 240fps/120fps/60fps/30fps;
视频格式	MP4
拍照分辨率	24MP/16MP/13MP/8MP
拍照模式	普通拍照、自动拍照、连续拍照、定时拍照
自动拍照	3秒/10秒/15秒/20秒/30秒
连续拍照	3张/5张/10张
定时拍照	3秒/5秒/10秒/20秒
录像模式	普通录像、慢摄影、循环录像、缩时录像
慢摄影	1080P 4X/1080P 2X/720P 8X/720P 4X
循环录像	2分钟/3分钟/5分钟
缩时录像	0.5秒/1秒/2秒/5秒/10秒/30秒/30秒/60秒
防抖	支持
变焦	4倍
存储卡	Micro SD card up to 128G
光源频率	自动 、50Hz、60Hz
USB	TYPE-C
电源	5V 1A
电池容量	1050mA
录像时间	5K / 90 分钟左右
充电时间	约2小时
外形尺寸	60x 30.4 x 41 mm
重量	60g
工作温度	-10°C~ +55 °C
存储温度	-20°C~ +70 °C

注意：规格参数可能会升级，更新等原因而做变更，请以实物为准。