产品说明书



使用前请仔细阅读手册以保证产品功能得到正确使用

并请保留手册以便将来查询

感谢您购买此款相机，此相机可拍摄出高质量图片和视频，也可以当做移动磁盘使用。


请在使用前认真阅读使用手册，以便您日后更好的利用相机。


产品特征

- ☑ 使用2.4英寸 240*320 高清屏
- ☑ 1080P 高清摄像头
- ☑ 有8种图片分辨率进行选择拍摄
- ☑ 视频分辨率:4KUHD/1080FHD/1080P
- ☑ 16倍数码变焦可调节
- ☑ 内置闪光灯
- ☑ 防抖动拍摄
- ☑ 移动侦测录像
- ☑ 可连拍与定时拍照
- ☑ TF储存卡最高可支持128GB
- ☑ USB接口: Type-c
- ☑ 连接方式:高速Micro USB 2.0 接口

产品图解


图像缩小
图像放大
电源开关键
定时键/左键
闪光灯控制键/上键
查看键/右键
确认键
删除键/下键
模式切换键
菜单键

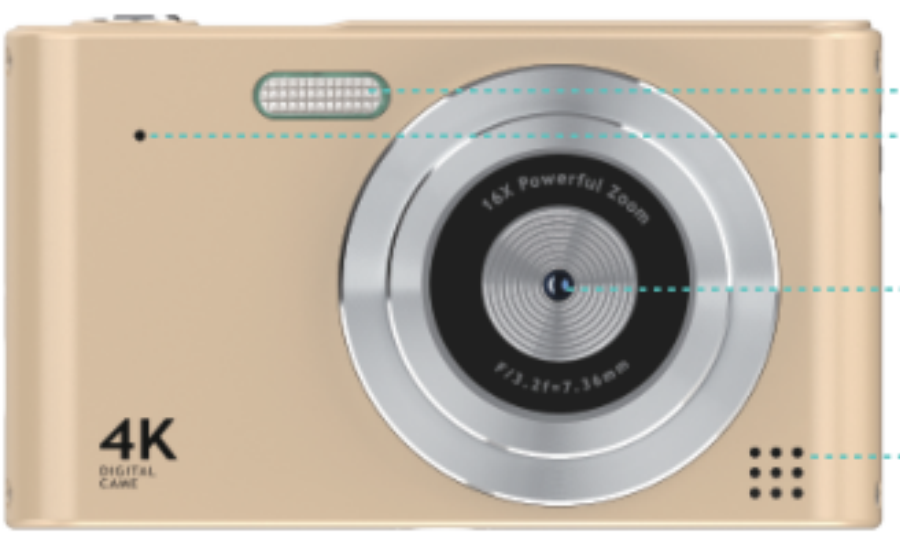
闪光灯
MIC孔
16X Powerful Zoom
摄像头
4K
DIGITAL CAME
喇叭

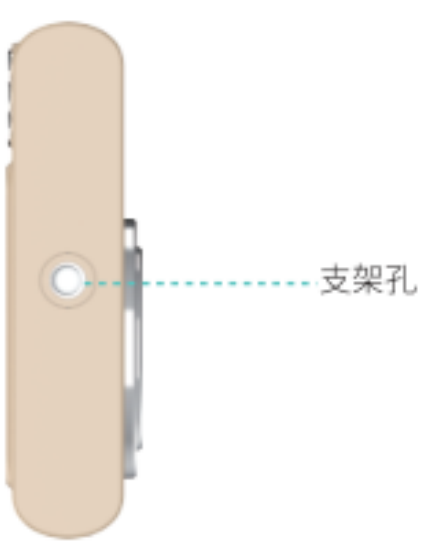

支架孔


快门键
TF卡槽
复位孔
USB接口
充电指示灯

功能讲解

拍照模式

开启相机后，图标将会出现屏幕左上角，表明相机进入拍照模式。

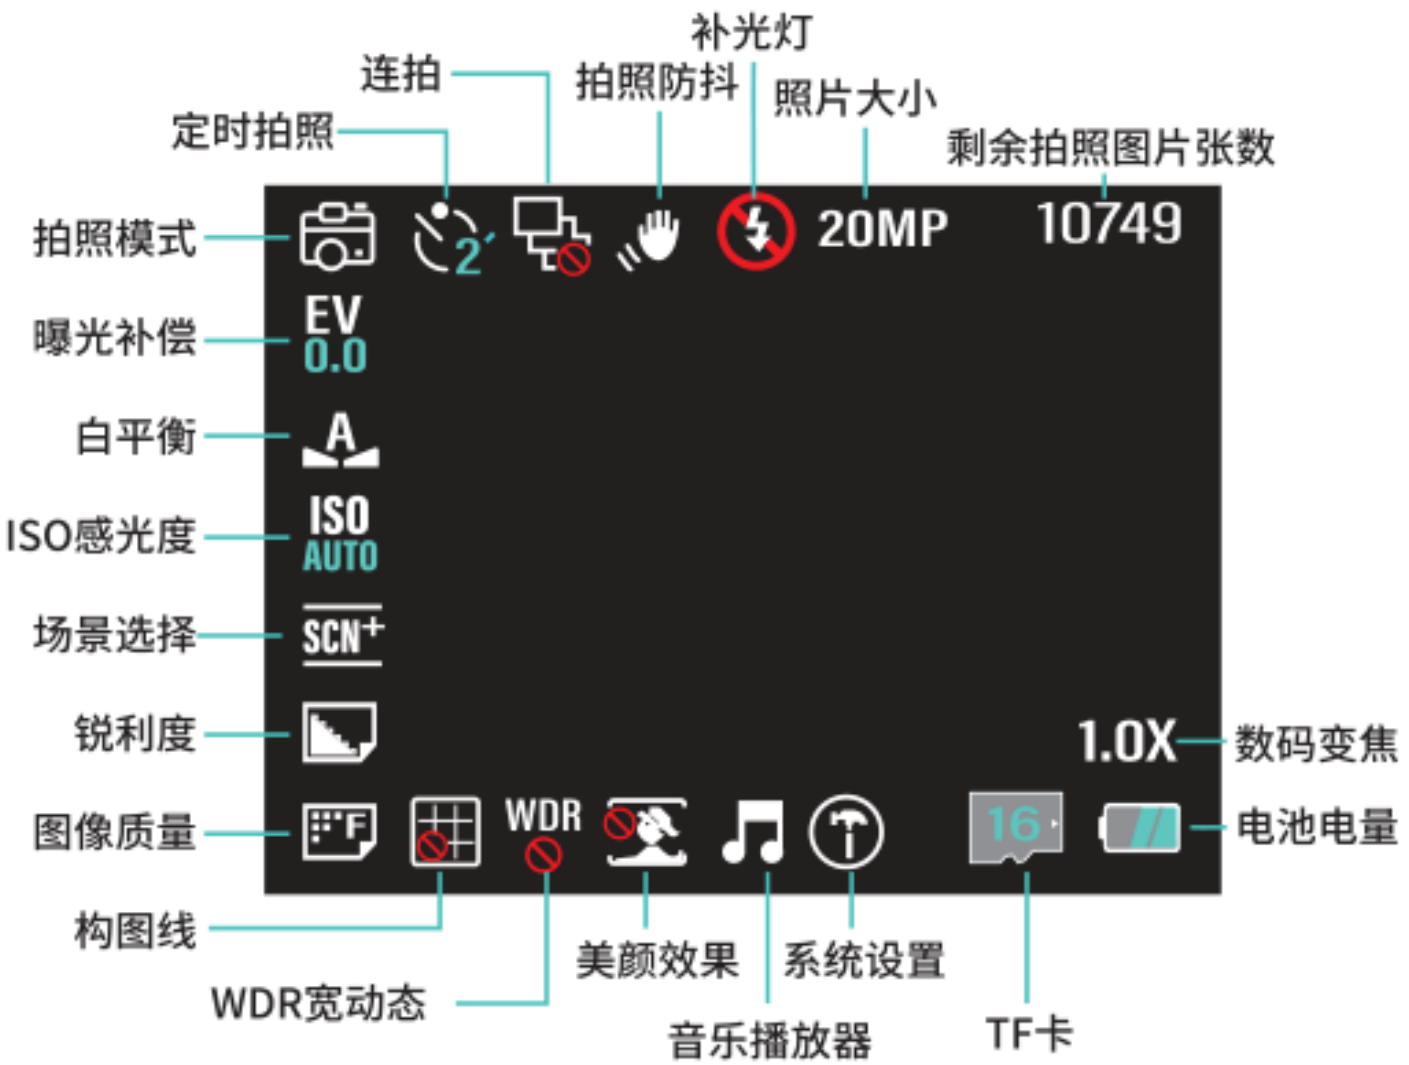

1、拍照

通过屏显中的画面使相机对准所需要拍摄的画面及物体，拿稳相机按下快门键或者OK键即可拍照，拍照保存图片时，相机略有延迟。

2、定时拍照

在拍照模式，短按左键-定时拍照快捷键进行快捷操作，或者通过菜单栏选择“定时拍照”设置延拍时长，分别有关闭、2秒、5秒、10等选项进行选择。

3、连拍

在拍照模式，在菜单栏中找到我们的连拍设置，可开启3连拍模式，改功能默认关闭，可根据自身需求开启。

4、拍照防抖

本款相机相机具有防抖动功能，以免拍摄时因抖动而是照片模糊。在菜单栏中找到我们的拍照防抖模式方可打开该功能选项。

5、补光灯

在阴暗或是背光环境下，可选择菜单键在菜单栏中打开相机内置闪光灯进行使用。

6、照片大小

照片大小和图像质量决定了相机可拍摄照片的数量和每一张照片所占空间的大小。

7、曝光补偿

此设置可以更具自身需求调整拍摄照片的亮度，确认好后相应的图标会在该功能图标上显示。

8、白平衡

此功能可以根据光源颜色调整拍摄的照片或视频。

9、ISO感光度

一般情况下，感光度越高，照片的颗粒度越粗；感光度越低，照片的颗粒度越细，也就是照片的清晰度越高。

10、场景选择

此款相机有3种不同的场景可满足不同环境的拍摄要求，分别是自动、景观、肖像。

11、锐利度

此项设置可以调整图像的锐化度，使图像边缘的清晰度更高或是更低。

12、图像质量

照片质量的高低会影响到可拍摄照片的数量，极高质量意味着只能拍摄更少的照片，但拍摄保存的照片质量将很高，默认设置高质量拍摄。

13、构图线

本款相机有网格线功能，开启此功能可提高拍摄效率，可在菜单栏中选择开启。

14、WDR宽动态

宽动态就是场景中特别亮的部位和特别暗的部位同时都能看得特别清楚。宽动态范围是图像能分辨最亮的亮度信号值与能分辨的最暗的亮光信号值的比值。当相机处于这种模式时，拍摄的画面角度可以大一些，甚至可以拍摄暗一点的地方。可在菜单栏中选择开启。

15、美颜效果

此款相机具有美颜效果，可在下方菜单栏中找到美颜图标开启该模式。

16、音乐播放器

本款相机有音乐播放功能，可播放MP3格式的音乐。

17、系统设置


此系统设置内是关于本机的一些重要参数设置。

语言设置	支持12种语言选择
屏幕亮度	8级可调节屏幕明暗亮度，默认8级亮度。
屏幕保护	默认2分钟自动息屏，可设置自动息屏时间
自动关机	在系统设置可设置自动关机时间，默认5分钟自动关机。
按键声音	3种不同按键的声音提供选择

系统音量	7级音量可调节
日期/时间	进入系统设置，选择日期/时间选项进行调整
格式化卡	格式化TF卡上所有的视频、图片、录音等文件资料。
恢复出厂置	若相机参数絮乱，可将相机恢复出厂设置
软件版本	固件版本信息

录像模式

开启相机后机器默认进入拍照模式，短按模式键切换至录像模式。

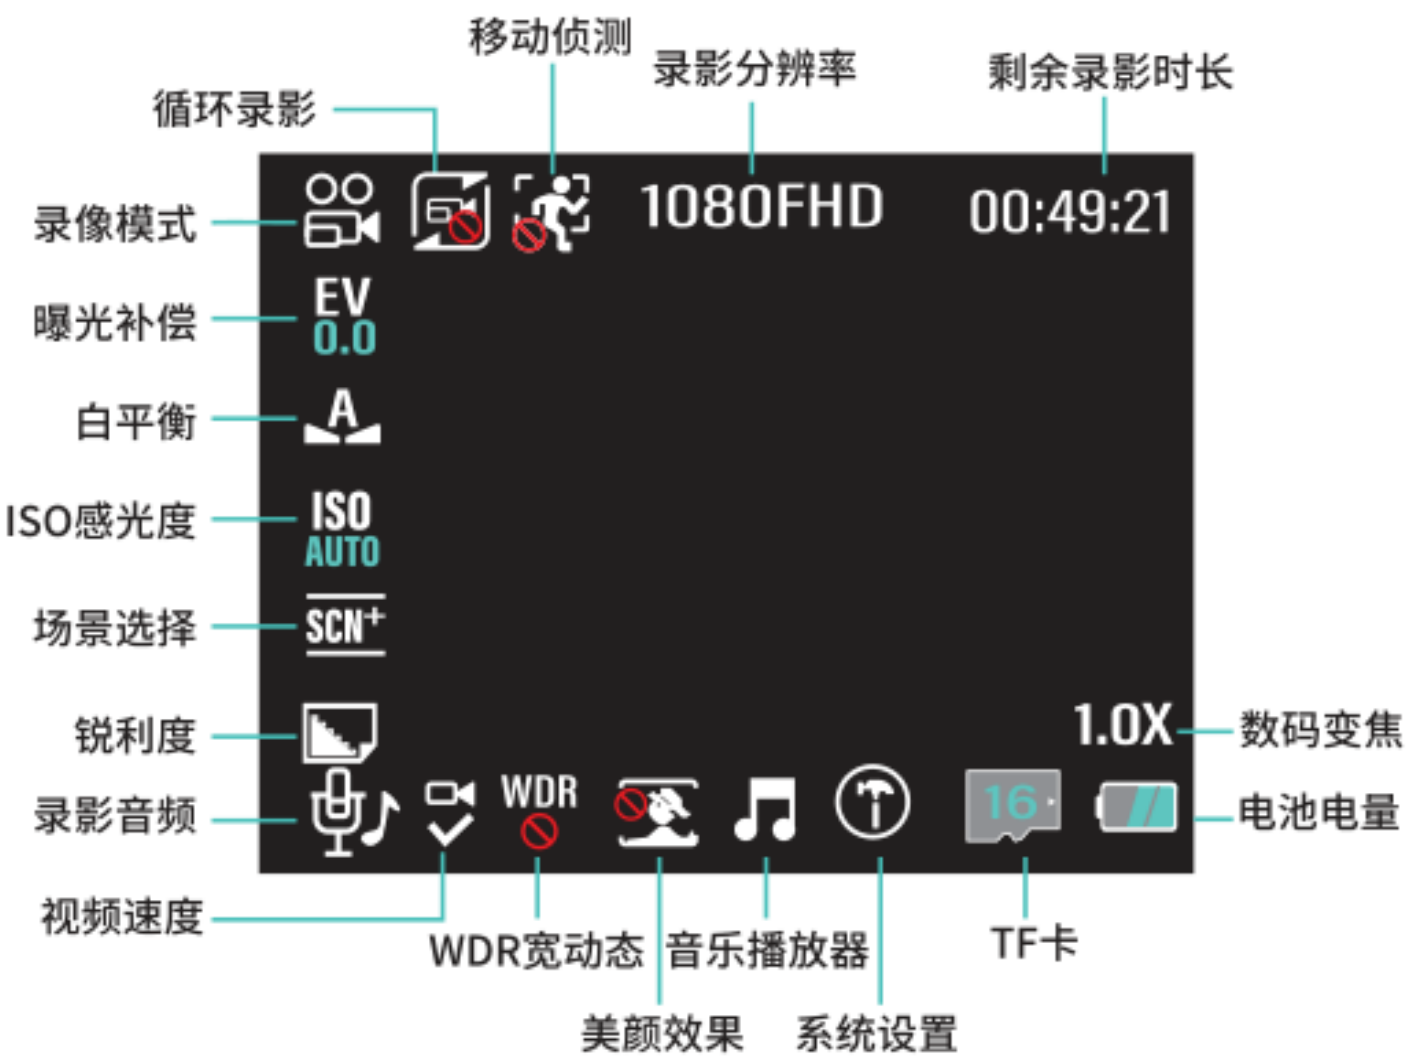

1、录像

切换至录像视频模式，短按快门键即可录像，录像时长会显示在屏幕右上角。可按T键或W键缩放拍摄视频画面。短按上键一键进入屏幕保护模式。

2、循环录像

此设置循环录像功能为关闭，该机器录像时长为10分钟，可循环录制;可设置每段视频的时长，最短 1 分钟，最长 10 分钟。

3、移动侦测

此设置可以检测录像画面有人物或其他物体移动时，或是机器移动时将自动开启录像，是通过摄像头按照不同帧率采集得到的图像。

4、录影分辨率

对机器录像视频分辨率进行调整，进入菜单栏中，选择录像分辨率，短按上/下键，可进行录像分辨率的选择。

5、视频速度

通常默认正常速度录制视频，有慢动作和延时摄影（快速录像）功能可选择设置。注意慢动作和延时摄影回放时是没有声音的。

6、录影音频

录影音频通常默认打开，可在菜单栏中选择关闭，关闭后，录制正常的视频播放时将不会有声音。

注意：录像时，机器2分钟后会自动进入屏幕保护模式，任意按下其中一个按键即可点亮屏幕，可在设置模式设置时长或关闭；当内存容量储存满时，机器会自动停止录像。

回放模式

按右键可以快速进入回放模式，注意查看图标变化。在回放模式下可以预览已经拍摄保存到TF卡相机中的照片和视频，在此模式下可以进行幻灯片播放文件，也可保护加锁和删除照片、视频片段。



1、加锁文件

在回放模式中短按菜单键可加锁照片或视频文件，再次短按菜单键方可解锁文件。

2、查看图片

(1)、短按左/右键可切换浏览图片和查看视频文件；

(2)、短按T键时可以放大图片（注意原图不可缩小），在图片进行16倍变焦放大查看的过程中，可以短按上下左右键查看照片细节。短按模式键可退出回到原图。

(3)、上键可幻灯片播放图片；

(4)、短按下键可以删除图片。

3、查看回放视频

(1)、短按OK键可播放视频；

(2)、播放视频的途中，短按右键可快速播放视频；

短按左键可快速倒放视频回到可播放视频界面（注意快速播放和快速倒放的视频都是没有声音的）；

(3)、短按下键可以删除视频文件。

将TF卡中的图像或视频文件下载至电脑（计算机）的办法：

一、使用读卡器连接电脑

二、通过USB数据线将相机与电脑（计算机）相连接

三、打开电脑（计算机）找到可移动磁盘位置打开，选择DCIM文件夹打开方可查看照片和视频文件。

产品配件









标配清单：相机*1　数据线*1　挂绳*1　说明书*1

（配件样式请以最新配套跟新实物为准）

注意事项

本产品是精密电子产品，使用中需要特别注意：

1、请不要分离或改造产品；

2、请不要剧烈震动或撞击产品；不要在产品上放置重物

3、确保本产品放置安全，避免儿童触摸发生意外及跌落；

4、请勿擅自拆卸本机，否则会失去保修的权利，如有任何疑问请与经销商联系；

5、请远离潮湿、烟尘等恶劣环境；

请不要将产品放在直射阳光下或置于火烤环境，请远离高温和低温环境；

6、电池充电注意事项：

本产品电池采用的是聚合物锂电池，可重复充电使用。

长时间不使用时，请每隔 3 个月为产品充电一次电。

锂电池须由客服人员更换，用户不可自行更换（注意：如果电池更换不当会有爆炸危险，只能用同样类型或等效类型的电池来更换）；为保护环境，废弃电池请交给专业机构回收处理；

充电: 通过本机标配的适配器进行充电.在充电的过程中,产品有一定的升温,属于正常现象；

产品规格

产品名称	H15 数码相机
显示屏	2.4寸高清屏
图像传感器	CMOS 传感器
数码变焦	16倍数码变焦
功能介绍	拍照、录像、相册回放
图片格式	jpg
视频文件格式	avi
曝光	EV-2.0_EV+2.0
白平衡	自动/晴天/阴天/白炽光/荧光
ISO	自动/100/200/400
场景选择	自动/景观/肖像
支持	音乐播放、防抖动、连拍、定时拍摄、循环录影、移动侦测、打开美颜等功能
显示亮度	8节明暗亮度可调节
产品语言	12种
连接方式	高速Micro USB 2.0 接口
最大输出	DC-5V/2A
操作按钮	11位功能按键
容量储存	内置 32G/64G/128G 可选配，请以实际购买为准
充电接口	Type-c
供电电源	内置可充电的锂聚合物电池
工作温度	-10° C 至 55° C
产品尺寸	97*57*25mm

Thank you for purchasing this camera, which can take high-quality pictures and videos and can also be used as a portable disk.

Please read the manual carefully before using it so that you can make better use of the camera in the future.

Product Features

- ☑ Use a 2.4-inch 240*320 HD screen
- ☑ 1080P HD camera
- ☑ There are 8 image resolutions to choose from
- ☑ Video resolution: 4KUHD/1080FHD/1080P
- ☑ 16x digital zoom adjustable
- ☑ Built-in flash
- ☑ Stabilization shooting
- ☑ Motion Detection Recording
- ☑ Continuous shooting and timed photography are possible
- ☑ TF memory cards can support up to 128GB
- ☑ USB Interface: Type-C
- ☑ Connection: High-speed Micro USB 2.0 interface


Product Manual





Please read the manual carefully before use to ensure that the product functions are used correctly, and please keep the manual for future inquiries

Product illustration



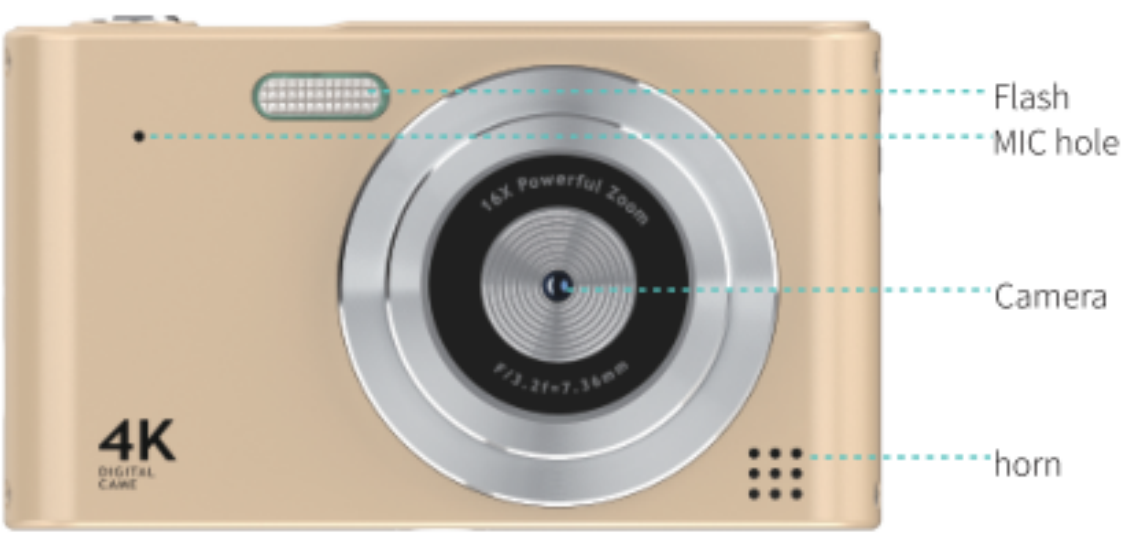

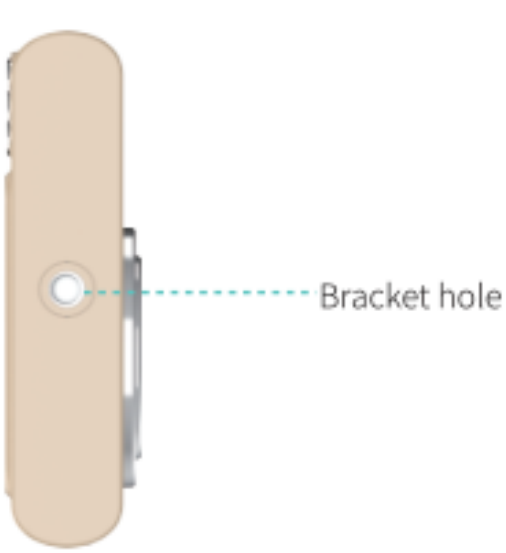


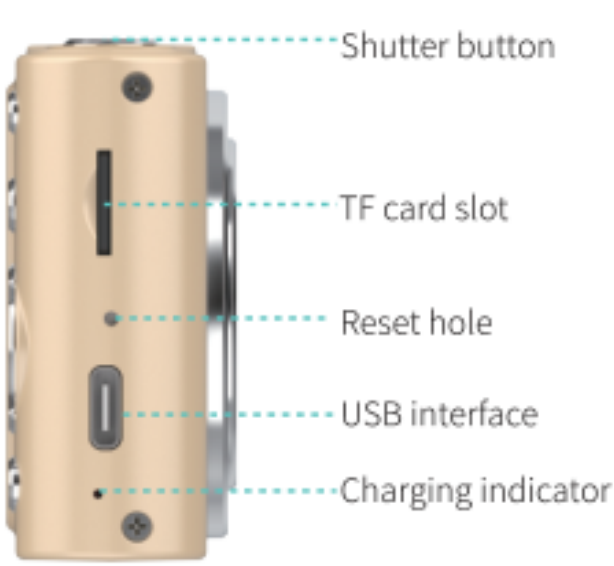

Explanation of the function

Photo mode

Once the camera is turned on, the icon will appear in the upper left corner of the screen, indicating that the camera has entered photo mode.

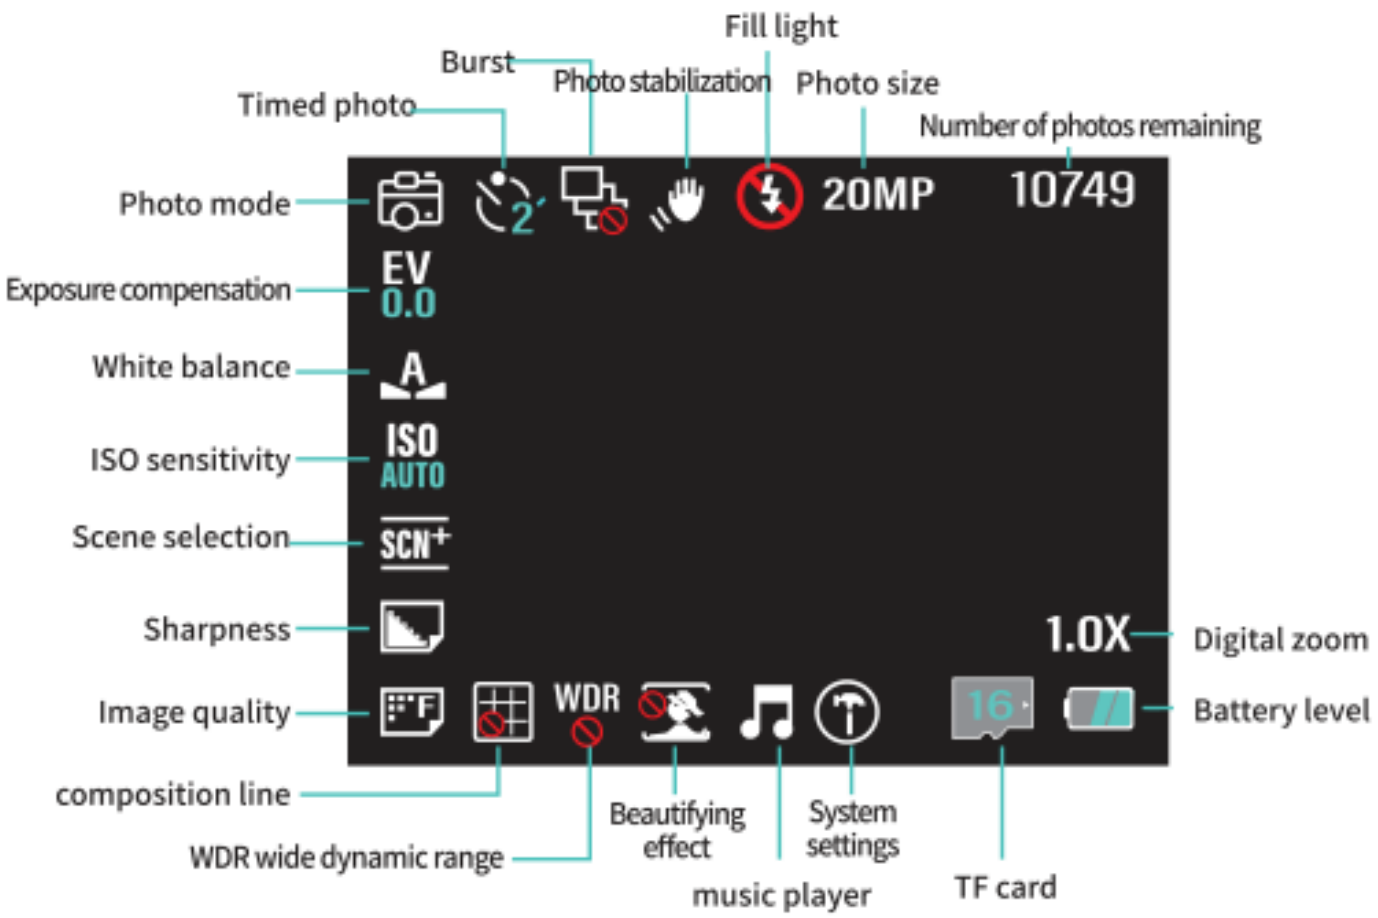

1. Take a photo

Aim the camera at the screen and object you want to shoot, hold the camera firmly and press the shutter button or OK button to take a picture, and the camera will be slightly delayed when taking a picture and saving the picture.

2. Take photos at regular intervals

In photo mode, short press the left button-timed photo shortcut key for shortcut operation, or select "Timer Photo" through the menu bar to set the delay duration, and there are options such as off, 2 seconds, 5 seconds, and 10 seconds respectively.

3. Continuous shooting

In the photo mode, find our continuous shooting setting in the menu bar, you can turn on the 3 continuous shooting mode, and the change function is turned off by default, which can be turned on according to your own needs.

4. Take photos and stabilize the image

This camera has an anti-shake function so that the image is not blurry due to shaking when shooting. Find our photo stabilization mode in the menu bar to open this option.

5. Fill light

In dark or backlit environments, select the menu key to turn on the camera's built-in flash in the menu bar.

6. Photo size

Photo size and image quality determine the number of photos the camera can take and the amount of space each photo takes.

7. Exposure compensation

This setting allows you to adjust the brightness of the photo you shoot, and the corresponding icon will be displayed on the function icon after confirmation.

8. White balance

This feature adjusts captured photos or videos based on the color of the light source.

9. ISO sensitivity

In general, the higher the sensitivity, the coarser the graininess of the photo, and the lower the sensitivity, the finer the graininess of the photo, that is, the higher the clarity of the photo.

10. Scene selection

This camera has 3 different scenes to meet the shooting requirements of different environments, namely automatic, landscape, and portrait.

11. Sharpness

This setting adjusts the sharpness of the image so that the edges of the image are sharper or lower.

12. Image quality

The quality of the photos will affect the number of photos that can be taken, and very high quality means that fewer photos can be taken, but the quality of the saved photos will be high, and the default setting is High Quality shooting.

13. composition line

This camera has a grid line function. Turning this function on can improve shooting efficiency. You can choose to turn it on in the menu bar.

14. WDR wide dynamic range

WDR is when the brightest and darkest parts of the scene can be seen clearly at the same time. Wide dynamic range is the ratio of the brightest brightness signal value that can be resolved in an image to the value of the darkest bright light signal that can be resolved. When the camera is in this mode, the angle of the picture can be larger, and even a darker place can be shot. You can select On in the menu bar.

15. Beautifying effect

This camera has a beautify effect, which can be turned on by finding the beautify icon in the menu bar below.

16. music player

This camera has a music playback function and can play music in MP3 format.


17. System settings

Inside this system setting are some important parameter settings about the machine.

Language settings	Support 12 language options
Screen brightness	8 levels can adjust the brightness of the screen,and the default brightness is 8 levels.
Screen saver	By default, the screen will be automatically turned off for 2 minutes, and the screen will be automatically turned off for a while
Automatic shutdown	In the system settings, you can set the automatic shutdown time, and the default is 5 minutes automatic shutdown.
Key sounds	3 different key sounds to choose from
System volume	7 levels of volume adjustable
Date/Time	Go to the system settings and select the date/time option to adjust it
Format the card	Format all videos, pictures, audio recordings and other files on the TF card.
Restore to factory settings	If the camera parameters are messy, you can restore the camera to factory settings
Software Version	Firmware version information

Recording mode

After turning on the camera, the machine will enter the photo mode by default, and short press the mode button to switch to the video mode.

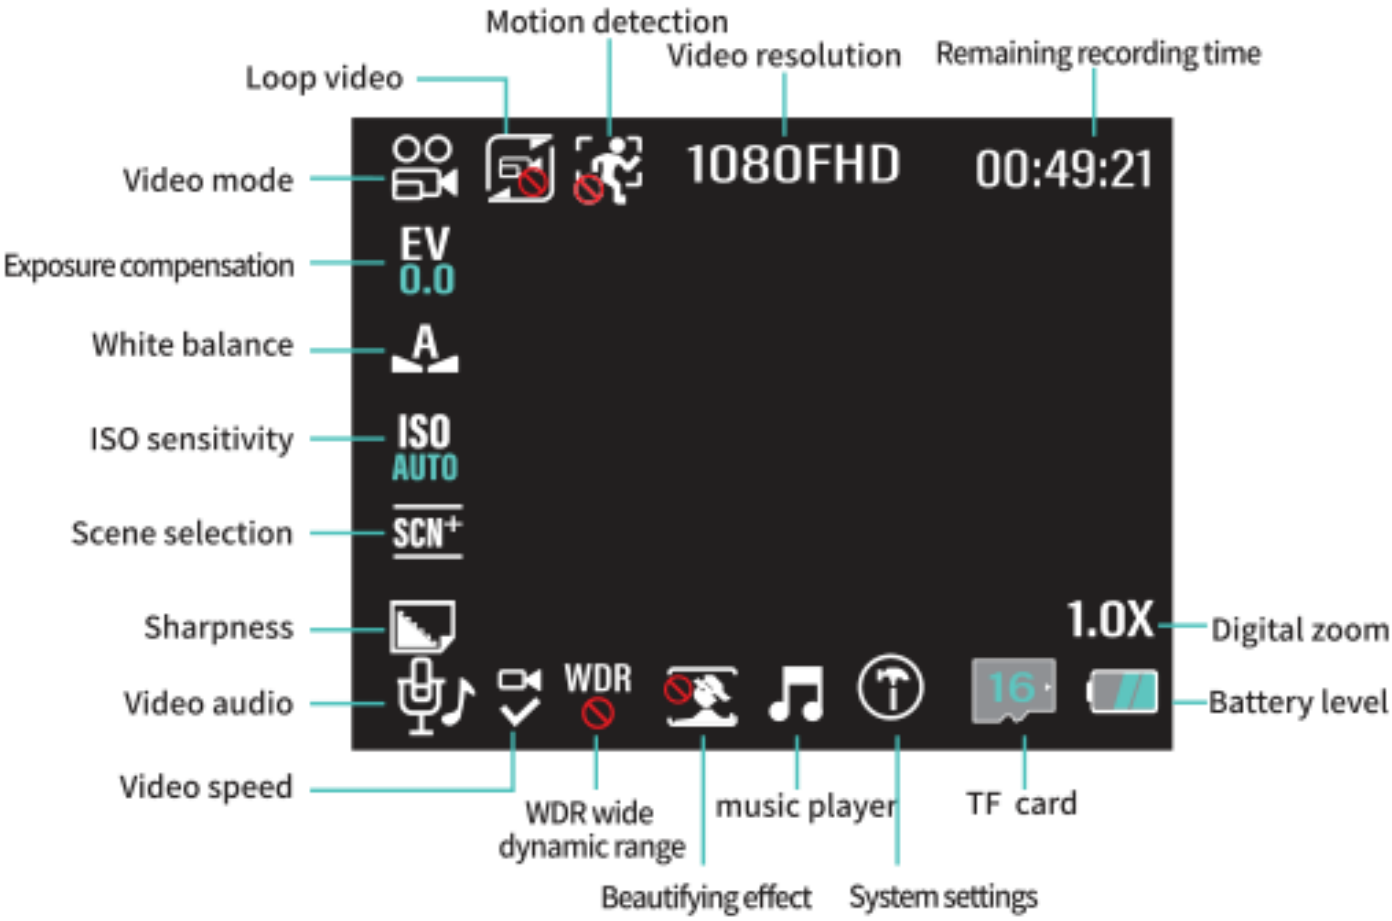

1. Video recording

Switch to video recording mode, press the shutter button to record, and the recording duration will be displayed in the upper right corner of the screen. You can press the T or W key to zoom in and out of the video screen. Press the upper button to enter the screen saver mode with one click.

2. Loop video

This setting loop recording function is off, the machine recording duration is 10 minutes, and loop recording can be madeYou can set the length of each video, from a minimum of 1 minute to a maximum of 10 minutes.

3. Motion detection

This setting can detect when a person or other object is moving in the video screen, or when the machine is moving, and the recording will be automatically started, and the image is captured by the camera at different frame rates.

4. Video resolution

Adjust the video resolution of the machine, enter the menu bar, select the video

resolution, and short press the up/down button to select the video resolution.

5. Video speed

Videos are usually recorded at normal speed by default, with slow motion and time-lapse (fast recording) functions to choose from. Note: There is no sound during slow-motion and time-lapse playback.


6. Video audio

Recorded audio is usually turned on by default, and you can select Turn It Off in the menu bar, when it is turned off, there will be no sound when recording normal video playback.

Note: When recording, the machine will automatically enter the screen saver mode after 2 minutes, press any one of the buttons to light up the screen, you can set the duration or turn off in the setting mode, when the memory capacity is full, the machine will automatically stop recording.

Playback mode

Press the right button to quickly enter the playback mode, and pay attention to the icon changes. In playback mode, you can preview photos and videos that have been taken and saved to the TF card camera, slideshow files in this mode, and protect and lock and delete photos and video clips.

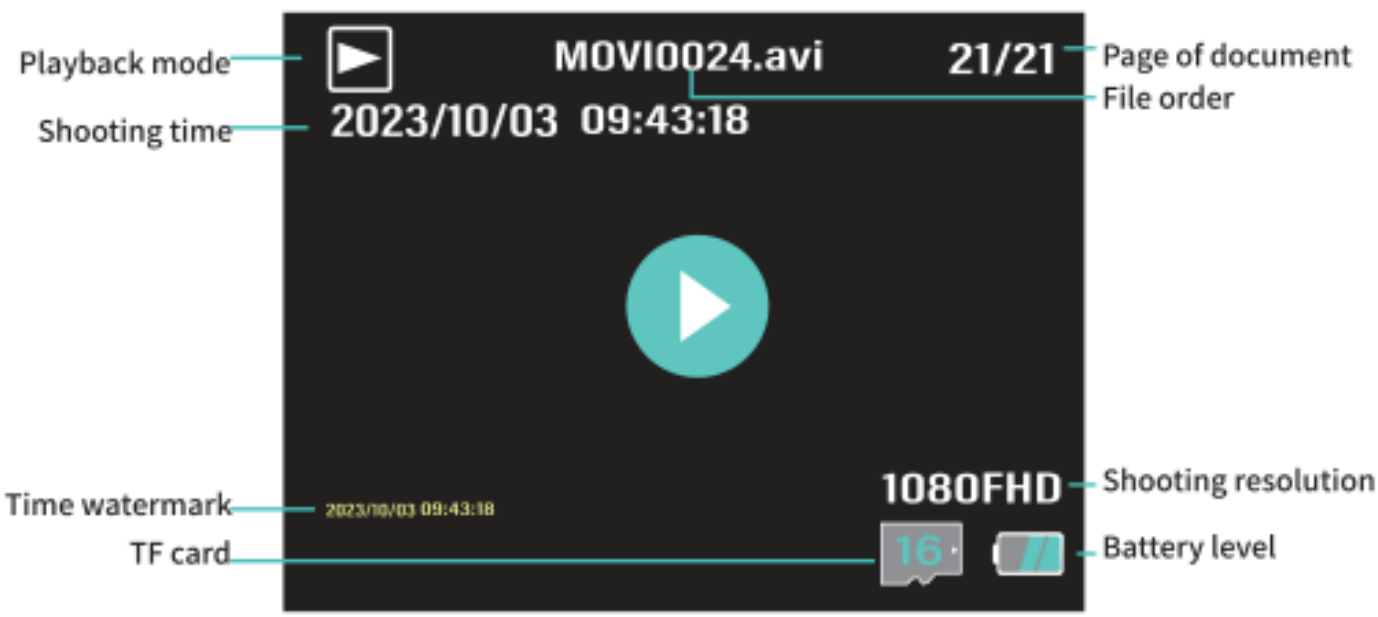

1. Lock the file

In playback mode, you can lock a photo or video file by pressing the menu button, and then press the menu button again to unlock the file.

2. View the picture

(1) Short press the left/right button to switch between browsing pictures and viewing video files

(2) When you press the T button, you can enlarge the picture (note that the original picture cannot be reduced), and in the process of zooming in on the picture for 16x zoom, you can press the up and down left and right keys to view the details of the photo. Press the mode button to exit and return to the original image.

(3) The upper button can play the picture on the slide

(4) Short press the button to delete the picture.

3. View the playback video

(1) Short press the OK button to play the video

(2) On the way to play the video, short press the right button to quickly play the video; Press the left button to quickly reverse the video and return to the playable video interface (note that both fast and fast reverse videos have no sound);

(3) You can delete the video file by pressing the key for a short time.

How to download images or video files from TF card to computer (computer):

1. Use a card reader to connect to your computer
2. Connect the camera to the computer (computer) via a USB cable
3. Open your computer (computer), find the removable disk location, and select the DCIM folder to open to view the photos and video files.

Product accessories



Standard Configuration: Camera*1 Data Cable*1 Lanyard*1 Manual*1

(Please refer to the latest matching and new physical products for the style of accessories)

Precautions

This product is a precision electronic product, special attention needs to be paid to the following during use:

1. Please do not separate or modify the product;
2. Please do not violently shake or impact the product, and do not place heavy objects on the product
3. Ensure that the product is placed safely to avoid accidents and falls when touched by children;
4. Do not disassemble the machine without authorization, otherwise you will lose the right to warranty, if you have any questions, please contact the dealer;
5. Please stay away from humidity, smoke and other harsh environments;
   Please do not place the product in direct sunlight or in a fire-baking environment, please keep away from high and low temperature environments;
6. Precautions for battery charging:
   The battery of this product is a polymer lithium battery, which can be recharged. When not in use for a long time, please charge the product every 3 months.
   The lithium battery must be replaced by the customer service staff, and the user cannot replace it by himself (note: if the battery is not replaced properly, there will be a risk of explosion, and it can only be replaced with the same type or equivalent type of battery);

Charging: charging through the adapter equipped with this machine. In the process of charging, the product has a certain temperature rise, which is a normal phenomenon;

Product Specifications

Product name	H15 digital camera
display screen	2.4-inch HD screen
Image sensors	CMOS sensors
Digital zoom	16x digital zoom
Function introduction	Take photos, videos, and play back albums
Image format	jpg
Video file format	avi
exposure	EV-2.0_EV+2.0
White balance	Auto/Sunny/Cloudy/Incandescent/Fluorescent
ISO	Auto/100/200/400
Scene selection	Automatic/Landscape/Portrait
support	play music, anti-shake, continuous shooting, timed shooting, loop recording, motion detection, turn on beautification and other functions
Display brightness	8 knots with adjustable brightness
Product language	12 kinds
Connection	High-speed Micr o USB 2.0 interface
Maximum output	DC-5V/2A
Action buttons	11-bit function buttons
Capacity storage	Built-in 32G/64G/128G optional, please refer to the actual purchase
Charging port	Type-c
Power supply	Built-in rechargeable lithium polymer battery
Operating temperature	-10° C to 55° C
Product Size	97*57*25mm

製品マニュアル



製品の機能が正しく使用されていることを確認するために、使用前にマニュアルを注意深く読み、将来の問い合わせのためにマニュアルを保管してください


高品質の写真やビデオを撮影でき、ポータブルディスクとしても使用できるこのカメラをお買い上げいただきありがとうございます。今後カメラをより有効に活用できるように、使用する前にマニュアルをよくお読みください。


製品の特徴

- ☑ 2.4 インチの 240*320 HD 画面を使用する
- ☑ 1080P HDカメラ
- ☑ 8つの画像解像度から選択できます
- ☑ ビデオ解像度:4KUHD/1080FHD/1080P
- ☑ 16倍デジタルズーム調整可能
- ☑ 内蔵フラッシュ
- ☑ 手ぶれ補正撮影
- ☑ 動体検知録画
- ☑ 連続撮影や時間指定撮影が可能
- ☑ TF メモリーカードは最大128GBまで対応可能
- ☑ USBインターフェース:Type-C
- ☑ 接続:高速マイクロUSB2.0インターフェース

製品イラスト


画像の縮小
画像拡大
電源オン/オフキー
タイマー/左クリック
フラッシュコントロール
アップボタン
表示キー/右クリック
キーの確認
キー削除/下キー
モードスイッチキー
メニューキー

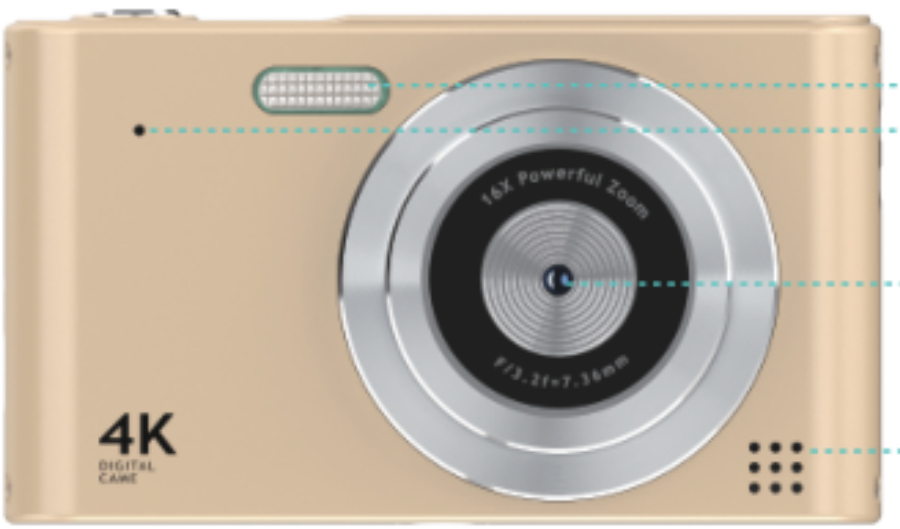
フラッシュ
マイク穴
16X Powerful Zoom
カメラ
4K
DIGITAL CAME
トランペット

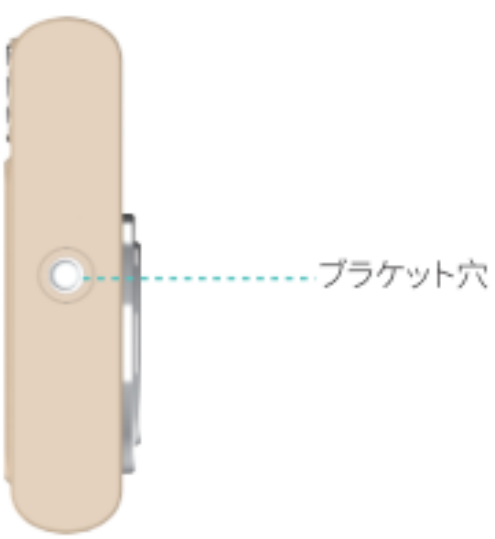

ブラケット穴


シャッターボタン
TFカードスロット
リセットホール
USBインターフェース
充電インジケーター

機能の説明

写真モード

カメラの電源を入れると、画面の左上隅にアイコンが表示され、カメラが写真モードに入ったことを示します。

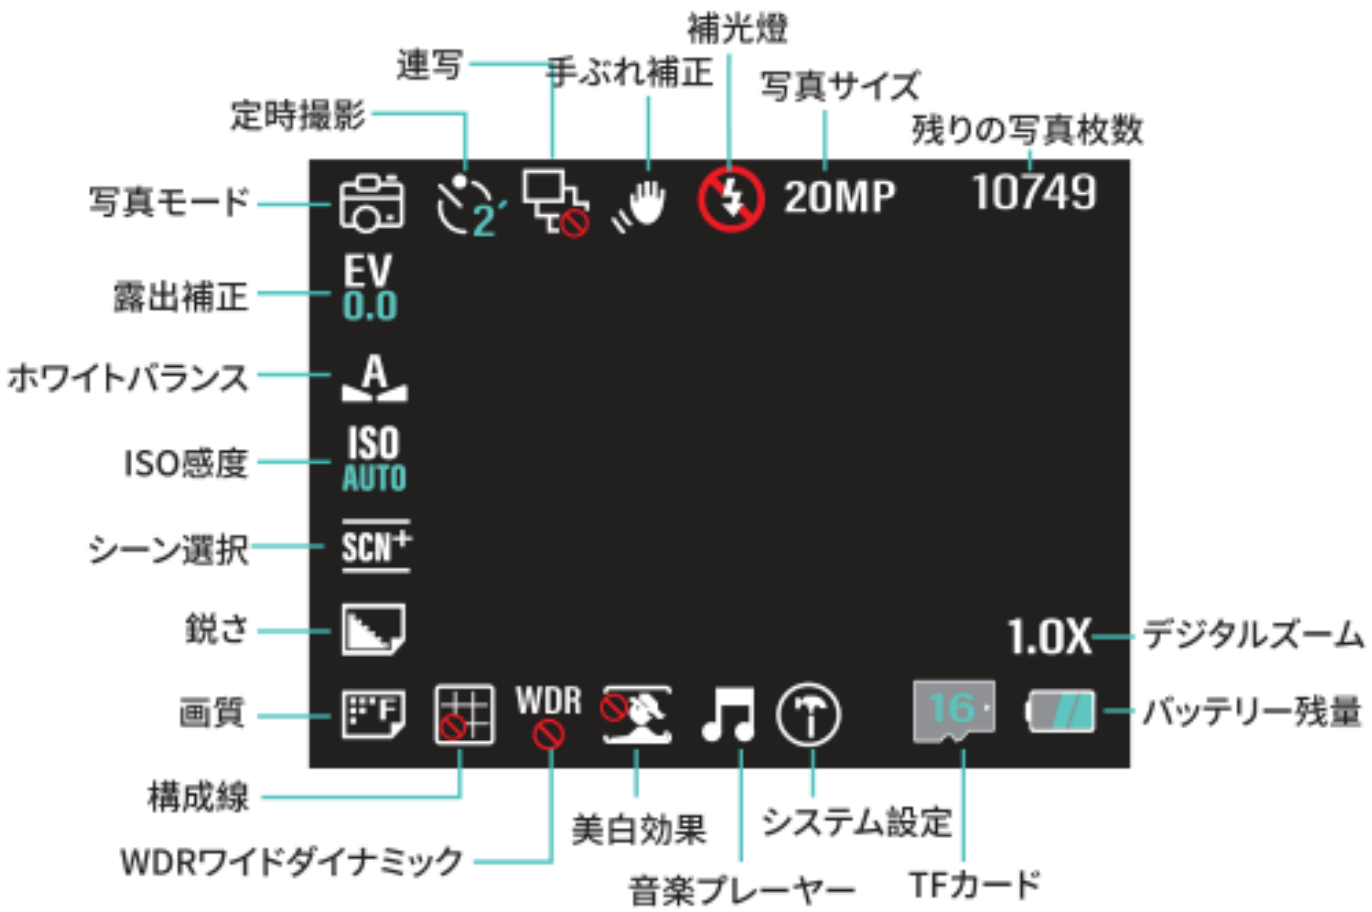

1.写真を撮

撮影したい画面や被写体にカメラを向け、カメラをしっかりと持ち、シャッターボタンまたはOKボタンを押して写真を撮ると、写真を撮って写真を保存するときにカメラが少し遅れます。

2.定期的に写真を撮る

写真モードでは、左ボタンのタイミング写真ショートカットキーを短く押してショートカット操作を行うか、メニューバーから「タイマー写真」を選択して遅延時間を設定すると、それぞれオフ、2秒、5秒、10秒などのオプションがあります。

3.連続撮影

写真モードでは、メニューバーで連続撮影設定を見つけると、3つの連続撮影モードをオンにすることができ、変更機能はデフォルトでオフになっています。

4.写真を撮って画像を安定させます

このカメラには手ぶれ防止機能が搭載されており、撮影時の手ぶれで画像がぼやけることはありません。メニューバーで写真安定化モードを見つけて、このオプションを開きます。

5.フィルライト

暗い環境や逆光の環境では、メニューキーを選択して、メニューバーでカメラの内蔵フラッシュをオンにします。

6.写真サイズ

写真のサイズと画質によって、カメラが撮影できる写真の数と各写真のスペースが決まります。

7.露出補正

この設定では、撮影した写真の明るさを調整でき、確認後、機能アイコンに該当するアイコンが表示されます。

8.ホワイトバランス

この機能は、光源の色に応じてキャプチャした写真やビデオを調整できます。

9.ISO感度

一般に、感度が高いほど写真の粒状性が粗くなり、感度が低いほど写真の粒状性が細かくなる、つまり写真の鮮明度が高くなります。

10.シーンの選択

このカメラには、自動、風景、ポートレートなど、さまざまな環境の撮影要件を満たすために、3つの異なるシーンがあります。

11.シャープネス

この設定では、画像のエッジがシャープになったり低くなったりするように、画像のシャープネスを調整します。

12.画質

写真の品質は撮影できる写真の数に影響し、非常に高い品質とは、撮影できる写真が少なくなることを意味しますが、保存された写真の品質は高く、デフォルト設定は高画質撮影です。

13.構成線

このカメラにはグリッドライン機能があり、メニューバーでこの機能をオンにすることができます。

14. WDRワイドダイナミックレンジ

WDRは、シーンの最も明るい部分と最も暗い部分が同時にはっきりと見える場合です。ワイドダイナミックレンジは、画像内で分解できる最も明るい輝度信号値と、分解できる最も暗い明るい光信号の値の比率です。 カメラがこのモードの場合、画像の角度を大きくすることができ、暗い場所でも撮影できます。メニューバーで[オン]を選択できます。

15.美化効果

このカメラには美化効果があり、下のメニューバーで美化アイコンを見つけることでオンにすることができます。

16.音楽プレーヤー

このカメラには音楽再生機能があり、MP3 形式の音楽を再生できます。

17. システム設定


このシステム設定には、マシンに関するいくつかの重要なパラメータ設定があります。

言語設定	12の言語オプションをサポート
画面の明るさ	8つのレベルは画面の明るさを調整でき、デフォルトの明るさは8レベルです。
スクリーンセーバー	デフォルトでは、画面は自動的に2分間オフになり、画面はしばらくの間自動的にオフになります
自動電源オフ	システム設定では、自動シャットダウン時間を設定でき、デフォルトは5分の自動シャットダウンです。

キーサウンド	選べる3種類のキーサウンド
システムボリューム	7段階の音量調節が可能
日付/時刻	システム設定に移動し、日付/時刻オプションを選択して調整します
カードのフォーマット	TFカード上のすべてのビデオ、写真、オーディオ録音、その他のファイルをフォーマットします。
工場出荷時の設定に戻す	カメラのパラメータが乱雑な場合は、カメラを工場出荷時の設定に戻すことができます
ソフトウェアバージョン	ファームウェアのバージョン情報

記録モード

カメラの電源を入れると、マシンはデフォルトで写真モードに入り、モードボタンを短く押すとビデオモードに切り替わります。

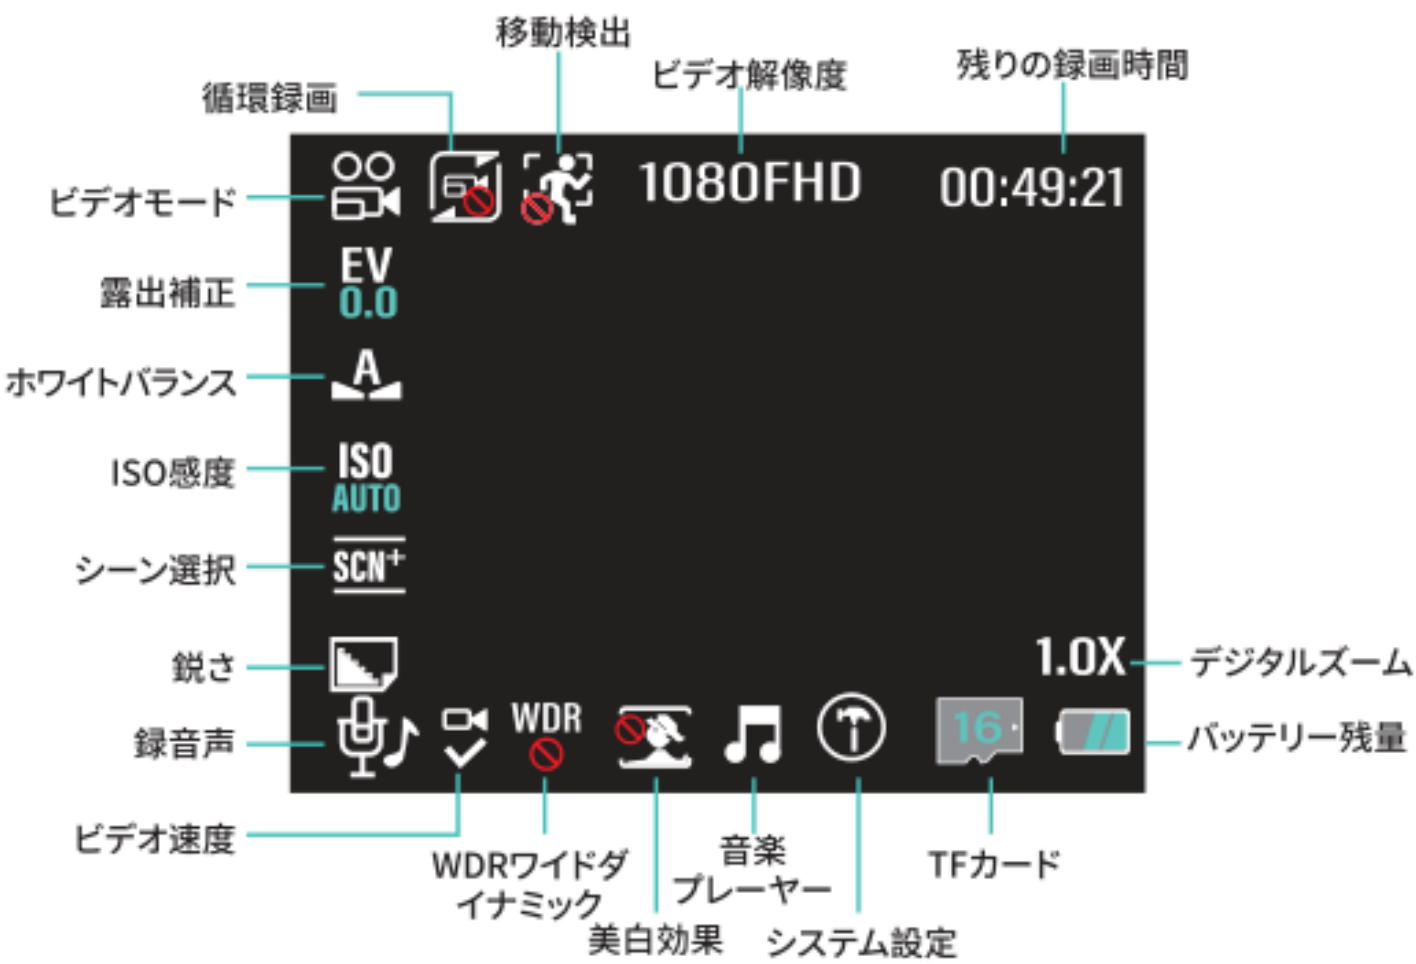

1.ビデオ録画

ビデオ録画モードに切り替え、シャッターボタンを押して録画すると、画面の右上隅に録画時間が表示されます。T キーまたは W キーを押すと、ビデオ画面を拡大および縮小できます。上ボタンを押すと、ワンクリックでスクリーンセーバーモードに入ります。

2.ループビデオ

この設定ループ録音機能はオフで、マシン録音時間は10分で、ループ録音を行うことができます各動画の長さは、最小 1 分から最大 10 分まで設定できます。

3.モーション検知

この設定は、ビデオ画面内で人やその他の物体が動いているとき、またはマシンが動いているときに検出でき、録画が自動的に開始され、画像がさまざまなフレームレートでカメラによってキャプチャされます。

4.ビデオ解像度

マシンのビデオ解像度を調整し、メニューバーに入り、ビデオ解像度を選択し、上/下ボタンを短く押してビデオ解像度を選択します。

5.ビデオ速度

ビデオは通常、デフォルトで通常の速度で録画され、スローモーションとタイムラプス(高速録画)機能から選択できます。 注意: スローモーションおよびタイムラプス再生中に音が出ません。


6.ビデオオーディオ

録音されたオーディオは通常デフォルトでオンになっており、メニューバーで[オフにする]を選択でき、オフにすると、通常のビデオ再生を録画するときに音が出なくなります。

注:録画時、マシンは2分後に自動的にスクリーンセーバーモードに入り、ボタンのいずれかを押して画面を点灯させ、期間を設定するか、設定モードでオフにすることができ、メモリ容量がいっぱいになると、マシンは自動的に録画を停止します。

再生モード

右ボタンを押すとすぐに再生モードに入り、アイコンの変化に注意してください。再生モードでは、TFカードカメラで撮影して保存した写真やビデオ、スライドショーファイルをプレビューしたり、写真やビデオクリップを保護、ロック、削除したりできます。

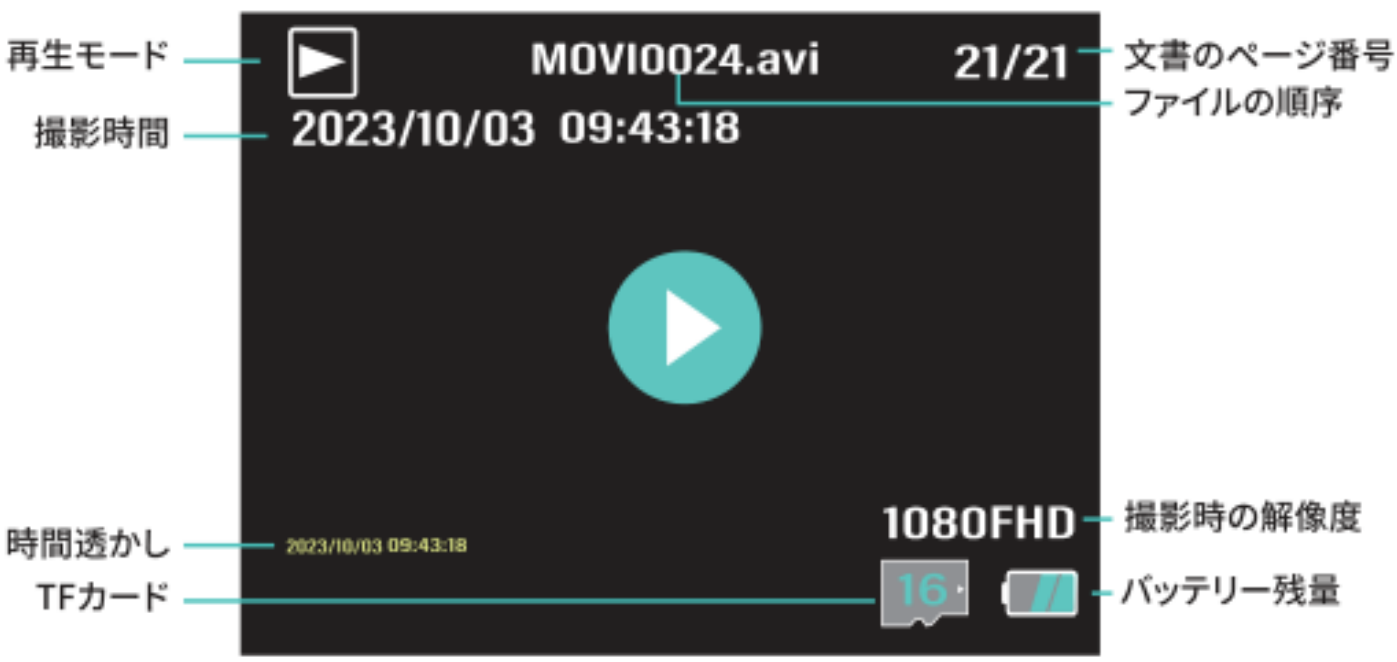

1.ファイルをロックします

再生モードでは、メニューボタンを押して写真またはビデオファイルをロックし、もう一度メニューボタンを押してファイルのロックを解除できます。

2.画像を表示する

(1)左/右ボタンを短く押すと、画像の閲覧とビデオの表示が切り替わります filesファイル

(2)Tボタンを押すと、画像を拡大でき(元の画像は縮小できないことに注意してください)、画像をズームインして16倍ズームする過程で、上下左右のキーを押して写真の詳細を表示できます。モードボタンを押して終了し、元の画像に戻ります。

(3)上のボタンはスライド上の画像を再生できます

(4)ボタンを短く押すと、画像が削除されます。

3.再生ビデオを表示します

(1)OKボタンを短く押してビデオを再生します

(2)ビデオを再生する途中で、右ボタンを短く押すとビデオをすばやく再生できます。

左ボタンを押すと、ビデオがすばやく反転し、再生可能なビデオインターフェイスに戻ります(高速ビデオと高速反転ビデオの両方に音が出ないことに注意してください)。

(3)キーを短時間押すと、ビデオファイルを削除できます。

TF カードからコンピューター(コンピューター)に画像またはビデオファイルをダウンロードする方法:

1.カードリーダーを使用してコンピューターに接続します

2.カメラとコンピューター(コンピューター)をUSBケーブルで接続します

3.コンピューター (コンピューター) を開き、リムーバブル ディスクの場所を見つけて、写真やビデオ ファイルを表示するために開く DCIM フォルダーを選択します。

製品付属品









標準構成:カメラ* 1データケーブル* 1ストラップ* 1マニュアル* 1

(アクセサリーのスタイルについては、最新のマッチングと新しい物理的な製品を参照してください)

注意事項

この製品は精密電子製品であり、使用中は次の点に特別な注意を払う必要があります。

1.製品を分離または改造しないでください。

2.製品を激しく振ったり衝撃を与えたり、製品の上に重いものを置いたりしないでください

3.子供が触れたときの事故や落下を防ぐために、製品が安全に配置されていることを確認してください。

4.許可なく機械を分解しないでください、そうでなければ保証する権利を失います、質問がある場合は、販売店にお問い合わせください。

5.湿気、煙、その他の過酷な環境に近づかないでください。

直射日光の当たる場所や火を焼く場所に設置したり、高温や低温の環境に近づけたりしないでください。

6.バッテリー充電に関する注意事項:

この製品の電池はポリマーリチウム電池で、充電できます。

長期間使用しない場合は、3ヶ月ごとに充電してください。

リチウム電池はカスタマーサービススタッフが交換する必要があり、ユーザーが自分で交換することはできません(注:電池を適切に交換しないと爆発の危険性があり、同じタイプまたは同等のタイプの電池とのみ交換できます)。

充電:本機の標準装備アダプタを介して充電する.充電の過程で、製品は一定の温度上昇があり、正常な現象に属します。

製品仕様

製品名	H15デジタルカメラ
表示画面	2.4インチHDスクリーン
イメージセンサー	CMOSセンサー
デジタルズーム	16倍デジタルズーム
機能紹介	写真やビデオを撮影し、アルバムを再生する
画像フォーマット	jpg形式
動画ファイル形式	aviファイル(avi)
接触	EV-2.0_EV+2.0
ホワイトバランス	オート/晴れ/曇り/白熱灯/蛍光灯
磯	オート/100/200/400
シーン選択	自動/横長/縦向き
サポート	音楽を再生、手ぶれ補正、連続撮影、時限撮影、ループ録画、動体検知、美化などの機能をオンにする
ディスプレイの明るさ	明るさ調整可能な8ノット
製品言語	12種類
接続	高速マイクとUSB2.0インターフェース
最大出力	のDC-5V/2Aの
アクションボタン	11ビット機能ボタン
容量ストレージ	内蔵の 32G / 64G / 128Gオプション、実際の購入を参照してください
充電ポート	タイプC
電源	内蔵充電式リチウムポリマー電池
動作温度	-10°Cから55°C
商品のサイズ	97*57*25mm