
Correrty set
The stand in specially designe for it slot.

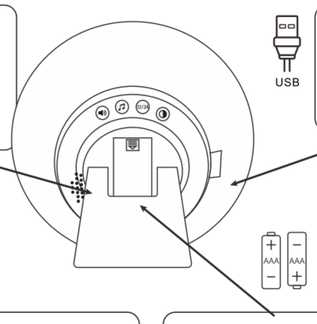

Use USB cable to connect alarm clock to computer
-Use the adapter to an electricity network

Use batteries as a backup power source (if the electricity is down,no access to the network or computer; using the alarm clock in different locations,the batteries save all your setting).

To install the batteries:
Used 2 batteries type AAA(not included).
-Open thebattery compartment, following the arrow on the battery cover to remove the cover.
- Insert 2 AAA batteries,observe the polarity, which can be viewed inside the compartment.
-Replace the battery cover

When only batteries are used, the product functions are limited:

*Time display is switched off in15 sec.Press any buttons on back side to switch on.

*At the set alarm time sound is played for 2 minutes. Snooze is available.press or touch any button except Snooze to stop the sound.

*All light functions--are not available.

*Radio is available.

Setting current time

When the plug is connected, the hours indication startsto blink.

Use for setting hours ⊕⊖ to adjust and confirm

setting minutes ⊕⊖ to adjust and confirm

If the indication stopped touch again.

12H-24H-format

Press 12/24 backside.

12H
AM or RM Will appear on time display.



Changing current time

Touch
The hours indication starts to blink.

Use for setting hours ⊕⊖ to adjust and confirm

setting minutes ⊕⊖ to adjust and confirm

If the indication stopped touch again.

Intensity of time display

press backside



RADIO FM

Touch FM to turn on/off

Hold 3 sec FM

All available FM channels will be scanned and saved automatically.

Touch ⊕⊖ to select FM station.

Press backside to choose volume level 1-15.

Note:time display isn't indicated when Radio is turned on.

Setting the alarm wake-up time

Touch
to switch on/off alarm mode.

/
appears/disappears on clock display.



Hold 3 sec to set alarm.

The hours indication starts to blink.

Use for setting hours ⊕⊖ to adjust and confirm

setting minutes ⊕⊖ to adjust and confirm

If the indication stopped touch again.

Nature sounds

Press backside to select,

Use to adjust ⊕⊖ 1-7 sounds.Press to confirm selection.

Each sound (1-6)will play 5sec before you choose.
7--Radio last listened station will be as waking sound.
Press backside toselect volume level 00-15

Sunrise light simulation

30 min before wake up time ,light sunrise is started gradually to increase its brightness;
At alarm time the nature sound or Radio the sound will be played for 2 minutes.

During sound playing you may:
- Touch the sound is stopped and in 5 min it will be played for2 minute.
Press or touch any buttons except to stop sound.
- press and hold to switch off wake up light.

Setting the Sunset time

Touch to switch on/off sunset mode
/ appears/dissapears on time display.



Hold 3 sec to set:
The hours indication starts to blink.
Use for setting hours ⊕⊖ to adjust and confirm
setting minetes ⊕⊖ to adjust and confirm
If the indication stoppde touch again.

Light

Touch to switch on the light
Use ⊕⊖ to adjust the level (1-10) of the brightness
Second touch is started automatically color changing mode
Use ⊕⊖ to select color:Green,Red ,Blue,Purple, Orange,Indigo
THIrd touch to switch off the light

Sunset light simulation

30 min before sunset time,the light is turned on with 100% brightness whatever at any mode and then the brightness is reduced gradually and will turn off at sunset time.


During sunset light is turned on you may: Press and hold to turn off the light.


Description

∗led time display in 12H-24 format
*Sunrise wake up light simulation
*Sunset light
*5Nature sounds to wake up
*Bedside lamp: White ligt flux: 73LM
*1-10 levels of the brightness
*6 colors of the light +White light
*Automatically changing of color light
*Radio FM ntenna
*15volume levels
*Touch mode
*Power supply: DC 5V;2xAAAbateries; USB cable.

Note: time display isn'tindicated when Radio is turned on. When the radio is turned on, you may see the symbol of the radio station which broadcasts. This function was been designed to surf the desired radio station. You may touch FM to keep abreast of the current time and then touh FM again to continue listening to the radio.

6638 Wake up light
User Manual

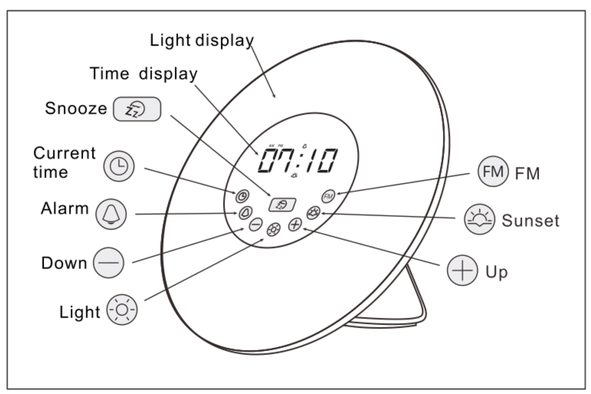

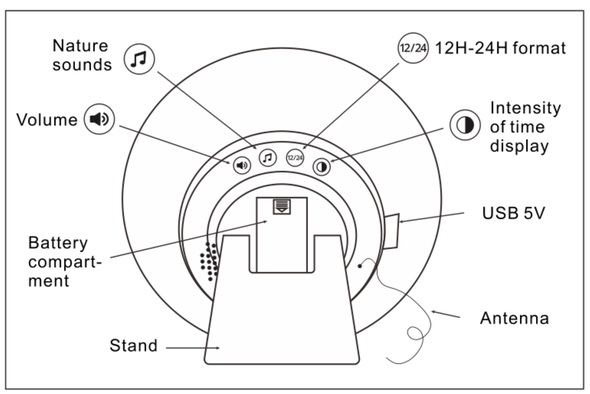

Warning

*Don'tpress two or more keys at the same time
*To avoid failure interval of every touch must be more chan1 second.
*If there is any malfunction, please unplug the unit for 3 seconds.
* If the batteries are not used for a long time ,please remove.
* When the batteries voltage is loe, the product will get restarted and all settings are lost . pls replace new batteries.

Warning