展开尺寸：480*105mm 折叠尺寸：96*105mm

BT-H6

五合一多功能蓝牙音箱

Bluetooth+MP3+FM Radio



使用说明书

请你在使用本产品之前通读本手册，并妥善保存本手册以备查阅

产品描述：

本品具有蓝牙接收,U盘/TF卡MP3音乐播放，高灵敏度FM接收功能。采用木质独立音腔箱体，声音效果更出众。

注意事项：

- 本产品在充电和使用中会有轻微发热，属正常现象。
- 清洁本产品时请先关闭电源并断开所有外部连接。
- 请使用能够提供输出规格5V/1A的充电设备，以免造成设备损坏。
- 产品采用内置聚合物锂电池，在不使用时请关机。
- 请勿长时间把本机开到最大音量,会影响扬声器寿命
- 尽量在清洁环境中使用，请勿让本机接触火焰或者点燃的烟头
- 尽量让本机保持干燥，请勿接触水及湿气
- 请勿衰落，抛掷，或者踩踏
- 请使用抗静电的软布清洁本产品，切勿用化学物质、洗剂，有摩砂性的清洁剂擦拭
- 请勿将本机置于过冷或过热的环境中
- 请勿在有明确告之禁止使用无线电电子产品的场合使用本产品

当电池电量不足或不装电池,只使用外部充电器供电时,可能会出现声音断续,反复重启等现象,
此时请将音量适当调小


装箱清单

- 主机音箱：1台
- USB充电线：1条
- AUX连接线：1条
- 说明书：1本

功能参数:

- 工艺材质：高密度木质+进口ABS塑料
- 蓝牙音频接收（V5.0), 蓝牙名：H6
- 蓝牙免提通话
- FM广播接收（87.5-108MHz), 天线伸展全长35cm
- USB/TF卡播放
- AUX-IN外接音源输入
- 支持后插优先播放
- 按键操作，360度旋转编码器数字音量调节
- 外接DC 5V 1A充电器，内置3.7V 2000mAh锂离子电池
- 时钟设置，休眠时间设置
- LED多功能数码显示屏
- 蓝牙接收距离空旷距离10m
- 扬声器单元：内磁57mm*57mm, 4Ω 5W
- 低音单元：φ52mm
- 输出功率：RMS 5.0W（THD+N=10%, f0=1KHz)
- 信噪比：≥70dBA
- 产品规格：140mm*105mm*80mm
- 净重：0.48kg

操作介绍:

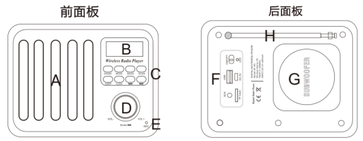

按键和旋钮操作:

1. **STANDBY:** 待机,任何模式下按此键待机显示时钟,长时间不用要关闭机器后面板开关.
2. **MODE:** BT/FM/USB/TF/AUX/TIME模式切换
3. **BASS:** NOR/ROCK/POP/CLASS/JAZZ/BASS(普通/摇滚/流行/古典/爵士/低音）音效模式切换
4. **SCAN:** FM模式下,自动搜索所有节目并保存.
5. **SLEEP:** 休眠设置,可设置自动关机时间以及关闭此功能,15/30/60/OFF(单位：分钟）
6. **CLOCK:** 时钟设置,仅在TIME模式下才可以调整年/月/日/时间
7. **⏮** : 上一曲/上一个电台,调整时间
8. **⏭** : 下一曲/下一个电台,调整时间
9. **旋钮:** 顺时针旋转音量增加,逆时针旋转音量减小. 按下播放/暂停,接听/挂断电话. 在TIME模式下旋转快速调整数字.
10. MIC: 免提通话麦克风

外部接口

- AUX: 外部音源输入
- TF Card: TF卡卡槽
- USB: U盘接口
- DC 5V: Micro USB 充电线接口
- ON/OFF: 电源开关
- LED: 充电指示灯

如何使用：

充电:

将USB充电线插入DC5V 1A规格以上的电源适配器，Micro USB插入机器背面的DC5V插座，LED充电指示灯亮起，充满电后指示灯灭。常规充电时间大约为4-6小时,充电器功率不足时充电时间可能会延长. 当屏幕左上角开始闪烁时表示电量低,请及时充电.
首次使用本机时,至少充电4小时以上.

开机

打开背面开关“ON”开机,显示时间，按“ MODE”进入蓝牙/FM/USB/TF/AUX/TIME 模式,各模式有语音提示.屏幕显示相应的状态符号.不插入U盘/TF卡/AUX时，无法进入此模式.

蓝牙模式

进入蓝牙模式后,屏幕显示“BLUE”,手机搜索蓝牙名“H6”根据手机提示进行配对,配对成功后会有语音提示. 然后用“上一曲/下一曲”“旋钮” 控制歌曲播放以及调节音量. 按旋钮接听/挂断电话. 长按直接挂断.连续按两下拨打最后一个电话.
(本机设置有低功耗模式，仅在蓝牙模式下才可以连接手机，切换到其它模式蓝牙会自动断开开，再切回蓝牙模式会自动重新连接已配对的手机）

FM收音模式

进入‘FM’模式，按SCAN自动搜索所有频道并保存，短按上/下一曲切换保存的节目，也可以长按上/下一曲搜索最近的频道。可以调节拉杆天线的长短和方向以获取更好的接收效果。

USB/TF模式

当插入U盘或者TF卡时会自动进入相应的模式，并自动开始播放MP3文件，可以控制上/下一曲，以及播放暂停。正常播放时，按‘SCAN’可以选择单曲重复（REP1)/全盘重复(ALL)。如果两者同时插入，后插优先播放，可以用模式键切换。理论最大支持32G, 可能会根据不同品牌有个别不兼容.

AUX模式

外接音源线φ3.5mm,外部音源输入后屏幕显示‘AUX’ 可以用旋钮控制音量

音效切换

在任何模式下，按“ BASS”可以切换音效，本机提供了normal/rock/pop/class/jazz/bass(普通/摇滚/流行/古典/爵士/低音）六种声场模式

时间设定

仅在TIME模式才可调整时间，按 “CLOCK”屏幕上相应的年/月/日/时间数字开始闪烁，用上/下曲按键调整数字，或者旋转旋钮可以快速调整。

休眠设置

在任何模式下，按 “SLEEP”可以设置自动休眠时间,时间可以设置为15/30/60分钟,也可以设置为“OFF”关闭此功能.

故障排除

1. 充电指示灯不亮
检查充电线,或电源适配器是否正常,请更换
2.充电指示灯闪烁
音量太大或者电源适配器功率太小,请适当调小音量
3.开机自动关机,或自动重启
电池电量不足,请及时充电
4.手机蓝牙搜索不到本机
只有在蓝牙模式下才可以与手机配对连接, 每次手动断开/连接间隔要10S以上，否则可能一次连接不成功
5.U盘/TF卡播放卡顿，或者自动跳出
U盘/TF卡质量有问题，请更换
6. AUX无声
请使用本机配送的AUX线，插入AUX线后无法自动切换到AUX模式,请手动切换
7.扬声器音量最大时有嗡嗡共振声
播放的音频文件原始音量太大,超过了扬声器的最大功率,请适当调低音量.
8.播放声音小音质差
播放的音源品质太低,尽量选择码率在128Kbps以上的音源
9.免提通话时对方听到的声音太小
距离MIC太远，请距离MIC在30cm以内

FC CE

MADE IN CHINA

BT-H6

DIGITAL MULTIMEDIA SPEAKER

Bluetooth+MP3+FM Radio

USER GUIDE



Introduction :

The device is a home-use all-in-one wireless speaker, which integrates bluetooth, FM, Mp3 player, Aux .It made of wooden case to provide better sound quality.

Safety warning :

- Read and understand all safety guide warning item.
- Please use charging equipment that can supply 5V/1A of output voltage to avoid damage to the equipment
- The product built-in li-ion battery, please put OFF the switch when it's not in use long time
- It's not allowed to make the product suffer from rain or damp, not spill any liquid on the product
- It's not allowed to make the product close to high temperature heat source, or blow the product at high temperature
- It is not allowed to make the product fall or suffer from thump or apply great pressure on the product

When the battery is too low, there maybe intermittent sound and restarting repeated.
Please turn down the volume


Packing List

- Main uint: 1pcs
- Micro USB charging line: 1pcs
- AUX line: 1pcs
- User guide: 1pcs

Function description

- Material: wooden & ABS
- Wireless audio receiver (V5.0),wireless Name：H6
- Wireless hands-free
- FM radio receiver (87.5-108MHz), Antenna length 35cm
- USB/TF card Mp3 player
- AUX-IN
- support the last inserted device will play first.
- Button operation , 360 Knob volume adjustment
- Need DC 5V 1A charging , 3.7V 2000mAh li-ion battery inside
- Clock setting, sleep time setting
- LED digital display
- Speaker unit size：57mm*57mm, 4Ω 5W
- Subwoofer unit size：φ52mm
- Output power： RMS 5.0W (THD+N=10%, f0=1KHz)
- SNR: ≥ 70dBA
- SIZE：140mm*105mm*80mm
- Net weight：0.48kg

Main structure

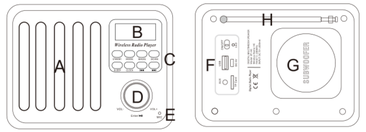

Button & konb operation:

1. STANDBY: In any mode enter standby mode(show time), long time not to use, put the switch to OFF
2. MODE: Mode witch:BT/FM/USB/TF/AUX/TIME
3. BASS: NOR/ROCK/POP/CLASS/JAZZ/BASS EQ switch
4. SCAN: In FM mode, auto search radio channel; in USB/TF mode, repeat one/all
5. SLEEP: Sleep time setup 15/30/60/OFF(minute)
6. CLOCK: Only time mode use, setup Y/M/D/H/M
7. ⏮ : previous song/channel, time adjustment
8. ⏭ : next song/channel,time adjustment
9. KNOB: Turn the volume up/down. Press to play / pause, answer / hang up calling. In TIME mode, quickly to adjust the number.
10.MIC: Hands-free micphone

Interface

- AUX: 3.5mm
- TF Card: TF card socket
- USB: U disk socket
- DC 5V: Micro USB charging port
- ON/OFF: Power switch
- LED: Charging light

How to use :

Charging:

The attached usb cable is used for charging the inside li-ion battery, Micro usb end is connected to the"DC 5V" slot of the speaker, USB end is connected to AC/DC adapter(5V 1A), after charge is stared, the LED lamp will display. the LED lamp go out when the product is fully charged. Usually it need 4 to 6 hours to charging enough ,

First time using this product, at least 4 hours of charging

Power ON:

Put switch to"ON",display time. press "mode" into Bluetooth /FM/USB/TF/AUX/TIME,Each mode has a voice prompt. The screen displays the status symbol. This mode can not be entered without inserting the U disk / TF card / AUX.

Bluetooth mode:

After enter Bluetooth mode, the screen display"BLUE" , mobile phone search bluetooth name"H6"to pairing. there will be voice tips after successful pairing. Then operation previous / next , knob to control the song playing and adjust the volume. Press the knob to answer / hang up the calling.
Long press to hang up, double press to recall the last calling.
(Can be connected only in Bluetooth mode. Switching to other modes Bluetooth will disconnect, and back to Bluetooth mode will automatically reconnect the paired phone.)

FM radio mode

Enter "FM" mode, press SCAN to search and save all radio channels, Short-press previous/next to change the saved channels, you can also long-press previous/next to search for the nearest channels. It can adjust the length and direction of the antenna to get better reception effect.

USB / TF Mode

When the USB disk or TF card is inserted, it automatically enters the mode, and start to playing MP3 files, operation previous/next, play/ pause to control playing. When playing , press "SCAN" You can choose single repeat(REP1) / All repetition(ALL). If U disk and TF card both are inserted , later plug is played first, you can switch the mode which you want. support memory 32G.

AUX mode

External audio source input to 3.5mm port, display show"Aux". control the volume with knob

EQ Switching

In any mode, press "BASS" to switch sound effects. It provides normal / rock / pop / class / jazz / bass 6 EQ modes

Time Setting

Only in TIME mode can adjusted time, press "CLOCK" the numbers of year/month/day/time on the screen begin to flash, adjust the numbers with the Pre/next button, or turn the knob to quickly adjust.

sleep time setting

In any mode, press "SLEEP "; The sleep time can be set to 15/30/60 minutes, or it can be set to" OFF"disable this function.

Troubleshooting

1. Charging LED is not light.
Check the charging wire or the power adapter .
2. Charging LED is flashing
the volume is too loudly or the adapter power is not enough, please turn the volume down
3. Automatic shutdown, or automatic restart
Battery is low, please charge in time.
4. Bluetooth can't be find by mobile phone
It's only be found by mobile phone in bluetooth mode, operation disconnect/connect interval must be more than 10S, or it may not be successful connection immediately
5. U disk / TF card plays not smooth, or automatically jump out
USB disk / TF card is bad quality, please replace
6. AUX has no sound
If not into AUX mode automatically after insert the AUX line ,Please switch manually, It's best to use the original AUX line
7. When the speaker is at maximum volume, there is a buzzing sound
The original audio file is too loud to overload the speaker's maximum power. Please turn down the volume appropriately.
8. Play with poor sound quality
Playing audio source quality is bad, try to select audio source with a code rate above 128 Kbps
9. The voice heard by caller is too small when hand-free
It's too far from the MIC. Please stay within 30cm to the MIC.

FC CE

MADE IN CHINA