


Manual

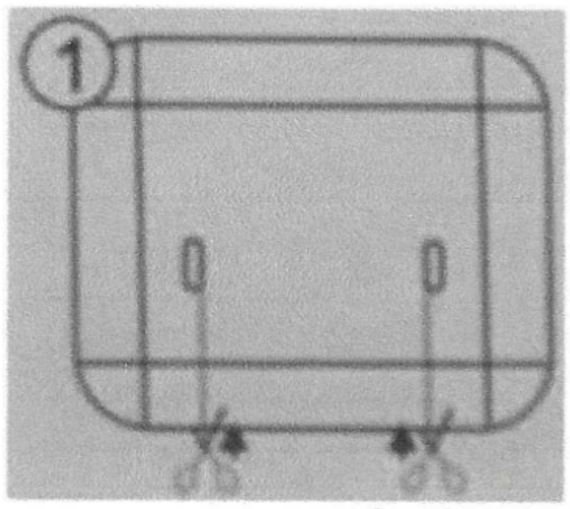


1. Use scissors to cut along the line

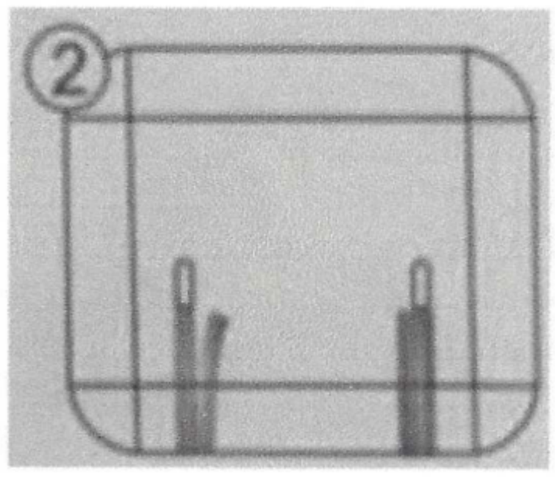


2. Stick the adhesive Velcro along both sides of the cut.

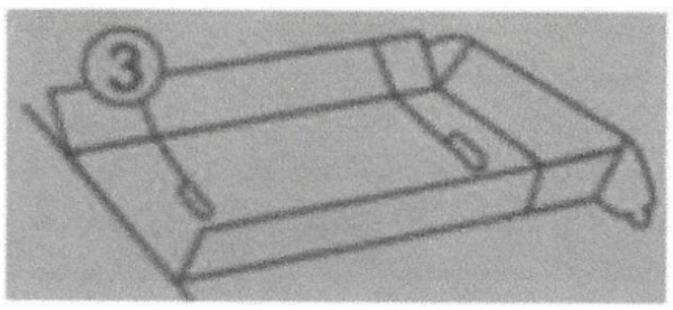


3. Gently fold the four sides

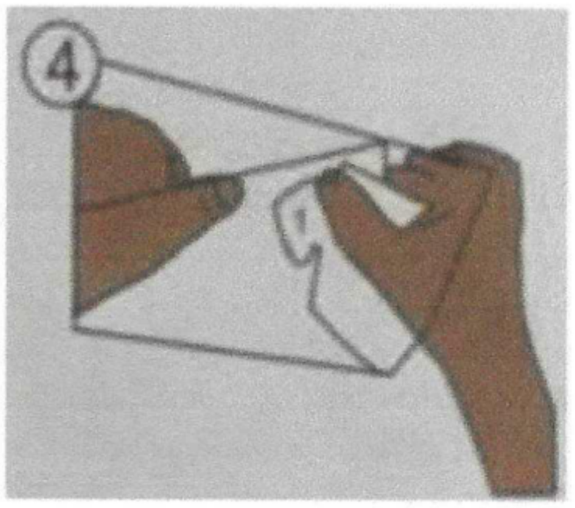


4. Insert the arrow into the opening from the outside (at an angle for easier insertion)

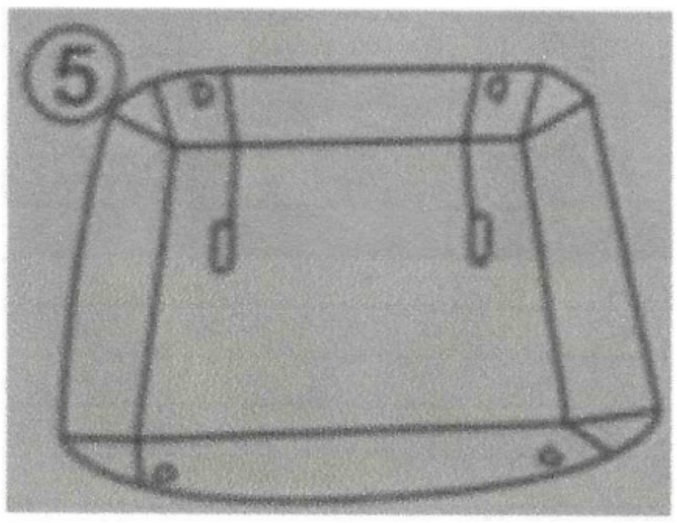

5. Fold it into a box

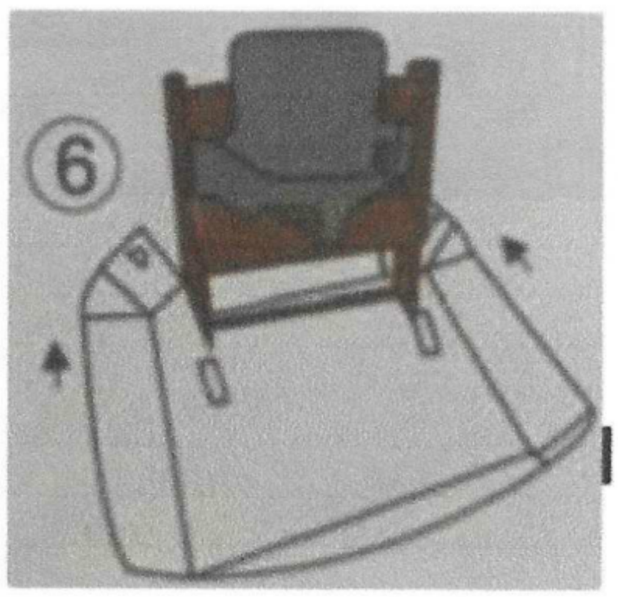

6. Insert the scissors directly from the front of the Stokke high chair.

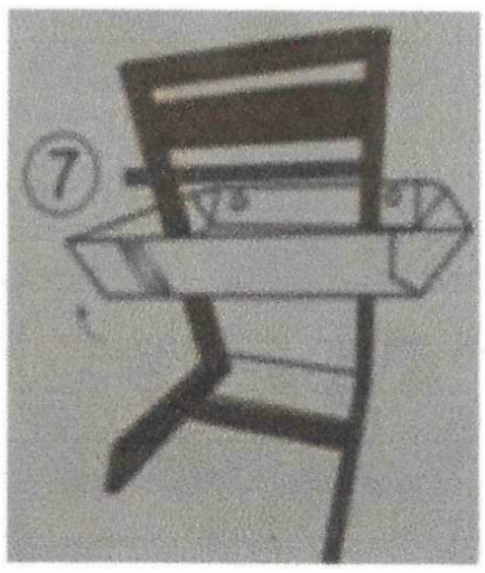

7.After offloor placement, seal the cut with Velcro.

