

# beurer

## HD 150 XXL Cosy Taupe HD 150 XXL Nordic Taupe



HD 150 XXL Cosy Taupe



HD 150 XXL Nordic Taupe



|           |                                                  |    |           |                                                    |    |
|-----------|--------------------------------------------------|----|-----------|----------------------------------------------------|----|
| <b>EN</b> | Heated blanket user guide.....                   | 2  | <b>PL</b> | Heated blanket<br>User manual.....                 | 51 |
| <b>EN</b> | Heated overblanket<br>Instructions for Use ..... | 9  | <b>NL</b> | Electric overblanket Instructions for<br>Use ..... | 58 |
| <b>FR</b> | Electric blanket<br>Instructions for use .....   | 16 | <b>DA</b> | Heated blanket User guide .....                    | 65 |
| <b>ES</b> | Electric blanket<br>Instructions for use.....    | 23 | <b>SV</b> | Heated blanket<br>User manual.....                 | 72 |
| <b>IT</b> | Heated blanket<br>Instructions for use .....     | 30 | <b>NO</b> | Heated blanket<br>User guide.....                  | 79 |
| <b>TR</b> | Heated blanket<br>Instructions for use .....     | 37 | <b>FI</b> | Heated Blanket User<br>Manual .....                | 86 |
| <b>RU</b> | Electric blanket<br>Instructions for use .....   | 44 |           |                                                    |    |





**Read these instructions for use carefully. Follow the warnings and safety instructions. Keep the instructions for future reference. Make the instructions available to other users. If you pass the appliance on to someone else, include the instructions as well.**

## Contents

|                                 |   |                                       |   |
|---------------------------------|---|---------------------------------------|---|
| 1. Contents.....                | 3 | Setting the temperature.....          | 6 |
| 1.1 Device description .....    | 3 | 4.5 Automatic switch-off.....         | 6 |
| 2. Important instructions       |   | 4.6 Switch off.....                   | 7 |
| Keep for future reference ..... | 4 | 5. Cleaning and maintenance .....     | 7 |
| 3. Intended use.....            | 6 | 6. Storage.....                       | 8 |
| 4. Operation .....              | 6 | 7. Disposal.....                      | 8 |
| 4.1 Safety .....                | 6 | 8. What to do if problems arise?..... | 8 |
| 4.2 Commissioning .....         | 6 | 9. Technical data .....               | 8 |
| 4.3 Switching on .....          | 6 | 10. Warranty / Service.....           | 8 |
| 4.4 .....                       |   |                                       |   |

## Key to symbols

The following symbols are used on the appliance, in the user manual, on the packaging and on the appliance's rating plate:

|  |                                                                                                  |  |                                                   |
|--|--------------------------------------------------------------------------------------------------|--|---------------------------------------------------|
|  | <b>WARNING;</b> Warning regarding risks of injury or health hazards                              |  |                                                   |
|  | <b>CAUTION;</b> Safety warning regarding possible damage to the appliance/accessories            |  |                                                   |
|  | <b>NOTE;</b> Indicates important information                                                     |  |                                                   |
|  | Read the instructions                                                                            |  | Do not insert needles                             |
|  | Do not use when folded or pushed together                                                        |  | Not to be used by very young children (0–3 years) |
|  | Manufacturer                                                                                     |  |                                                   |
|  | The device is double insulated and therefore complies with protection class 2.                   |  |                                                   |
|  | Disposal in accordance with the EC Directive on Waste Electrical and Electronic Equipment (WEEE) |  |                                                   |

|                                                                                   |                                                                                                                                                                  |                                                                                   |                   |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-------------------|
|   | Separate packaging components and dispose of them in accordance with local regulations.                                                                          |                                                                                   |                   |
|  | Marking for identification of the packaging material. A = Material abbreviation, B = Material number:<br>1–7 = plastics, 20–22 = paper and cardboard             |                                                                                   |                   |
|  | Separate the product and packaging components and dispose of them in accordance with local regulations.                                                          |                                                                                   |                   |
|  | This product complies with the requirements of the applicable European and national directives.                                                                  |                                                                                   |                   |
|  | Conformity assessment mark for the UK                                                                                                                            |                                                                                   |                   |
|  | The products have been verified as complying with the requirements of the EAEU technical regulations                                                             |                                                                                   |                   |
|   | The textiles used in this appliance meet the high human-ecological requirements of the Oeko-Tex® Standard 100, as verified by the Hohenstein Research Institute. |                                                                                   |                   |
|  | Maximum washing temperature 30 °C, very gentle cycle                                                                                                             |  | Do not iron       |
|                                                                                   |                                                                                                                                                                  |  | Do not bleach     |
|  | Do not dry clean                                                                                                                                                 |  | Do not tumble dry |


1. Contents

Check the device to ensure the packaging is undamaged and that the contents are complete. Before use, ensure that the device and accessories show no visible damage and that all packaging material has been removed. If in doubt, do not use the device and contact your retailer or the customer service address provided.

- 1 electric blanket
- 1 Switch
- 1 Instructions for use

1.1 Device description

- 1. Mains plug
- 2. Switch
- 3. Slide switch (ON = I / OFF = 0)
- 4. Buttons for temperature setting
- 5. Illuminated display of temperature settings
- 6. Plug-in coupling

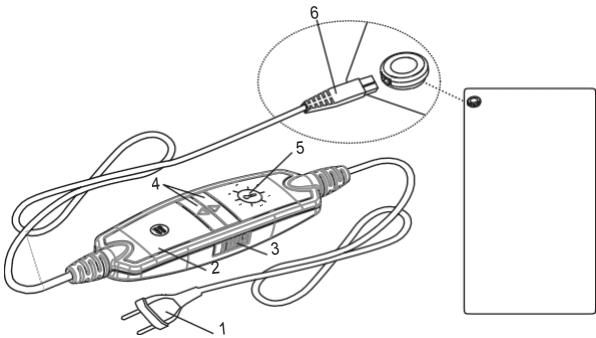

## 2. Important instructions for the

### Save for future use



#### **WARNING**

- Failure to follow the instructions below may result in personal injury or damage to property (electric shock, skin burns, fire). The following safety and hazard warnings are intended not only to protect your health and that of others, but also to protect the product. Therefore, please observe these safety instructions and pass on this manual when passing the item on to others.
- This heated blanket must not be used on people who are sensitive to heat or other vulnerable individuals, as they are unable to react to overheating (e.g. diabetics, people with skin conditions or scarred skin in the area of application, or those who have taken painkillers or alcohol).
- This heated blanket must not be used on very young children (0–3 years) as they are unable to react to overheating.
- The heated blanket may be used by children aged over 3 and under 8 years under supervision, provided that the switch is always set to the minimum temperature setting.
- This heated blanket may be used by children aged 8 years and over, as well as by people with reduced physical, sensory or mental capabilities, or a lack of experience and knowledge, provided they are supervised, have been instructed on how to use the heated blanket safely, and understand the associated risks.
- Children must not play with the heated blanket.
- Cleaning and user maintenance must not be carried out by children without supervision.
- This heated blanket is not intended for use in hospitals.
- This electric blanket is intended for use in a domestic/private setting only, not in a commercial environment.
- Do not pierce with needles.
- Do not use when folded or rolled up.
- Do not use when wet.
- This heated blanket must only be used in conjunction with the switch specified on the label.

- The electric blanket must only be connected to the mains voltage specified on the label.
- The electric and magnetic fields emitted by this electric heated blanket may, under certain circumstances, interfere with the functioning of your pacemaker. However, they are well below the limit values: electric field strength: max. 5000 V/m, magnetic field strength: max. 80 A/m, magnetic flux density: max. 0.1 millitesla. Please therefore consult your doctor and the manufacturer of your pacemaker before using this electric blanket.
- Do not pull, twist or kink the cables.
- If positioned incorrectly, the cable and switch of the heated blanket may pose a risk of entanglement, strangulation, tripping or being stepped on. The user must ensure that excess cable and cables in general are laid safely.
- This electric blanket must be checked regularly for signs of wear or damage. If such signs are present, the electric blanket has been used improperly, or it no longer heats up, it must first be inspected by the manufacturer before being switched on again.
- Under no circumstances must you open or repair the electric blanket (including accessories), as this will compromise its proper functioning. Failure to comply will void the warranty.
- If the power cord of this heated blanket is damaged, it must be disposed of. If the cord is not detachable, the heated blanket must be disposed of.
- Do not expose the switch and cables to direct sunlight.
- While this electric blanket is switched on,
  - sharp objects must not be placed on it,
  - or any heat source such as a hot water bottle, heating pad or similar.
- The electronic components in the switch heat up when the electric blanket is in use. The switch must therefore not be covered or placed on the electric blanket whilst it is in operation.
- Please ensure you follow the instructions in the following sections: Operation, Cleaning and Care, Storage.
- If you have any further questions regarding the use of our appliances, please contact our customer service.

### 3. Intended use



#### CAUTION

This electric blanket is intended solely for warming the human body.

### 4. Operation

#### 4.1 Safety



#### CAUTION

- The electric blanket is equipped with the SAFETY SYSTEM. This electronic sensor technology prevents the blanket from overheating across its entire surface by automatically switching it off in the event of a fault.
- Please note that, for safety reasons, the heated blanket cannot be used again after a fault has occurred and must be sent to the specified service address.
- Under no circumstances should you connect the faulty heated blanket to another switch of the same type. This would also result in a permanent shutdown by the safety system in the switch.

#### 4.2 Commissioning

- First, connect the switch to the electric blanket by joining the plug connectors.
- Then plug the mains plug into the socket.



#### 4.3 Switching on

Set the slide switch (3) on the right-hand side of the switch to position "I" (ON) – see fig. Switch. When switched on, the temperature level indicator is illuminated (5).

#### 4.4 Setting the temperature

To increase the temperature, press the '△' button (4). To decrease the temperature, press the '▽' button (4).

Level 0: OFF  
Level 1: Minimum heat  
Levels 2–5: Individual heat Level  
6: Maximum heat



#### NOTE

You can heat the electric blanket up most quickly by setting it to the highest temperature setting first.



#### WARNING

If the electric blanket is used for several hours, we recommend setting the switch to the lowest temperature setting to prevent the body from overheating and, as a result, possible skin burns or heatstroke.

#### 4.5

This electric blanket switches off automatically after 3 hours. The temperature setting indicator flashes once the blanket has switched off.

To switch the electric blanket back on, first set the ON/OFF slide switch on the side of the unit to the OFF (0) position for 5 seconds. After approximately 5 seconds, you can switch it back on.

## 4.6 Switching off

Set the side slide switch on the control panel to the "0" (OFF) setting to switch off the electric blanket. The temperature setting display will then no longer be illuminated.



### NOTE

If the electric blanket is not in use, set the side ON/OFF slide switch to the "0" (OFF) position and unplug the power plug from the socket. Then disconnect the plug connector and thus the switch from the electric blanket.

## 5. Cleaning and maintenance of the



### WARNING

Always unplug the power cord from the socket before cleaning. Then disconnect the plug connector and thus the switch from the electric blanket. Failure to do so may result in electric shock.



### CAUTION

The switch must never come into contact with water or other liquids. Otherwise, it may be damaged.

- Use a dry, lint-free cloth to clean the switch. Do not use chemical cleaners or abrasive products.
- Small stains on the heated blanket can be removed with a damp cloth or sponge and, if necessary, a little liquid mild detergent.



### CAUTION

Please note that the heated blanket must not be dry-cleaned, wrung out, tumble-dried, mangled or ironed.

- This heated blanket is machine washable.
- Set the washing machine to a particularly gentle wash cycle at 30 °C (wool cycle). Use a mild detergent and measure it out according to the manufacturer's instructions.



### PLEASE NOTE

Please note that washing the heated blanket too frequently can cause wear and tear. The heated blanket should therefore be machine-washed no more than 5 times during its entire lifetime.

- Immediately after washing, stretch the still-wet heated blanket back to its original shape and leave it to dry flat on a drying rack.



### WARNING

- Do not use clothes pegs or similar items to attach the heated blanket to the drying rack. Otherwise, the heated blanket may be damaged.
- Do not reconnect the switch to the heated blanket until the plug connector and the heated blanket are completely dry. Otherwise, the heated blanket may be damaged.



## WARNING

Under no circumstances switch on the heated blanket whilst it is drying! Otherwise, there is a risk of electric shock.

## 6. Storage

If you do not intend to use the electric blanket for a prolonged period, we recommend storing it in its original packaging. To do this, disconnect the plug connector and thus the switch from the electric blanket.



## CAUTION

- Please allow the electric blanket to cool down first. Otherwise, the electric blanket may be damaged.
- Do not place any objects on the electric blanket during storage to prevent it from being sharply creased.

## 7. Disposal

In the interests of environmental protection, the device must not be disposed of with household waste at the end of its useful life. It can be disposed of via the appropriate collection points in your country. Dispose of the device in accordance with the EC Directive on Waste Electrical and Electronic Equipment (WEEE). If you have any queries, please contact your local authority responsible for waste disposal.



## 8. What should I do if I encounter problems with ?

| Problem                                                                                                                                                                                                                                 | Cause                                                                | Solution                                           |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------|----------------------------------------------------|
| The temperature settings are not illuminated during<br>- the switch is fully covered by the electric blanket is connected<br>- the mains plug into a working socket is connected<br>- the side slide switch is set to position "I" (ON) | The security system the electric blanket irreversibly switched off . | Send the heated blanket and the switch to Service. |

## 9. Technical data

See the type plate label on the electric blanket.

## 10. Warranty / Service

Further information on the warranty and warranty conditions can be found in the enclosed warranty leaflet.



**Read these instructions for use carefully. Observe the warnings and safety notes. Keep these instructions for future reference. Ensure that other users have access to these instructions. If the device is passed on, provide the instructions to the next user as well.**

## Contents

|                                        |    |                                      |    |
|----------------------------------------|----|--------------------------------------|----|
| 1. Items included in the package ..... | 10 | Setting the temperature.....         | 13 |
| 1.1 Description .....                  | 10 | 4.5 Automatic switch-off .....       | 13 |
| 2. Important instructions .....        |    | 4.6 Switching off.....               | 13 |
| Keep for future reference .....        | 11 | 5. Cleaning and maintenance .....    | 14 |
| 3. Intended use .....                  | 12 | 6. Storage.....                      | 14 |
| 4. Operation .....                     | 13 | 7. Disposal.....                     | 15 |
| 4.1 Safety .....                       | 13 | 8. What if there are problems? ..... | 15 |
| 4.2 Initial use .....                  | 13 | 9. Technical data .....              | 15 |
| 4.3 Switching on .....                 | 13 | 10. Warranty / service .....         | 15 |
| 4.4 .....                              |    |                                      |    |

## Explanation of symbols

The following symbols are used on the device, in these instructions for use, on the packaging and on the device's type plate:

|  |                                                                                                                       |  |                                                   |
|--|-----------------------------------------------------------------------------------------------------------------------|--|---------------------------------------------------|
|  | <b>WARNING:</b> Warning of risks of injury or health hazards                                                          |  |                                                   |
|  | <b>CAUTION:</b> Safety information regarding potential damage to the appliance or accessories                         |  |                                                   |
|  | <b>NOTE:</b> Important information                                                                                    |  |                                                   |
|  | Read the instructions                                                                                                 |  | Do not insert pins                                |
|  | Do not use folded or creased                                                                                          |  | Not to be used by very young children (0–3 years) |
|  | Manufacturer                                                                                                          |  |                                                   |
|  | The device has double protective insulation and therefore complies with protection class 2.                           |  |                                                   |
|  | Please dispose of the device in accordance with the EC Directive on Waste Electrical and Electronic Equipment (WEEE). |  |                                                   |

|                                                                                   |                                                                                                                                                                |                                                                                   |                   |
|-----------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-------------------|
|   | Separate the packaging components and dispose of them in accordance with local regulations.                                                                    |                                                                                   |                   |
|  | Marking to identify the packaging material. A = Material code, B = Material number:<br>1–7 = Plastics, 20–22 = Paper and cardboard                             |                                                                                   |                   |
|  | Separate the product and packaging components and dispose of them in accordance with local regulations.                                                        |                                                                                   |                   |
|  | This product complies with the requirements of the applicable European and national directives.                                                                |                                                                                   |                   |
|  | United Kingdom Conformity Assessed Mark                                                                                                                        |                                                                                   |                   |
|  | The products demonstrably meet the requirements of the technical regulations of the EAEU.                                                                      |                                                                                   |                   |
|   | The textiles used for this device meet the stringent human ecological requirements of Oeko-Tex Standard 100, as verified by the Hohenstein Research Institute. |                                                                                   |                   |
|  | Wash at a maximum temperature of 30 °C, very gentle wash                                                                                                       |  | Do not iron       |
|                                                                                   |                                                                                                                                                                |  | Do not bleach     |
|  | Do not dry-clean                                                                                                                                               |  | Do not tumble dry |


1. Items included in the package

Check that the device packaging has not been tampered with and ensure that all contents are present. Before use, ensure that there is no visible damage to the device or accessories and that all packaging material has been removed. If you have any doubts, do not use the device and contact your retailer or the specified Customer Services address.

- 1 Heated overblanket
- 1 Control
- 1 Instructions for use

1.1 Description

- 1. Mains plug
- 2. Control
- 3. Slide switch (ON = 1 / OFF = 0)
- 4. Buttons for setting the temperature
- 5. Illuminated display for temperature settings
- 6. Plug-in coupling

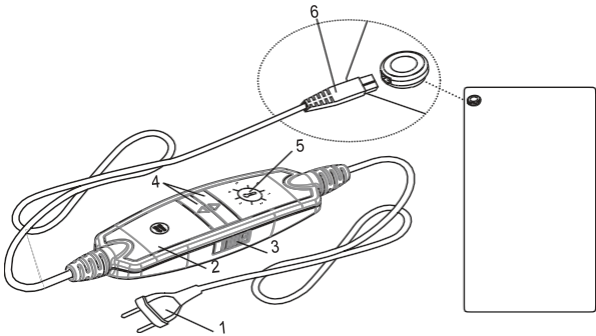

## 2. Important instructions

### Keep for future reference



#### **WARNING**

- Failure to observe the following instructions may result in personal injury or property damage (electric shock, burns, fire). The following safety and hazard information is not only intended to protect your health and the health of others, but also to protect the product. For this reason, please pay attention to these safety notes and include these instructions when handing the product over to others.
- This heated overblanket must not be used by people with reduced sensitivity to heat or by other particularly vulnerable individuals, as they are unable to respond to overheating (e.g. diabetics, people with skin changes caused by illness, or people with scarred skin in the area where the pad is to be applied, or after taking any pain-relieving medication or alcohol).
- This heated overblanket must not be used by very young children (aged 0–3 years) as they are unable to respond to overheating.
- The heated overblanket may be used by children aged 3 to 7 years provided they are supervised. In this case, the control must always be set to the minimum temperature.
- This heated overblanket may be used by children over the age of 8 and by people with reduced physical, sensory or mental capabilities or a lack of experience or knowledge, provided that they are supervised or have been instructed on how to use the heated overblanket safely, and are fully aware of the associated risks of use.
- Children must not play with the heated overblanket.
- Cleaning and user maintenance must not be carried out by children unless supervised.
- This heated overblanket is not designed for use in hospitals.
- This heated overblanket is intended for domestic/private use only, not for commercial use.
- Do not insert needles.
- Do not use when folded or bunched up.
- Do not use if wet.
- This heated overblanket may only be used in conjunction with the control unit specified on the label.
- The heated overblanket must only be connected to the mains voltage specified on the label.

- The electrical and magnetic fields emitted by this heated overblanket may interfere with the function of a pacemaker. However, they are still well within the limits: electrical field strength: max. 5000 V/m, magnetic field strength: max. 80 A/m, magnetic flux density: max. 0.1 millitesla. Please consult your doctor and the manufacturer of your pacemaker before using this heated overblanket.
- Do not pull, twist or make sharp bends in the cables.
- If they are not positioned correctly, there may be a risk of becoming entangled in, being strangled by, tripping over, or stepping on the cable and control unit of the heated overblanket. The user must ensure that excess lengths of cable, and cables in general, are safely routed.
- Please check this heated overblanket frequently for signs of wear and tear or damage. If any such signs are evident, if the heated overblanket has been used incorrectly or if it no longer heats up, it must be checked by the manufacturer before being switched on again.
- Under no circumstances should you open or repair the heated overblanket (including the accessories) yourself, as faultless functionality can no longer be guaranteed thereafter. Failure to observe this will invalidate the warranty.
- If the mains connection cable of this heated overblanket is damaged, it must be disposed of. If it cannot be removed, the heated overblanket must be disposed of.
- Do not expose the control unit and cables to direct sunlight.
- When this heated overblanket is switched on:
  - Do not place any sharp objects on it.
  - Do not place any heat sources, such as hot water bottles, heat pads or similar, on it.
- The electronic components in the control unit heat up when the heated overblanket is in use. For this reason, the control unit must never be covered or placed on the heated overblanket whilst it is in use.
- It is essential to follow the information in the following sections: Operation, Cleaning and maintenance, Storage.
- If you have any questions about using our devices, please contact Customer Services.

### 3. Intended use



#### **CAUTION**

This heated overblanket is designed solely to warm the human body.

## 4. Operation

### 4.1 Safety



#### CAUTION

- The heated overblanket is fitted with the SAFETY SYSTEM. This electronic sensor technology provides protection against overheating across the entire surface of the heated overblanket, with an automatic shut-off in the event of a fault.
- Please note that, for safety reasons, the heated overblanket can no longer be used once a fault has occurred and must be sent to the specified service address.
- Do not connect the defective heated overblanket to another control unit of the same type. This would trigger a permanent switch-off via the control safety system.

### 4.2 Initial- -use

- First, connect the control unit to the heated overblanket by inserting the plug-in connector.
- Then plug the mains plug into the socket.



### 4.3 Switching on the

Set the slide switch (3) on the right-hand side of the control panel to the "I" (ON) setting – see image of control panel. When switched on, the temperature display (5) lights up.

### 4.4 Setting the temperature

To increase the temperature, press the '△' button (4). To decrease the temperature, press the '▽' button (4).

Level 0: OFF  
Level 1: minimum heat  
Settings 2–5: individual heat settings  
Level 6: maximum heat



#### NOTE

The quickest way to warm up the electric blanket is to set it to the highest temperature setting initially.



#### WARNING

If the heated overblanket is used for several hours, we recommend that you set the control to the lowest temperature setting to prevent the body from overheating and thereby avoid any potential burns to the skin or heatstroke.

### 4.5 Automatic switch- -off

This heated overblanket switches itself off automatically after 3 hours. The temperature display flashes after the blanket has switched off.

To switch the heated overblanket back on, first set the ON/OFF slide switch on the control to the OFF position (0) position for 5 seconds. After about 5 seconds, you can switch it on again.

### 4.6 Switching off the heated over

To switch the heated overblanket off, set the slide switch on the side of the control to the "0" (OFF) position. The temperature display will no longer be illuminated.



#### NOTE

If the heated overblanket is not in use, set the slide switch on the side to ON/OFF to level "0" (OFF) and pull the mains plug out of the socket. Then disconnect the control unit from the heated overblanket by unplugging the plug-in coupling.

## 5. Cleaning and maintenance of the



### WARNING

Before cleaning, always unplug the appliance from the mains socket first. Then disconnect the control unit from the electric blanket by unplugging the connector. Failure to do so may result in electric shock.



### CAUTION

The control unit must never come into contact with water or other liquids, as this may cause damage.

- To clean the control unit, use a dry, lint-free cloth. Do not use any chemical or abrasive cleaning agents.
- Small marks on the heated overblanket can be removed with a damp cloth or sponge and, if necessary, with a little liquid detergent for delicate laundry.



### CAUTION

Please note that the heated overblanket must not be dry-cleaned, wrung out, tumble-dried, put through a mangle or ironed.

- This heated overblanket is machine-washable.
- Set the washing machine to a particularly gentle wash cycle at 30 °C (wool cycle). Use a detergent for delicate laundry and measure it out according to the manufacturer's instructions.



### CAUTION

Please note that frequent washing of the heated overblanket has a negative effect on the product. The heated overblanket should therefore be machine-washed a maximum of 5 times during its lifetime.

- Immediately after washing, reshape the heated overblanket to its original dimensions whilst it is still wet and lay it flat on a drying rack to dry.



### CAUTION

- Do not use pegs or similar items to attach the heated overblanket to the drying rack. Failure to do so may damage the heated overblanket.
- Do not reconnect the control unit to the heated overblanket until the plug-in connector and the electric overblanket are completely dry. Failure to do so may damage the heated overblanket.



### WARNING

Never switch the heated overblanket on to dry it! Otherwise there is a risk of electric shock.

## 6. Storage

If you do not intend to use the heated overblanket for a long period of time, we recommend that you store it in its original packaging. To do this, disconnect the control unit from the heated overblanket by unplugging the connector.



### CAUTION

- Allow the heated overblanket to cool down before folding. Otherwise, the heated overblanket may be damaged.
- Do not crease the heated overblanket by placing items on top of it during storage.

## 7. Disposal

For environmental reasons, do not dispose of the device in household waste at the end of its useful life. Take the unit to a suitable local collection or recycling point. Dispose of the device in accordance with the EC Directive on Waste Electrical and Electronic Equipment (WEEE). If you have any questions, please contact the local authorities responsible for waste disposal.



## 8. What if there are problems with the ?

| Problem                                                                                                                                                                                                                                  | Cause                                                                      | Solution                                                       |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------|----------------------------------------------------------------|
| The temperature settings are not illuminated whilst<br>- the control is properly connected to the heated overblanket<br>- the mains plug is connected to a working socket<br>- the side sliding switch on the control is set to "I" (ON) | The safety system has switched the heated overblanket off permanently<br>- | Send the heated overblanket and the<br>Check before servicing. |

## 9. Technical data

See the type plate label on the heated overblanket.

## 10. Warranty information / service

Further information on the warranty and warranty conditions can be found in the warranty leaflet supplied.



Please read this user manual carefully from start to finish. Please observe the warnings and safety instructions. Keep the user manual for future reference. Make the user manual available to other users. If you pass the device on to a third party, please also provide them with the user manual.

## Contents

|                                     |    |                                                        |    |
|-------------------------------------|----|--------------------------------------------------------|----|
| 1. Delivery .....                   | 17 | Temperature adjustment .....                           | 20 |
| 1.1 Description of the device ..... | 17 | 4.5 Automatic shut-off .....                           | 21 |
| 2. Important instructions           |    | 4.6 Switching off .....                                | 21 |
| Keep for future reference! .....    | 18 | 5. Cleaning and maintenance .....                      | 21 |
| 3. Intended use .....               | 20 | 6. Storage .....                                       | 22 |
| 4. Use .....                        | 20 | 7. Disposal .....                                      | 22 |
| 4.1 Safety .....                    | 20 | 8. What should you do if you encounter problems? ..... | 22 |
| 4.2 Commissioning .....             | 20 | 9. Technical data .....                                | 22 |
| 4.3 Power-up .....                  | 20 | 10. Warranty / Maintenance .....                       | 22 |

4.4 .....

## Explanation of symbols

The following symbols are used in the user manual, on the packaging and on the appliance's rating plate:

|  |                                                                                                     |  |                                              |
|--|-----------------------------------------------------------------------------------------------------|--|----------------------------------------------|
|  | <b>WARNING:</b> Warning, risk of injury or danger to your health                                    |  |                                              |
|  | <b>CAUTION:</b> Safety note regarding the possibility of damage to the appliance/accessories        |  |                                              |
|  | <b>NOTE:</b> Note regarding important information                                                   |  |                                              |
|  | Read the instructions                                                                               |  | Do not insert a needle                       |
|  | Do not use if bent or compressed                                                                    |  | Not to be used by young children (0–3 years) |
|  | Manufacturer                                                                                        |  |                                              |
|  | The appliance is double insulated and complies with protection class 2.                             |  |                                              |
|  | Disposal in accordance with the European WEEE Directive (Waste Electrical and Electronic Equipment) |  |                                              |
|  | Separate the packaging components and dispose of them in accordance with local regulations.         |  |                                              |

|                                                                                   |                                                                                                                                                                                                                    |                                                                                   |                   |
|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-------------------|
|   | Packaging material identification label.<br>A = Material abbreviation, B = Material code: 1–7 = plastic,<br>20–22 = paper and cardboard                                                                            |                                                                                   |                   |
|  | Separate the product from the packaging materials and dispose of them in accordance with local regulations.                                                                                                        |                                                                                   |                   |
|  | This product complies with the requirements of current European and national directives.                                                                                                                           |                                                                                   |                   |
|  | UKCA conformity marking                                                                                                                                                                                            |                                                                                   |                   |
|  | The products fully comply with the requirements of the EEA technical regulations.                                                                                                                                  |                                                                                   |                   |
|   | The textiles used in this appliance have been tested for harmful substances from a human health perspective and have been awarded the Oeko-Tex Standard 100 label, certified by the Hohenstein Research Institute. |                                                                                   |                   |
|  | Maximum washing temperature<br>30 °C, ultra-delicate cycle                                                                                                                                                         |  | Do not iron       |
|                                                                                   |                                                                                                                                                                                                                    |  | Do not bleach     |
|  | Do not dry clean                                                                                                                                                                                                   |  | Do not tumble dry |


1. Delivery

Check that the outer packaging of the appliance is intact and that all components are included. Before use, ensure that the appliance and accessories show no visible damage and that all packaging has been removed. If in doubt, do not use it and contact your retailer or the customer service department indicated.

- 1 Heated blanket
- 1 Switch
- 1 Instructions for use

1.1 Description of the devic

- 1. Socket
- 2. Switch
- 3. Slide switch (ON = I/OFF = 0)
- 4. Temperature control buttons
- 5. Illuminated temperature level display
- 6. Snap-fit coupling

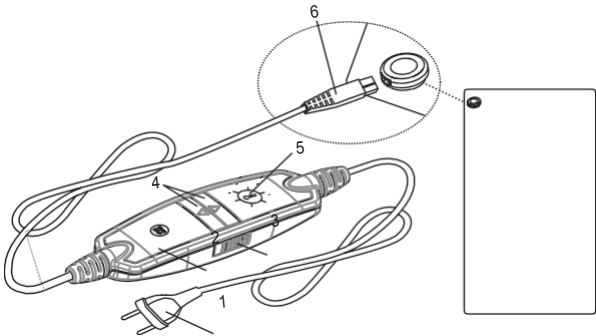

## 2. Important instructions

### Keep for future reference!



#### **WARNING**

- Failure to follow the instructions below may result in personal injury or property damage (electric shock, skin burns, fire). These safety instructions and warnings are not only intended to protect your health or that of others, but also to protect the product. Therefore, please observe these safety instructions and, if you pass the device on to someone else, ensure they also receive these instructions.
- This heated blanket must not be used by people who are insensitive to heat or particularly vulnerable to it, as they may not react in the event of overheating (for example, people with diabetes, skin conditions caused by illness, or areas of scarred skin, as well as those who have taken painkillers or alcohol).
- This heated blanket must not be used by very young children (aged 0 to 3 years), as they may not react in the event of overheating.
- The heated blanket may be used by children aged 3 to 8 years under supervision, ensuring that the switch is set to the lowest temperature at all times.
- This heated blanket may be used by children over 8 years of age, as well as by people with physical, sensory or mental impairments and those with limited knowledge or experience, provided they are supervised or know how to use it safely and understand the risks.
- Children must not play with the electric blanket.
- Cleaning and maintenance must not be carried out by children without supervision.
- This heated blanket is not designed for use in a hospital setting.
- This heated blanket must only be used in a domestic/private setting and under no circumstances in a professional environment.
- Do not pierce the blanket with needles.
- Do not use the heated blanket if it is folded or creased.
- Do not use the heated blanket when wet.
- You must only use this electric blanket in conjunction with the switch specified on the label.

- Do not connect the electric blanket to a voltage other than that indicated on the label.
- The electric and magnetic fields emitted by this electric heating blanket may interfere with the operation of pacemakers. However, they are well below the limits: electric field strength: 5,000 V/m max., magnetic field strength: 80 A/m max., magnetic flux density: 0.1 mT max. You should therefore consult your doctor and the manufacturer of your pacemaker before using this heated blanket.
- Do not pull, twist or bend the cables too forcefully.
- If not positioned correctly, the cable and switch of the heated blanket may present a risk of entanglement, strangulation, tripping or falling. The user must ensure that the cables and other wires do not cause any obstruction.
- This heated blanket must be checked regularly for any signs of wear or damage.  
If necessary, or if this heated blanket has been used incorrectly or no longer heats up, it must be checked by the manufacturer before being used again.
- Under no circumstances should you open or repair the heated blanket (including its accessories); this would compromise the proper functioning of the appliance. Failure to comply with this instruction will invalidate the warranty.
- If the power cable of the heated blanket is damaged, it must be disposed of. If it is not detachable, the heated blanket must be disposed of.
- Do not expose the switch and cables to direct sunlight.
- Whilst this heated blanket is in use, you must not
  - place sharp objects on it,
  - place any heat sources on it, such as hot water bottles, heating pads, etc.
- The electronic components of the switch become hot when the heated blanket is in use. You must therefore not cover the switch or place it on the heated blanket whilst it is in use.
- It is essential that you follow the instructions given in the following sections: Use, cleaning and maintenance, storage.
- If you have any questions regarding the use of our appliances, please contact our customer service team.

### 3. Use in accordance with the recommendations in the user



#### **WARNING**

This heated blanket is designed exclusively for warming the human body.

## 4. Use

### 4.1 Safety



#### **WARNING**

- The heated blanket is fitted with a SAFETY SYSTEM. This electronic sensor technology prevents the heated blanket from overheating across its entire surface by automatically switching it off in the event of a fault.
- Please note that following a safety-related fault, you must not use the heated blanket and must send it to the specified after-sales service.
- Never connect the faulty heated blanket to another switch of the same type. This would also trigger a permanent shutdown via the switch's safety system.

### 4.2

- First, connect the switch to the heated blanket by plugging in the mains plug.
- Plug the appliance into the mains.



### 4.3 Switching on

Set the slide switch (3) on the right-hand side of the switch to the 'I' (ON) position, see switch diagram. When switched on, the temperature level display lights up (5).

### 4.4 Adjusting the temperature

To increase the temperature, press the '△' button (4). To decrease the temperature, press the '▽' button (4).

Level 0: off  
Level 1: minimum heat Levels  
2–5: custom heat Level 6:  
maximum heat



#### **NOTE**

The heated blanket warms up more quickly when you set the temperature to the highest setting.



#### **WARNING**

When using the heated blanket for several hours, it is recommended that you set the switch to the lowest temperature setting to prevent your body from overheating and, if necessary, to avoid skin burns.

## 4.5 Automatic sh

This heated blanket switches off automatically after 3 hours. The temperature level display flashes after the appliance has switched off.

To switch the heated blanket back on, first set the side ON/OFF switch to the '0' (OFF) position for 5 seconds. After approximately 5 seconds, you can switch the heated blanket back on.

## 4.6 De

Set the side slide switch to the '0' (OFF) position to switch off the heated blanket. The temperature display is no longer illuminated



### NOTE

If you are not using the heated blanket, set the side ON/OFF switch to the '0' (OFF) position and unplug the mains plug. Then disconnect the mains plug and thus the switch from the heated blanket.

## 5. Cleaning and maintenance



### WARNING

To begin with, always unplug the power cable from the socket before cleaning the appliance. Then switch off the power supply and, consequently, the switch on the electric blanket. Failure to do so may result in an electric shock.



### WARNING

The switch must never come into contact with water or other liquids. It may be damaged.

- To clean the switch, use a dry, lint-free cloth. Do not use abrasive products or other detergents.
- You can clean small stains on the heated blanket using a damp cloth and a little liquid detergent for delicate fabrics.



### WARNING

The heated blanket must not be cleaned with chemicals, wrung out, tumble-dried, rolled up or ironed.

- The heated blanket is machine washable.
- Set the machine to a very gentle cycle at 30°C (wool cycle). Use a detergent for delicate fabrics and measure it out according to the manufacturer's instructions.



### WARNING

Please note that frequent exposure of the heated blanket to water is not recommended. Consequently, you should only machine wash the heated blanket a maximum of 5 times during its lifetime.

- Stretch the heated blanket whilst it is still wet immediately after washing so that it returns to its original size, and leave it to dry flat on a drying rack.



## WARNING

- Do not use clothes pegs or similar items to hang the heated blanket on the drying rack. Otherwise, it may be damaged.
- Do not reconnect the switch to the electric blanket until both the blanket and the mains plug are completely dry. Otherwise, the electric blanket may be damaged.



## WARNING

Under no circumstances should you switch on the heated blanket whilst it is drying! Otherwise, you risk an electric shock.

## 6. Storage

If you are not using the heated blanket for an extended period, we recommend storing it in its original packaging. To do this, disconnect the mains plug and therefore the switch from the heated blanket.



## CAUTION

- Allow the heated blanket to cool down first. Otherwise, it may be damaged.
- Do not place any objects on the heated blanket when storing it to prevent it from becoming too creased.

## 7. Disposal

In the interests of environmental protection, the appliance must not be disposed of with household waste at the end of its service life. Disposal must be carried out via the relevant collection points in your country. Please dispose of the appliance in accordance with the European WEEE (Waste Electrical and Electronic Equipment) Directive on waste electrical and electronic equipment

. If you have any questions, please contact the local authorities responsible for the disposal and recycling of these products.



## 8. What should I do if I encounter problems with ?

| Problem                                                                                                                                                                                                   | Cause                                                                                           | Solution                                                                     |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------|
| The temperature levels are not illuminated when:<br>- The switch is connected to the heated blanket<br>- The plug is connected to a working socket<br>- the side slide switch is in the 'I' (ON) position | The system<br>Safety feature disabled<br>the heated blanket<br>heating blanket<br>irreversibly. | Send the cou-<br>heated blanket<br>and the switch on<br>after-sales service. |

## 9. technical data

Please refer to the rating plate on the heated blanket.

## 10. warranty / Maintenance

For further information on the warranty and warranty conditions, please refer to the warranty certificate provided.



Please read these instructions for use carefully. Follow the warnings and safety instructions. Keep these instructions for future reference. Make these instructions available to other users. If you pass the appliance on to a third party, please include the instructions for use as well.

## Contents

|                                       |    |                                |    |
|---------------------------------------|----|--------------------------------|----|
| 1. Items supplied .....               | 24 | Temperature adjustment .....   | 27 |
| 1.1 Description of the appliance..... | 24 | 4.5 Automatic switch-off ..... | 27 |
| 2. Important information              |    | 4.6 Switch off .....           | 28 |
| Keep these for future reference ..... | 25 | 5. Cleaning and care .....     | 28 |
| 3. Correct use of the appliance ..... | 26 | 6. Storage.....                | 29 |
| 4. Use.....                           | 27 | 7. Disposal.....               | 29 |
| 4.1 Safety .....                      | 27 | 8. Troubleshooting .....       | 29 |
| 4.2 Commissioning.....                | 27 | 9. Technical data .....        | 29 |
| 4.3 Switch on.....                    | 27 | 10. Warranty / Support .....   | 29 |

4.4 .....

## Explanation of symbols

The following symbols are used on the appliance, in the user instructions, on the packaging and on the appliance's rating plate:

|  |                                                                                                        |  |                                                    |
|--|--------------------------------------------------------------------------------------------------------|--|----------------------------------------------------|
|  | <b>WARNING:</b> Indicates a risk of injury or a health hazard.                                         |  |                                                    |
|  | <b>CAUTION:</b> Safety instruction regarding possible damage to the appliance or accessories.          |  |                                                    |
|  | <b>NOTE:</b> Indicates important information.                                                          |  |                                                    |
|  | Read the instructions!                                                                                 |  | Do not pierce with needles!                        |
|  | Do not use when folded or creased!                                                                     |  | Not recommended for children under 3 years of age. |
|  | Manufacturer                                                                                           |  |                                                    |
|  | The appliance has double insulation and complies with the requirements of protection class 2.          |  |                                                    |
|  | Disposal in accordance with the European Directive on Waste Electrical and Electronic Equipment (WEEE) |  |                                                    |

|                                                                                   |                                                                                                                                                                           |                                                                                   |                   |
|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-------------------|
|   | Separate the components of the packaging and dispose of them in accordance with local regulations.                                                                        |                                                                                   |                   |
|  | Labelling to identify the packaging material. A = abbreviation of the material, B = material number: 1-7 = plastics, 20-22 = paper and cardboard                          |                                                                                   |                   |
|  | Separate the product and packaging components and dispose of them in accordance with local regulations.                                                                   |                                                                                   |                   |
|  | This product complies with the requirements of current European and national guidelines.                                                                                  |                                                                                   |                   |
|  | UKCA marking (United Kingdom Conformity Assessment)                                                                                                                       |                                                                                   |                   |
|  | It has been demonstrated that the products comply with the requirements of the technical regulations of the Eurasian Economic Union.                                      |                                                                                   |                   |
|   | The textiles used in this appliance comply with the strict human-ecological requirements of the Oeko-Tex 100 standards, as verified by the Hohenstein Research Institute. |                                                                                   |                   |
|  | Maximum washing temperature 30 °C, very gentle cycle                                                                                                                      |  | Do not iron       |
|                                                                                   |                                                                                                                                                                           |  | Do not use bleach |
|  | Do not dry clean                                                                                                                                                          |  | Do not tumble dry |


1. s supplied

Check that the packaging is intact and that all contents are present. Before using the appliance, ensure that neither the appliance nor its accessories show any visible damage and that all packaging material has been removed. If in doubt, do not use it and contact your dealer or the customer service department listed.

- 1 Electric blanket
- 1 Switch
- 1 Instructions for use

1.1 Description of the device

- 1. Connector
- 2. Switch
- 3. Slide switch (ON = I / OFF = 0)
- 4. Temperature adjustment buttons
- 5. Temperature level indicator light
- 6. Plug-in connection

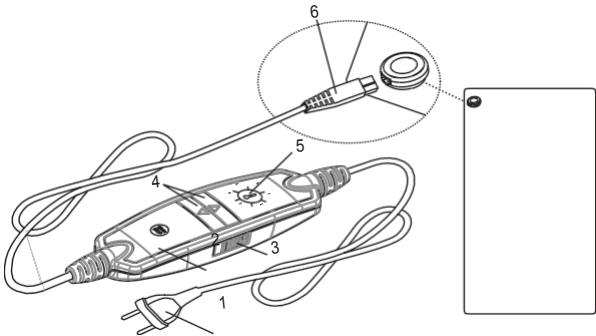

## 2. Important instructions Keep these for future reference



### **WARNING**

- Failure to observe the following instructions may result in personal injury or damage to property (electric shocks, skin burns or fires). The following hazard and safety warnings are intended not only to protect your health and that of others, but also to protect the product. You must therefore observe these safety instructions and, if you pass the appliance on to another person, you must also provide them with the instruction manual.
- This electric blanket must not be used by people who are insensitive to heat or other highly dependent individuals, as such people are unable to react to overheating (for example, people suffering from diabetes, skin conditions caused by illness, or areas of the skin with scarring, as well as after taking painkillers or alcohol).
- This electric blanket must not be used by very young children (aged 0 to 3 years), as they are unable to react to overheating.
- The electric blanket may be used by children aged 3 to 8 years under supervision, with the switch always set to the lowest temperature setting.
- This electric blanket may be used by children over 8 years of age, as well as by people with reduced physical, sensory or mental capabilities, or with limited experience or knowledge, provided they are supervised or have been instructed on how to use it safely and understand the dangers involved.
- Children must never play with the electric blanket.
- Routine cleaning and maintenance tasks must not be carried out by children without supervision.
- This electric blanket is not intended for use in hospitals.
- This electric blanket is designed exclusively for private or domestic use and not for industrial use.
- Do not pierce with needles.
- Do not use it when folded or creased.
- Do not use it when wet.
- This electric blanket must only be used with the switch indicated on the label.
- The electric blanket must only be connected to the mains voltage specified on the label.

- The magnetic and electric fields emitted by this electric blanket may, under certain circumstances, interfere with the operation of a pacemaker. However, they are well below the limit values: electric field strength: max. 5000 V/m, magnetic field strength: max. 80 A/m, magnetic flux density: max. 0.1 milli-Tesla. Consult your doctor and the pacemaker manufacturer before using this blanket.
- Do not pull, twist or bend the cables.
- If not positioned correctly, the cable and switch of the electric blanket may pose a risk of strangulation, entanglement, tripping or being stepped on. The user must ensure that any excess cables and the cables in general are secured.
- The electric blanket should be checked regularly for signs of wear or damage. If such signs are present, if the blanket has been used improperly, or if it no longer heats up, it must be checked by the manufacturer before being switched on again.
- Under no circumstances should you open or repair the electric blanket (including accessories); otherwise, its correct functioning will no longer be guaranteed. Failure to comply with this provision will invalidate the warranty.
- If the power cable of this electric blanket becomes damaged, it must be replaced. If the cable cannot be removed, the electric blanket must be replaced.
- Do not expose the switches or cables to direct sunlight.
- While switched on, do not place any sharp objects on top of this electric blanket
  - any sharp objects,
  - or any heat source, such as a hot water bottle, electric heating pad or similar.
- The electronic components of the switch heat up whilst the blanket is in use, so the switch must not be covered or placed on top of the electric blanket whilst it is in operation.
- It is essential that you follow the instructions in the following sections: Operation, Cleaning and Care, and Storage.
- If you still have any questions about how to use our appliances, please contact our customer service team.

### 3. Correct use of the appliance



#### **WARNING**

This electric blanket is intended solely for warming the human body.

## 4. Use

### 4.1 Safety



#### WARNING

- The electric blanket is equipped with a SAFETY SYSTEM. This electronic sensor technology prevents the blanket from overheating across its entire surface by automatically switching it off in the event of a fault.
- Please note that following a fault, the electric blanket can no longer be used for safety reasons and must be sent to the specified customer service address.
- Under no circumstances should you connect the faulty electric blanket to other switches of the same type. This would also result in the switch being permanently disconnected via the safety system.

### 4.2

- First, connect the switch to the electric blanket by plugging in the connector.
- Then plug it in.



### 4.3 Switching on

Set the slide switch (3) on the right-hand side of the switch to the "I" (ON) position; see the illustration of the switch.

When switched on, the temperature level indicator (5) lights up.

### 4.4 temperature

To increase the temperature, press the "△" button (4). To decrease the temperature, press the "▽" button (4).

Level 0: OFF  
Level 1: minimum heat  
Levels 2–5: individual heat  
Level 6: maximum heat



#### NOTE

To heat the electric blanket as quickly as possible, set the temperature to the highest possible level.



#### WARNING

If the electric blanket is used for several hours, we recommend setting the temperature control to the lowest setting to prevent the body from overheating and, consequently, possible burns to the skin.

### 4.5 Automatic s h

This electric blanket switches off automatically after 3 hours. Once switched off, the temperature level indicator flashes.

To switch it back on, first set the side ON/OFF slide switch to the OFF ("0") position for 5 seconds. You can switch it back on again after about 5 seconds.

## 4.6 Switching off

Set the side slide switch to the "0" (OFF) position to switch off the electric blanket. The temperature indicator light will no longer be lit.



### NOTE

If you are not using the electric blanket, set the ON/OFF slide switch on the side to the "0" (OFF) position and unplug the connector from the mains socket. Then remove the plug and, consequently, the switch from the electric blanket.

## 5. Cleaning and care



### WARNING

Always unplug the blanket before cleaning it. Then remove the plug connector and, consequently, the switch from the electric blanket. Failure to do so may result in an electric shock.



### CAUTION

The switch must never come into contact with water or other liquids, as this could damage it.

- To clean the switch, use only a dry, lint-free cloth. Do not use any chemical or abrasive cleaning products.
- Small stains on the electric blanket can be removed with a damp cloth and, if necessary, a little mild liquid detergent.



### IMPORTANT

Please note that the electric blanket must not be dry-cleaned, wrung out, tumble-dried, calendered or ironed.

- This electric blanket is machine washable.
- Set the washing machine to a very gentle wash cycle at 30 °C (wool cycle). Use a mild detergent and measure it out according to the manufacturer's instructions.



### PLEASE NOTE

Please note that washing the electric blanket too frequently will cause it to wear out. Therefore, over its lifetime, it should be machine-washed no more than 5 times.

- Stretch the electric blanket out well whilst it is still damp immediately after washing and leave it flat on a clothesline until it is dry.



### WARNING

- Do not use pegs or similar items to secure it to the washing line. Doing so could damage it.
- Reconnect the switch to the electric blanket once the plug-in connector, the blanket and the cover are completely dry. Otherwise, the blanket may be damaged.



### WARNING

Never switch on the electric blanket to dry it! Doing so poses a risk of electric shock.

## 6. Storage

If you are not going to use the electric blanket for a prolonged period, we recommend storing it in its original packaging. To do this, remove the plug-in connector and thus the switch from the electric blanket.



### ATTENTION

- Allow the blanket to cool down first. Otherwise, it may be damaged.
- Do not place any objects on the electric blanket whilst it is switched off to prevent it from becoming damaged.

## 7. Disposal

To protect the environment, do not dispose of the appliance with household waste at the end of its useful life. It can be disposed of at the appropriate collection points available in your area. Dispose of the appliance in accordance with the European Directive on Waste Electrical and Electronic Equipment (WEEE). For further information, please contact your local authority responsible for waste disposal.



## 8. s troubleshooting

| Problem                                                                                                                                                                                                                    | Cause                                                                                           | Solution                                                                                                        |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------|
| The temperature settings do not light up whilst<br>- the switch is fully connected to<br><br>the electric blanket;<br>- the mains plug is plugged in correctly;<br>- the side slide switch is<br>in the “I” (ON) position. | The safety system<br>has disconnected from the<br><br>the electric blanket<br>electric blanket. | Send the electric blanket<br>the electric blanket and<br>the switch to<br>customer service<br>customer service. |

## 9. technical data

See the label on the electric blanket’s type plate.

## 10. Warranty / Support

Further information on the warranty and its terms and conditions can be found in the warranty booklet provided.



**Please read these instructions for use carefully. Follow the warnings and safety instructions. Keep the instructions for future reference. Make the instructions available to other users. If you pass the appliance on to someone else, please also hand over the instructions.**

## Contents

|                                        |    |                                                |    |
|----------------------------------------|----|------------------------------------------------|----|
| 1. Contents .....                      | 31 | Temperature setting .....                      | 34 |
| 1.1 Description of the appliance ..... | 31 | 4.5 Automatic shut-off device .....            | 34 |
| 2. Important information               |    | 4.6 Switching off .....                        | 34 |
| Keep for future reference .....        | 32 | 5. Cleaning and care .....                     | 35 |
| 3. Intended use .....                  | 33 | 6. Storage .....                               | 36 |
| 4. Operation .....                     | 34 | 7. Disposal .....                              | 36 |
| 4.1 Safety .....                       | 34 | 8. What to do if you encounter problems? ..... | 36 |
| 4.2 Commissioning .....                | 34 | 9. Technical data .....                        | 36 |
| 4.3 Switching on .....                 | 34 | 10. Warranty / Support .....                   | 36 |

4.4 .....

## Explanation of symbols

The following symbols are used in the user manual, on the packaging and on the appliance label:

|  |                                                                                                                    |  |                                                 |
|--|--------------------------------------------------------------------------------------------------------------------|--|-------------------------------------------------|
|  | <b>WARNING:</b> Warning regarding risks of injury or health hazards.                                               |  |                                                 |
|  | <b>CAUTION:</b> Safety warnings regarding possible damage to the appliance or accessories.                         |  |                                                 |
|  | <b>NOTE:</b> Indication of important information.                                                                  |  |                                                 |
|  | Read the instructions!                                                                                             |  | Do not pierce with needles!                     |
|  | Do not use when folded or crumpled!                                                                                |  | Not suitable for children under 3 years of age. |
|  | Manufacturer                                                                                                       |  |                                                 |
|  | The appliance is equipped with double protective insulation and therefore complies with protection class 2.        |  |                                                 |
|  | Disposal in accordance with the provisions of the EC Directive on Waste Electrical and Electronic Equipment (WEEE) |  |                                                 |
|  | Separate the packaging components and dispose of them in accordance with local regulations.                        |  |                                                 |

|                                                                                   |                                                                                                                                                            |                                                                                   |                   |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-------------------|
|   | Packaging material identification label. A = material abbreviation, B = material code: 1-7 = plastic, 20-22 = paper and cardboard                          |                                                                                   |                   |
|  | Separate the product and packaging components and dispose of them in accordance with local regulations.                                                    |                                                                                   |                   |
|  | This product complies with the requirements of current European and national directives.                                                                   |                                                                                   |                   |
|  | UKCA mark (conformity assessment in the United Kingdom)                                                                                                    |                                                                                   |                   |
|  | The products have been verified as compliant with the requirements of the EEA technical regulations.                                                       |                                                                                   |                   |
|   | The fabrics used in this appliance meet the human-ecological requirements of the Oeko-Tex Standard 100, as certified by the Hohenstein Research Institute. |                                                                                   |                   |
|  | Maximum washing temperature 30 °C, ultra-gentle cycle                                                                                                      |  | Do not iron       |
|                                                                                   |                                                                                                                                                            |  | Do not bleach     |
|  | Do not dry clean                                                                                                                                           |  | Do not tumble dry |


1. Contents

Check the external condition of the packaging and its contents. Before use, ensure that the appliance and accessories show no obvious damage and that the packaging material has been removed. If in doubt, do not use the appliance and consult your retailer or contact the Customer Service department indicated.

- 1 Thermal blanket
- 1 Switch
- 1 Instruction manual

1.1 al description of the device

- 1. Feeder
- 2. Switch
- 3. Slide switch (ON = I / OFF = 0)
- 4. Temperature setting buttons
- 5. Temperature level indicator light
- 6. Quick-release coupling

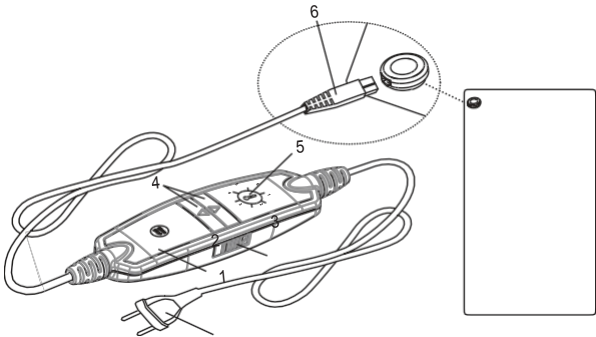

## 2. Important instructions Keep for future reference



### WARNING

- Failure to observe the following instructions may result in injury to persons or damage to property (electric shock, skin burns, fire). The following safety and hazard warnings are not only intended to protect the health of the user and third parties, but also to protect the product. Therefore, please observe the safety instructions and pass on these instructions if the item is sold on.
- This thermal blanket must not be used by people who are insensitive to heat or by others requiring special care, as they are unable to react in the event of overheating (e.g. diabetics, people with skin conditions or extensive scarring in the area of application, or those who have taken painkillers or consumed alcohol).
- This heated blanket must not be used on very young children (0–3 years), as they are unable to react in the event of overheating.
- The heated blanket may be used by children aged between 3 and 8 years provided they are supervised and the switch is always set to the minimum temperature setting.
- This electric blanket may be used by children over 8 years of age and by people with reduced physical, sensory or mental capabilities, or who lack the necessary experience and knowledge, only under supervision or if they have been instructed in safety measures and understand the risks involved.
- Children must not play with the heated blanket.
- Cleaning and maintenance by the user must not be carried out by children unless they are supervised.
- This electric blanket is not intended for use in hospitals.
- This electric blanket is intended for domestic/private use only and not for commercial use.
- Do not insert sharp objects.
- Do not use if folded or creased.
- Do not use if wet.
- This electric blanket may only be used in conjunction with the switch indicated on the label.

- Connect the electric blanket only to the mains voltage indicated on the rating plate.
- The electric and magnetic fields emitted by the heated blanket may interfere with the operation of pacemakers. However, they are well below the limit values: electric field strength: max. 5000 V/m, magnetic field strength: max. 80 A/m, magnetic flux density: max. 0.1 millitesla. Before using the thermal blanket, therefore, consult your doctor and the pacemaker manufacturer.
- Do not pull, twist or bend the wires excessively.
- If not positioned correctly, the cable and switch of the heated blanket may pose a risk of snagging, strangulation, tripping or being stepped on. The user must ensure that the cables, particularly those longer than necessary, are secured safely.
- In this regard, it is often necessary to check the thermal blanket for any signs of wear or damage. If there are signs that the thermal blanket has been used incorrectly, or if it no longer heats up, have it checked by the manufacturer before switching it on again.
- Do not open or repair the electric blanket (including any accessories) as this may impair its proper functioning. Failure to comply will invalidate the warranty.
- If the thermal blanket's power cable is damaged, it must be disposed of. If it cannot be removed, the thermal blanket must be disposed of.
- Do not expose the switch and cables to direct sunlight.
- When the electric blanket is in use, do not place
  - objects with sharp edges,
  - heat sources such as hot water bottles, heating pads or similar items.
- The electronic components in the switch heat up when the electric blanket is in use. Therefore, do not cover the switch and do not leave it on the electric blanket whilst it is in operation.
- Strictly follow the instructions in the following sections: Use, cleaning and care, storage.
- If you have any further questions regarding the use of our equipment, please contact Customer Service.

### 3. -compliant use



#### **WARNING**

This electric blanket is intended exclusively for warming the human body.

## 4. Operation

### 4.1 Safety




#### WARNING

- The heated blanket is equipped with a SAFETY SYSTEM, whose electronic sensors prevent overheating across the entire surface of the blanket by automatically switching it off in the event of a fault.
- In the event of a fault, the electric blanket must no longer be used for safety reasons. The product must be sent to the specified Customer Service address.
- Never connect a faulty electric blanket to another switch of the same type. This would result in the safety system in the switch shutting down the appliance permanently.

### 4.2 Connection

- First, connect the switch to the electric blanket by inserting the quick-connect plug.
- Then plug the power cord into the mains socket.

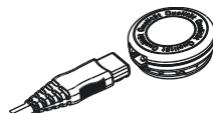

### 4.3 Switching on

Move the slide switch (3) on the right-hand side of the switch to the "I" (ON) position – see the switch diagram. When the appliance is switched on, the temperature level indicator is lit (5).

### 4.4 Setting the temperature

To increase the temperature, press the '△' button (4). To decrease the temperature, press the '▽' button (4).

- Level 0: OFF  
Level 1: minimum heating  
Level 2–5: custom heating Level 6:  
maximum heating



#### NOTE

To ensure the electric blanket heats up as quickly as possible, set it to the highest temperature setting first.



#### WARNING

If the electric blanket is used for several hours, we recommend setting it to the lowest temperature setting to prevent the body from overheating, which could lead to skin burns or heatstroke.

### 4.5 Automatic cut-off device

This electric blanket switches off automatically after 3 hours. Once it has switched off, the temperature level indicator will flash.

To switch the electric blanket back on, set the side on/off switch to OFF (0) for 5 seconds. After approximately 5 seconds, you can switch the electric blanket back on.

### 4.6 Switching off

To switch off the electric blanket, set the slide switch on the side of the blanket to the "0" (OFF) position. The temperature indicators will no longer be lit.

**NOTE**

If the electric blanket is not in use, set the side ON/OFF slide switch to "0" (OFF) and unplug it from the socket. To do this, disconnect the quick-release connector and then the switch from the electric blanket.

## 5. Cleaning and care

**WARNING**

Before cleaning, always unplug the appliance from the mains socket. Then disconnect the quick-release coupling and switch off the electric blanket. Failure to do so may result in an electric shock.

**WARNING**

The switch must never come into contact with water or other liquids. It could be damaged.

- To clean the switch, use a dry, lint-free cloth. Do not use chemical detergents or abrasive products.
- Small stains on the thermal blanket can be removed using a damp cloth or sponge, and if necessary, a liquid detergent for delicate fabrics.

**WARNING**

The thermal blanket must not be dry-cleaned, wrung out, tumble-dried, rolled or ironed.

- The thermal blanket is machine washable.
- Set the washing machine to a particularly gentle cycle at 30°C (wool cycle). Use a detergent for delicate fabrics and measure it out according to the manufacturer's instructions.

**WARNING**

The thermal blanket may be damaged by too frequent washing. Over its entire lifespan, the thermal blanket should be machine-washed no more than 5 times.

- Immediately after washing, reshape the thermal blanket whilst it is still damp, restoring it to its original size, and leave it to dry flat on a clothes horse.

**WARNING**

- Do not use pegs or similar items to secure the thermal blanket to the clothesline. Doing so may damage the thermal blanket.
- Only reconnect the switch to the thermal blanket when the quick-connect plug and the thermal blanket are completely dry. Otherwise, the thermal blanket may be damaged.

**WARNING**

Do not switch on the electric blanket to dry it! Doing so may result in an electric shock.

## 6. Storage

If the electric blanket is not used for long periods, we recommend storing it in its original packaging. To do this, disconnect the quick-release connector and then switch off the electric blanket.



### WARNING

- Allow the electric blanket to cool down before storing it. Otherwise, the electric blanket may be damaged.
- When not in use, store the electric blanket without placing any objects on top of it to prevent it from being folded or crushed.

## 7. Disposal

For environmental reasons, the appliance must not be disposed of with normal household waste when it is discarded. It must be taken to designated collection points. Dispose of the appliance in accordance with the European Directive on Waste Electrical and Electronic Equipment (WEEE). For further information, please contact your local authority responsible for waste disposal.



## 8. What should I do if I encounter problems?

| Problem                                                                                                                                                                                                                                                                             | Cause                                                                | Solution                                                            |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------|---------------------------------------------------------------------|
| The temperature settings are not lit when <ul style="list-style-type: none"><li>- the switch is correctly connected to the electric blanket</li><li>- the plug is connected to a working socket</li><li>- the slide switch next to the switch is in the "I" (ON) position</li></ul> | The safety system has permanently switched off the electric blanket. | Please send the heated blanket and the switch to Customer Services. |

## 9. al data

See the label with the technical data on the electric blanket.

## 10. Warranty / Support

For further information on the warranty and warranty conditions, please refer to the warranty certificate provided.



**Please read this user manual carefully. Follow the warnings and safety instructions. Keep this user manual for future reference. Ensure that other users also have access to the user manual. When passing the device on to others, provide the user manual with it.**

## Contents

|                              |    |                                                 |    |
|------------------------------|----|-------------------------------------------------|----|
| 1. Scope of delivery.....    | 38 | Automatic shut-off.....                         | 41 |
| 1.1 Device Description ..... | 38 | 4.6 Switching off .....                         | 41 |
| 2. Important information     |    | 5. Cleaning and maintenance .....               | 42 |
| Save this for later .....    | 39 | 6. Storage.....                                 | 42 |
| 3. Intended use .....        | 40 | 7. Disposal .....                               | 43 |
| 4. Usage.....                | 41 | 8. What should be done if problems arise? ..... | 43 |
| 4.1 Safety .....             | 41 | 9. Technical data .....                         | 43 |
| 4.2 Operation .....          | 41 | 10. Warranty / Service .....                    | 43 |
| 4.3 Opening.....             | 41 |                                                 |    |
| 4.4 Adjusting the heat ..... | 41 |                                                 |    |
| 4.5.....                     |    |                                                 |    |

## Meaning of symbols

The following symbols are used on the appliance, in the user manual, on the packaging and on the model label:

|  |                                                                                                          |  |                                                 |
|--|----------------------------------------------------------------------------------------------------------|--|-------------------------------------------------|
|  | <b>WARNING:</b> Warning information regarding risks of injury or health hazards.                         |  |                                                 |
|  | <b>ATTENTION:</b> Information regarding potential damage to the device or accessories.                   |  |                                                 |
|  | <b>INFORMATION/NOTE:</b> Drawing attention to important information.                                     |  |                                                 |
|  | Read the instructions!                                                                                   |  | Do not pierce with a needle!                    |
|  | Do not use if folded or creased!                                                                         |  | Not suitable for children under 3 years of age. |
|  | Manufacturer                                                                                             |  |                                                 |
|  | The device has double protective insulation and is therefore classified as protection class 2.           |  |                                                 |
|  | It must be disposed of in accordance with the Waste Electrical and Electronic Equipment (WEEE) Directive |  |                                                 |

|                                                                                   |                                                                                                                                                                     |                                                                                   |                   |
|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-------------------|
|   | Separate the packaging components and dispose of them in accordance with local authority regulations.                                                               |                                                                                   |                   |
|  | A mark used to identify packaging material. A = material abbreviation, B = material number:<br>1–7 = plastics, 20–22 = paper and cardboard                          |                                                                                   |                   |
|  | Separate the product and packaging components and dispose of them in accordance with local authority regulations.                                                   |                                                                                   |                   |
|  | This product complies with the requirements of applicable European Union and national directives.                                                                   |                                                                                   |                   |
|  | Conformity Assessment Mark for the United Kingdom                                                                                                                   |                                                                                   |                   |
|  | The products strictly comply with the requirements of the technical regulations laid down by the AEB.                                                               |                                                                                   |                   |
|   | The textile products used in this appliance meet the human ecological requirements of the Oeko-Tex 100 standard, as certified by the Hohenstein Research Institute. |                                                                                   |                   |
|  | Maximum washing temperature 30 °C, Delicate cycle                                                                                                                   |  | Do not iron       |
|                                                                                   |                                                                                                                                                                     |  | Do not bleach     |
|  | Do not dry clean                                                                                                                                                    |  | Do not tumble dry |


# 1. Contents of the delivery

Check the device to ensure that the cardboard packaging is undamaged on the outside and that the contents are complete. Before using the device, ensure that there is no visible damage to the device or its accessories and that all packaging materials have been removed. Do not use the device if you have any doubts; contact your retailer or the specified service address.

- 1 Heating pad
- 1 Switch
- 1 User manual

## 1.1 Device Description

- 1. Power plug
- 2. Switch
- 3. Slide switch (on = I / off = 0)
- 4. Temperature adjustment buttons
- 5. Illuminated temperature setting indicator
- 6. Socket connector

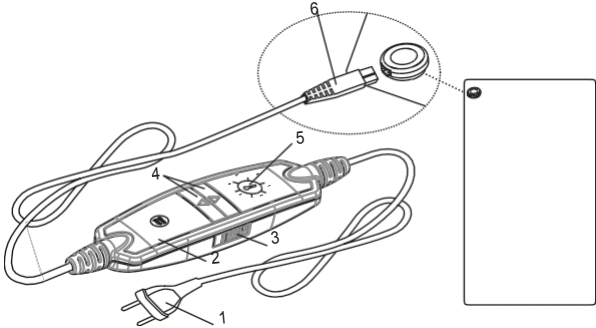

## 2. Important information

### Keep this manual for future reference



#### **WARNING**

- Failure to follow the instructions below may result in personal injury or property damage (electric shock, skin burns, fire). The safety and risk warnings below are not only intended to protect your health or that of third parties, but also to safeguard the product itself. You should therefore take these safety warnings seriously and provide this manual to anyone to whom you pass the product on.
- This heated blanket must not be used on people who are insensitive to heat or require special care, as such individuals are unable to react to overheating (e.g. diabetic patients, people with disease-related skin changes in the area of use or with healed scar tissue on the skin, or following the use of painkillers or alcohol).
- This heated blanket must not be used on very young children (0–3 years) as young children cannot react to overheating.
- The heated blanket may only be used by children aged 3 to 8 years under adult supervision, and the switch must always be set to the minimum temperature setting during use.
- This heated blanket may be used by children aged 8 years and over and by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, only if they are supervised or have been instructed on the safe use of the heated blanket and are aware of the potential hazards associated with its use.
- Children must not play with the heated blanket.
- Cleaning and user maintenance should not be carried out by children unless they are under supervision.
- This heated blanket is not designed for use in hospitals.
- The heated blanket is not suitable for commercial use; it is designed solely for home/personal use.
- Do not pierce with a needle
- Use only when unfolded or unwrinkled
- Do not use when wet
- This heated blanket may only be used with the switch specified on the label.
- The electric blanket may only be connected to the voltage specified on the type label.

- The electric and magnetic fields emitted by this heated blanket may interfere with the functioning of your pacemaker under certain conditions. However, these values are well below the limit values: Electric field strength: max. 5000 V/m, magnetic field strength: max. 80 A/m, magnetic flux density: max. 0.1 milliTesla. Please consult your doctor and the manufacturer of your pacemaker before using the heated blanket.
- Do not pull, twist or fold the cables sharply.
- If the electric blanket's cable and switch are not positioned correctly, there is a risk of entanglement, strangulation, tripping or stumbling. The user must ensure that the cables and any excess cable length are positioned safely.
- This heated blanket should be checked regularly for signs of wear or damage. If such signs are present, if the heated blanket has been used improperly, or if it no longer heats up, it must be inspected by the manufacturer before being used again.
- Under no circumstances should you dismantle or attempt to repair the heating blanket (including accessories), as otherwise its proper functioning cannot be guaranteed. Failure to observe this will invalidate the warranty.
- This electric blanket must be disposed of if the power cable is damaged. If the cable cannot be removed, the electric blanket must be disposed of.
- Do not expose the switch and cables to direct sunlight.
- When this electric blanket is switched on,
  - sharp-edged objects should not be placed on it,
  - or heat sources such as hot water bottles, heating pads, etc.
- The electronic components inside the switch heat up when the heating cover is in use. For this reason, the switch must not be covered, nor should the heating cover be placed on top of it whilst it is in operation.
- Please ensure you take note of the information in the following sections: Use, cleaning and maintenance, storage.
- If you still have questions regarding the use of our devices, please contact our customer service team.

### 3. Intended use



#### **CAUTION**

This electric blanket is intended solely for the purpose of warming the human body.

## 4. Use

### 4.1 Safety



#### WARNING

- The heated blanket is equipped with a SAFETY SYSTEM. This electronic sensor technology automatically switches off in the event of a fault, preventing overheating at any point on the heated blanket.
- Please note that if the heated blanket switches off due to a fault, it can no longer be used for safety reasons and must be sent to the specified service address.
- Never connect a faulty electric blanket to another socket of the same type. This will also cause the circuit breaker to trip via the safety system in the socket.

### 4.2 Operation

- First, connect the plug to the heater blanket.
- Then plug the power cord into the socket.



### 4.3 Switching on

Move the slide switch (3) on the right-hand side of the switch to the “I” position (on) – see Fig. Switch. When switched on, the temperature indicator (5) lights up.

### 4.4 Adjusting the heat

To increase the temperature, press the “ $\Delta$ ” button (4). To decrease the temperature, press the “ $\nabla$ ” button (4).

Level 0: OFF  
Level 1: Minimum  
temperature Levels 2–5:  
Personal temperature Level 6:  
Maximum  
temperature



#### INFO/NOTE

To heat the heating blanket as quickly as possible, you should first set it to the highest temperature setting.



#### WARNING

If the heated blanket is to be used for more than a few hours, we recommend setting the control to the lowest temperature setting to prevent the body from overheating and the associated risk of skin burns or heatstroke.

### 4.5 Automatic shut-off

This electric blanket switches off automatically after 3 hours. Once it has switched off, the light on the temperature control panel will flash.

To switch the electric blanket back on, first move the on/off slide switch on the side of the control panel to the off (0) position for 5 seconds. It will be possible to switch it back on after approximately 5 seconds.

### 4.6 Switching off

To switch off the electric blanket, move the slide switch on the side of the switch to the “0” (off) position. The light on the temperature setting indicator will go out.



#### INFORMATION/NOTE

If the electric blanket is not to be used, move the on/off slide switch on the side to the “0” (off) position and unplug the appliance from the socket. Then remove the switch, together with the socket connector, from the electric blanket.

## 5. Cleaning and maintenance of the



### **WARNING**

Unplug the appliance from the mains before cleaning. Otherwise, the heating blanket may be damaged. There is a risk of electric shock.



### **CAUTION**

The switch must never come into contact with water or other liquids. Otherwise, it may be damaged.

- Use a lint-free dry cloth to clean the switch. Do not use chemical or abrasive cleaning agents.
- Small stains on the heating blanket can be removed with a damp cloth or sponge and a little liquid detergent.



### **CAUTION**

Please note that the heating blanket must not be cleaned using chemical methods, wrung out, tumble-dried, or ironed with a steam iron or standard iron.

- The heating cover is machine washable.
- Set the washing machine to a special delicate wash cycle at 30 °C. Use a mild detergent in accordance with the manufacturer's recommended dosage.



### **CAUTION**

Please note that frequent washing can damage the heating blanket. For this reason, the heating blanket should be machine-washed no more than five times over its entire lifespan.

- After washing the heating blanket, dry it flat on a cool surface in the laundry room so that it returns to its original size.



### **CAUTION**

- Do not use pegs or similar items to secure the heating blanket to the drying rack. Otherwise, the heating blanket may be damaged.
- Only attach the switch to the heating blanket once the connector, the heating blanket and the cover are completely dry. Otherwise, the heating blanket may be damaged.



### **WARNING**

Never use the heated blanket to dry clothes! Doing so carries a risk of electric shock.

## 6. Storage

If you are not going to use the heated blanket for a long time, we recommend storing it in its original packaging. To do this, remove the plug and thus the switch from the heated blanket.



### **CAUTION**

- Please wait for the heated blanket to cool down first. Otherwise, the heated blanket may be damaged.
- When storing, do not place any objects on top of the heated blanket to prevent it from being sharply folded.

## 7. Removing the cover by hand

To protect the environment, do not dispose of the device with household waste once its useful life has ended. The device can be disposed of via the appropriate waste collection centres in your country. Dispose of the device in accordance with the Waste Electrical and Electronic Equipment (WEEE) Directive. You can direct any questions regarding disposal to the relevant local authorities.



## 8. What should I do if I encounter any problems?

| Problem                                                                                                                                                                                                                                                                                                                   | Reason                                                                                | Solution                          |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|-----------------------------------|
| The temperature setting indicator light may come on in the following situations<br>is non-flammable:<br>- Once the switch is fully connected to the heating blanket<br>- When the power plug is connected to a working electrical socket<br>- When the slide switch on the side of the switch is in the 'I' (on) position | Heater cover safety<br><br>by the system<br>it is irreversibly<br>it is switched off. | The heating cover and switch<br>. |

## 9. Technical data

Please refer to the label on the heater cover's type plate.

## 10. Warranty / Service

You can find detailed information regarding the warranty and warranty conditions in the warranty booklet supplied with the appliance.



**Please read these instructions for use carefully. Pay attention to the warnings and follow the safety instructions. Keep these instructions for future reference. Ensure that other users have access to these instructions. Pass the device on to other users together with these instructions.**

## Contents

|                                     |    |                                          |    |
|-------------------------------------|----|------------------------------------------|----|
| 1. Scope of delivery .....          | 45 | Setting the temperature.....             | 48 |
| 1.1 Description of the device ..... | 45 | 4.5 Automatic switch-off .....           | 49 |
| 2. Important instructions           |    | 4.6 Switch off .....                     | 49 |
| Keep for future                     |    | 5. Cleaning and maintenance .....        | 49 |
| use! .....                          | 46 | 6. Storage.....                          | 50 |
| 3. Intended use.....                | 48 | 7. Disposal .....                        | 50 |
| 4. Application.....                 | 48 | 8. What to do if problems arise? .....   | 50 |
| 4.1 Safety .....                    | 48 | 9. Technical specifications.....         | 50 |
| 4.2 Preparation for use .....       | 48 | 10. Warranty / after-sales service ..... | 50 |
| 4.3 Switching on .....              | 48 |                                          |    |

## Explanation of symbols

4.4 .....

The following symbols are used on the device, in the user manual, on the packaging and on the device's nameplate.

|  |                                                                                                                   |  |                                                  |
|--|-------------------------------------------------------------------------------------------------------------------|--|--------------------------------------------------|
|  | <b>WARNING!</b> Warning regarding the risk of injury or danger to your health.                                    |  |                                                  |
|  | <b>CAUTION!</b> A warning about possible damage to the appliance or accessories.                                  |  |                                                  |
|  | <b>NOTE:</b> Indicates important information.                                                                     |  |                                                  |
|  | Read the instructions!                                                                                            |  | Do not insert needles!                           |
|  | Do not use when folded or not fully extended!                                                                     |  | Not suitable for small children (under 3 years). |
|  | Manufacturer                                                                                                      |  |                                                  |
|  | The appliance has double protective insulation and therefore complies with protection class 2.                    |  |                                                  |
|  | Disposal of the appliance in accordance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE) |  |                                                  |
|  | Remove the packaging components and dispose of them in accordance with local regulations.                         |  |                                                  |

|                                                                                   |                                                                                                                                                     |                                                                                   |                   |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-------------------|
|   | Marking for identification of packaging material.<br>A = abbreviated material code, B = material number: 1–7 = plastic, 20–22 = paper and cardboard |                                                                                   |                   |
|  | Remove the packaging from the product and dispose of it in accordance with local regulations.                                                       |                                                                                   |                   |
|  | This product complies with the requirements of current European and national directives.                                                            |                                                                                   |                   |
|  | UK conformity mark                                                                                                                                  |                                                                                   |                   |
|  | The product has been certified as compliant with the technical regulations of the Eurasian Economic Union.                                          |                                                                                   |                   |
|   | The fabrics used in this appliance meet the high standards of the Oeko-Tex 100 standard, as confirmed by the Hohe Stein Research Institute.         |                                                                                   |                   |
|  | Maximum washing temperature 30 °C, very gentle cycle                                                                                                |  | Do not iron       |
|                                                                                   |                                                                                                                                                     |  | Do not bleach     |
|  | Do not dry clean                                                                                                                                    |  | Do not tumble dry |


1. included in the delivery

Ensure that the appliance packaging is undamaged and check that the contents are complete. Before use, ensure that the appliance and its accessories show no visible damage, and remove all packaging materials. If in doubt, do not use the appliance and contact the retailer or the customer service address provided.

- 1 Electric blanket
- 1 Switch
- 1 Instructions for use

1.1 Description of the device

- 1. Mains plug.
- 2. Switch.
- 3. Slide switch (ON = 'I'/OFF = 'O').
- 4. Buttons for setting the temperature.
- 5. Temperature mode indicator light.
- 6. Plug socket.

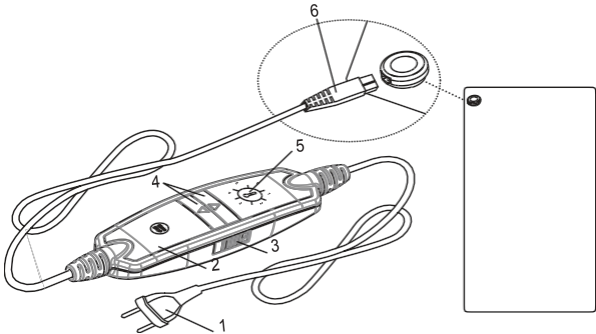

## 2. Important instructions

### Keep for future reference!



#### **WARNING**

- Failure to observe the following instructions may result in property damage or injury (electric shock, burns, fire, etc.). The following safety instructions and hazard warnings are intended not only to protect your health or that of third parties, but also to protect the product. Therefore, you must follow these instructions and, if you pass the appliance on to someone else, also pass on the instructions.
- The electric blanket must not be used by people with reduced sensitivity to heat or others requiring protection and supervision, as they may be unable to react to overheating (e.g. diabetics, people with skin conditions caused by illness, or with scarred areas of skin in the area of application, after taking painkillers or alcohol).
- Electric blankets may be used by children aged 3 years and over and under 8 years of age under adult supervision. The switch must always be set to the minimum temperature.
- This electric blanket must not be used by children (aged 3–8 years), except in cases where the switch has been pre-set by parents or other adults responsible for the child, and where the child has been instructed on the safe use of the electric blanket.
- The electric blanket may be used by children over 8 years of age, as well as by persons with physical, sensory or mental disabilities, provided they are supervised or have been instructed in the safe use of the electric blanket and have been warned of the potential dangers.
- Do not allow children to play with the electric blanket.
- Children are only permitted to carry out cleaning and maintenance under adult supervision.
- This electric blanket is not intended for use in hospitals.
- The electric blanket is intended for domestic/personal use; commercial use of the appliance is prohibited.
- Do not insert needles!
- Do not use when folded or creased!
- Do not use the electric blanket when wet!

- This electric blanket may only be used with the switch specified on the label.
- The electric blanket must only be connected to the mains voltage specified on the label.
- The electric and magnetic fields emitted by the electric blanket may, under certain circumstances, interfere with the functioning of your pacemaker. There is no cause for concern, however, as these emissions are well below the maximum permissible limits: electric field strength: max. 5000 V/m, magnetic field strength: max. 80 A/m, magnetic flux density: max. 0.1 mT. Therefore, before using the electric blanket, consult your doctor and the manufacturer of your pacemaker.
- Do not pull, twist or bend the wires.
- If positioned incorrectly, there is a risk of catching on the cable or the electric blanket's switch, becoming entangled in the cable and choking, tripping over it or stepping on it. The user must ensure that all cables, both loose and otherwise, are laid out safely.
- You must regularly check the electric blanket for signs of wear or damage. If such signs are present or if the electric blanket has been used for purposes other than those intended, it must be inspected by a service centre representative before further use.
- It is strictly forbidden to open up the electric blanket (including its accessories) or to repair it yourself, as its safe operation cannot be guaranteed in such cases. Failure to comply with these requirements will invalidate the warranty.
- If the electric blanket's power cord is damaged, it must be disposed of. If it is non-detachable, the entire electric blanket must be disposed of.
- Do not expose switches and cables to direct sunlight.
- Do not place the following on the electric blanket whilst it is switched on:
  - objects with sharp edges;
  - heat sources, such as hot water bottles, electric hot water bottles or similar items.
- The electronic components inside the switch heat up when the electric blanket is in use. Therefore, do not cover the switch or place it on the electric blanket when it is switched on.

- Please ensure you follow the instructions in the following sections: 'Operation', 'Cleaning and Maintenance', 'Storage'.
- If you have any further questions regarding the use of our appliances, please contact our customer service team.

### 3.



#### **WARNING**

This electric blanket is intended solely for warming the human body.

## 4. Use

### 4.1 Safety




#### **WARNING**

- The electric blanket is equipped with a safety system. The blanket's electronic sensors prevent overheating across the entire surface by automatically switching off in the event of a fault.
- Please note that, for safety reasons, the electric blanket must not be switched on again after a fault has occurred; it must be sent for repair to the service centre at the address provided.
- Under no circumstances should you connect a faulty electric blanket to another switch of the same type. The protection system in the switch will permanently disable it.

### 4.2 Preparing for operation

- First, connect the switch to the electric blanket by plugging in the connector.
- Then plug the plug into the socket.

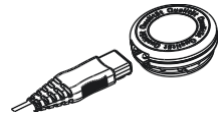

### 4.3 Switching on

Set the slide switch (3) on the right-hand side of the switch to the 'I' (ON) position; see the 'Switch' diagram. When switched on, the temperature mode indicator (5) lights up.

### 4.4 ing the temperature

To increase the temperature, press the '△' button (4). To decrease the temperature, press the '▽' button (4).

Mode 0: Off  
 Mode 1: minimum heating level Levels 2–5:  
 individual heating levels Mode 6: maximum  
 heating level



#### **NOTE**

Your electric blanket will heat up faster if you set it to the maximum temperature when you first start using it.



#### **WARNING**

If the electric blanket is used for several hours, it is recommended to set the temperature to the minimum setting to avoid overheating the body and, consequently, burns or heatstroke.

## 4.5 Automatic switch-off

The electric blanket switches off automatically after 3 hours. Once switched off, the temperature setting indicator flashes.

To switch the electric blanket back on, set the side slide switch to the OFF (0) position for 5 seconds. It can be switched back on after approximately 5 seconds.

## 4.6 Switching off

Set the side slide switch to the '0' (OFF) position to switch off the electric blanket. The temperature mode indicator will go out.



### NOTE

If the electric blanket is not in use, set the side slide switch to "0" (OFF) and remove the plug from the socket. Disconnect the electric blanket by unplugging the plug.

## 5. Cleaning and maintenance



### WARNING

Always remove the mains plug from the socket before cleaning. Then switch off the electric blanket by disconnecting the plug. Failure to do so may result in electric shock.



### CAUTION

Do not allow the switch to come into contact with water or other liquids! Otherwise, it may be damaged.

- Use a dry, lint-free cloth to clean the switch. Do not use chemical cleaners or abrasive cleaning products.
- Minor stains on the electric blanket can be removed with a damp cloth or, if necessary, a small amount of mild liquid detergent.



### WARNING

Please note that the electric blanket must not be dry-cleaned, wrung out, tumble-dried, stretched or ironed.

- This electric blanket is machine washable.
- Set the washing machine to a gentle wash cycle at 30 °C (for woollens). Use a mild detergent and follow the manufacturer's dosage instructions.



### WARNING

Please note that washing the electric blanket too frequently may have an adverse effect on it. Therefore, over its entire service life, the electric blanket should not be machine-washed more than 5 times.

- Immediately after washing, stretch out the electric blanket whilst it is still damp, restoring it to its original size and shape, and lay it out to dry on a clothes horse.



### WARNING

- Do not use pegs or similar devices to secure the electric blanket to the clothes horse. Doing so may damage the electric blanket.

- Only connect the switch to the electric blanket if the plug and the electric blanket are completely dry. Otherwise, the electric blanket may be damaged.



## WARNING

Never switch on a wet electric blanket for the purpose of drying it! Doing so poses a risk of electric shock.

## 6. Storage

If the electric blanket is not to be used for a long period, it is recommended that you store it in its original packaging. To do this, disconnect the switch from the electric blanket by unplugging the plug.



## ATTENTION

- Allow the electric blanket to cool down first. Failure to do so may damage the electric blanket.
- To avoid severe creasing, do not place objects on the electric blanket when it is not in use.

## 7. Disposal

In the interests of environmental protection, it is strictly forbidden to dispose of the appliance with household waste at the end of its service life. Disposal must be carried out via the appropriate collection points in your country. The appliance must be disposed of in accordance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). If you have any questions, please contact your local authority responsible for waste disposal.



## 8. What should I do if a fault occurs ?

| Problem                                                                                                                                                                                                                                                                                    | Cause                                                                       | Remedial measures                                                             |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------|-------------------------------------------------------------------------------|
| <p>The temperature settings are not illuminated if:</p> <ul style="list-style-type: none"> <li>— the switch is fully connected to the electric blanket;</li> <li>— the mains plug is connected to the socket;</li> <li>— the side slide switch is set to the 'I' (ON) position.</li> </ul> | <p>The safety system is fully I have switched off the electric blanket.</p> | <p>Send the electrical equipment and the switch is in service department.</p> |

## 9. Technical specifications

See the manufacturer's label on the foot warmer.

## 10. Warranty / service

Further information regarding the warranty/service can be found in the warranty/service card included in the package.



**Read this user manual carefully. Observe the warnings and safety instructions. Keep the user manual for future reference. Make the user manual available to other users. Pass on the device together with the user manual.**

## Table of contents

|                                    |    |                                   |    |
|------------------------------------|----|-----------------------------------|----|
| 1. Contents of the package .....   | 52 | Setting the temperature .....     | 55 |
| 1.1 Description of the device..... | 52 | 4.5 Automatic switch-off.....     | 55 |
| 2. Important tips                  |    | 4.6 Switching off .....           | 56 |
| Keep for future reference .....    | 53 | 5. Cleaning and maintenance ..... | 56 |
| 3. Intended use.....               | 55 | 6. Storage.....                   | 57 |
| 4. Operation .....                 | 55 | 7. Disposal.....                  | 57 |
| 4.1 Safety .....                   | 55 | 8. Troubleshooting.....           | 57 |
| 4.2 Start-up .....                 | 55 | 9. Technical specifications.....  | 57 |
| 4.3 Turning on .....               | 55 | 10. Warranty / service .....      | 57 |
| 4.4 .....                          |    |                                   |    |

## Explanation of symbols

The following symbols are used on the appliance, in the user manual, on the packaging and on the appliance's rating plate:

|  |                                                                                                  |  |                                                        |
|--|--------------------------------------------------------------------------------------------------|--|--------------------------------------------------------|
|  | <b>WARNING:</b> Warning regarding the risk of injury or danger to health.                        |  |                                                        |
|  | <b>CAUTION:</b> A note regarding the possibility of damage to the appliance or accessories.      |  |                                                        |
|  | <b>NOTE:</b> Information regarding important details.                                            |  |                                                        |
|  | Read the instructions!                                                                           |  | Do not insert needles!                                 |
|  | Do not use if creased or crumpled!                                                               |  | Not suitable for use by children under 3 years of age. |
|  | Manufacturer                                                                                     |  |                                                        |
|  | The device is double-insulated for safety reasons and complies with protection class 2.          |  |                                                        |
|  | Disposal in accordance with the EC Directive on Waste Electrical and Electronic Equipment – WEEE |  |                                                        |
|  | Separate the packaging components and dispose of them in accordance with local regulations.      |  |                                                        |

|                                                                                   |                                                                                                                                                            |                                                                                   |                    |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|--------------------|
|   | Marking identifying the packaging material. A = abbreviation of the material name, B = material number:<br>1–7 = plastics, 20–22 = paper and cardboard     |                                                                                   |                    |
|  | Separate the product and packaging components and dispose of them in accordance with local regulations.                                                    |                                                                                   |                    |
|  | This product complies with the requirements of applicable European and national directives.                                                                |                                                                                   |                    |
|  | Marking of compliance with UK requirements                                                                                                                 |                                                                                   |                    |
|  | The products comply with the technical regulations in force in the Eurasian Economic Union.                                                                |                                                                                   |                    |
|   | The textiles used in this appliance meet the high environmental standards of the OEKO-TEX Standard 100, as confirmed by the Hohenstein Research Institute. |                                                                                   |                    |
|  | Max. wash temperature 30 °C. Very gentle cycle.                                                                                                            |  | Do not iron        |
|                                                                                   |                                                                                                                                                            |  | Do not bleach      |
|  | Do not dry clean                                                                                                                                           |  | Do not tumble dry. |


1. Contents of the package

Check the device for any external damage to the packaging and ensure the contents are complete. Before use, ensure that the device and accessories show no visible damage and that all packaging materials have been removed. If in doubt, do not use the device and contact your sales representative or the service address provided.

- 1 Heating blanket
- 1 Switch
- 1 User manual

1.1

- 1. Mains plug
- 2. Switch
- 3. Slide switch (ON = I / OFF = 0)
- 4. Temperature control buttons
- 5. Backlit temperature level indicator
- 6. Plug connector

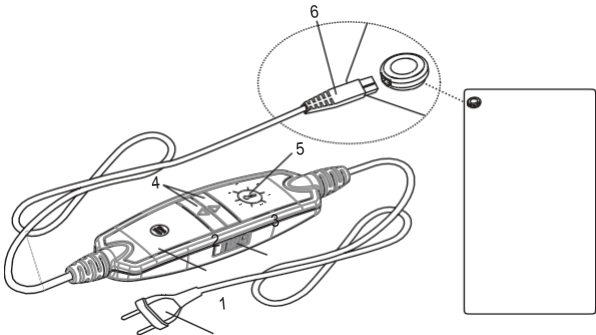

## 2. Important

### Keep for future



#### **WARNING**

- Failure to follow the instructions below may result in damage to property or personal injury (electric shock, burns, fire). The following warnings and safety instructions are intended not only to protect the health of the user or third parties, but also to protect the product. Please follow these instructions and include this manual if you pass the appliance on to others.
- The heating blanket must not be used by people who cannot feel heat or by others requiring a high level of care, as these individuals will not react in the event of overheating (e.g. diabetics, people with skin conditions or scarring in the area of application, people who have taken painkillers or alcohol).
- The heating blanket must not be used on very young children (aged 0 to 3 years), as they will not react in the event of overheating.
- The heating blanket may be used by children aged over 3 and under 8, under supervision, provided that the switch is always set to the minimum temperature setting.
- The heated blanket may be used by children aged 8 and over, as well as by people with physical, motor or mental disabilities, or those lacking experience and knowledge, only if they are under supervision or have been given instructions on how to use the heated blanket safely and are aware of the risks associated with its use.
- Children must not play with the electric blanket.
- Cleaning and maintenance of the appliance must not be carried out by children unless they are supervised by an adult.
- The electric blanket is not intended for use in hospitals.
- This heating blanket is intended solely for domestic/private use, not for commercial purposes.
- Do not pierce with needles.
- Do not use when folded or creased.
- Do not use when wet.
- The heating pad must only be used in conjunction with the switch specified on the label.

- The electric blanket may only be connected to the mains voltage indicated on the label.
- The electric and magnetic fields generated by the electric heating blanket may, under certain circumstances, interfere with the operation of a pacemaker. However, their values are well below the limit values: electric field strength: max. 5000 V/m, magnetic field strength: max. 80 A/m, magnetic flux density: max. 0.1 millitesla. Therefore, you should consult your doctor and the manufacturer of your pacemaker before using the electric blanket.
- Do not pull on the cable, twist it or bend it sharply.
- The cable and the heating element switch may pose a risk of entanglement, suffocation, tripping or kicking if not positioned correctly. The user must ensure that excess cables and cables in general are laid out safely.
- You should regularly check the heating blanket for signs of wear or damage. If you notice any such signs, if the heating blanket has been used incorrectly, or if the appliance does not heat up, you must send it to the manufacturer's service centre before using it again.
- Under no circumstances should you open or repair the electric blanket (including its accessories), as otherwise its correct operation cannot be guaranteed. Failure to comply with this rule will result in the loss of the warranty.
- If the power cord of this electric blanket is damaged, it must be disposed of. If it cannot be removed, the electric blanket must be disposed of.
- Do not expose switches and cables to direct sunlight.
- While this electric blanket is switched on,
  - do not place any sharp objects on it,
  - do not place any heat sources on it, such as a hot water bottle, electric blanket, etc.
- The electronic components of the switch become hot during use of the electric blanket. Therefore, do not cover the switch or place it on the electric blanket once it is switched on.
- You must strictly follow the instructions in the following sections: Operation, Cleaning and Maintenance, Storage.
- If you have any questions regarding the use of our equipment, please contact our customer service department.

### 3. Intended use



#### NOTE

The heating blanket may only be used to warm the human body.

## 4. Operation

### 4.1 Safety




#### NOTE

- The heated blanket is equipped with a safety system. Electrical sensors prevent the blanket from overheating across its entire surface by automatically switching it off in the event of a fault.
- For safety reasons, if the blanket is damaged, do not continue to use it — return it to the service address provided.
- Under no circumstances should a damaged electric blanket be connected to another switch of the same type. This would result in the safety system in the switch tripping.

### 4.2 Start-up

- First, connect the switch to the electric blanket using the plug connection.
- Next, plug the plug into the socket.

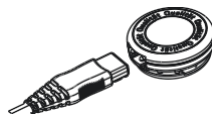

### 4.3 Switching on

Set the slide switch (3) on the right-hand side of the switch to position 'I' (ON) – see the switch diagram. Once switched on, the temperature level indicator will light up (5).

### 4.4 Setting the temperature

To increase the temperature, press the “△” button (4). To decrease the temperature, press the “▽” button (4).

Level 0: OFF  
Level 1: minimum heating Levels  
2–5: Individual heating Level 6:  
maximum heating



#### TIP

The quickest way to warm up the blanket is to set the heating to the highest temperature level.



## WARNING

If the heated blanket is to be used for several hours, we recommend setting the temperature control to the lowest setting to prevent the body from overheating, which could cause skin burns or heatstroke.

### 4.5 Automatic switch-off

The heated blanket switches off automatically after 3 hours of use. The temperature indicator flashes when it switches off.

To switch the heated blanket back on, first set the side ON/OFF slide switch to the OFF (0) position for 5 seconds. After approximately 5 seconds, you can switch the appliance back on.

## 4.6 Switching off

To switch off the heated blanket, move the side slide switch on the control panel to "0" (OFF). The backlight on the temperature display will go out.



### TIP

If you do not intend to use the blanket any further, switch the side slide switch. Set the ON/OFF switch to '0' (OFF) and unplug the appliance from the socket. Then disconnect the plug connector, thereby disconnecting the switch from the heating blanket.

## 5. Cleaning and maintenance of the



### WARNING

Always unplug the mains cable from the socket before cleaning. Then disconnect the plug connector and, in doing so, the switch from the electric blanket. Otherwise, there is a risk of electric shock.



### NOTE

The switch must not come into contact with water or any other liquids. Otherwise, the switch may be damaged.

- Use a dry, lint-free cloth to clean the switch. Do not use chemicals or abrasive cleaners.
- Small stains on the heating blanket can be removed using a damp cloth or sponge, or a small amount of mild detergent.



### CAUTION

The heated blanket must not be dry-cleaned, wrung out, tumble-dried, mangled or ironed.

- The heated blanket is machine washable.
- Set the washing machine to a gentle wash cycle at 30 °C (wool cycle). Use a mild detergent in the quantity specified by the manufacturer.



### NOTE

Please note that washing the heated blanket too frequently has a negative effect on it. Therefore, the heated blanket may only be machine-washed a maximum of 5 times throughout its entire lifespan.

- Immediately after washing, spread the blanket out completely on a drying rack whilst it is still wet and leave it to dry.



### NOTE

- Do not use clips or other items to attach the blanket to the dryer. Doing so may damage the heated blanket.
- Only connect the switch to the heated blanket once the plug and the heated blanket are completely dry. Otherwise, the heated blanket may be damaged.



## WARNING

Under no circumstances must you switch on the electric blanket to dry it! Otherwise, there is a risk of electric shock.

## 6. Storage

If the heating blanket is not being used for a prolonged period, we recommend storing it in its original packaging. Disconnect the plug and thus the switch from the heating blanket.



## CAUTION

- Always wait until the electric blanket has cooled down first. Otherwise, the electric blanket may be damaged.
- When storing the electric blanket, do not place any objects on top of it, as this could cause it to crease.

## 7. Disposal

To protect the environment, do not dispose of the appliance with normal household waste at the end of its service life. Disposal must be arranged at the appropriate collection point in your country. The appliance must be disposed of in accordance with the Waste Electrical and Electronic Equipment (WEEE) Directive. If you have any questions, please contact the relevant authority responsible for disposal.



## 8. Troubleshooting

| Problem                                                                                                                                                                                                                                                                                                                                        | Cause                                                                 | Solution                                                                |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------|-------------------------------------------------------------------------|
| The temperature settings are not illuminated when: <ul style="list-style-type: none"> <li>- the switch has been correctly connected to the electric blanket;</li> <li>- the power supply is connected to a properly functioning power socket;</li> <li>- the side slide switch on the control unit is set to the 'I' (ON) position.</li> </ul> | The safety system has irreversibly switched off the electric blanket. | The electric blanket and switch must be returned to the service centre. |

## 9.

See the rating label on the heating blanket.

## 10. warranty / service

Detailed information regarding the warranty and warranty terms can be found in the enclosed warranty leaflet.



Please read these instructions carefully. Follow the warnings and safety guidelines. Keep the instructions for future reference. Ensure that the instructions are accessible to other users. If you pass the appliance on to someone else, please also provide them with the instructions.

## Contents

|                                        |    |                                               |    |
|----------------------------------------|----|-----------------------------------------------|----|
| 1. Contents.....                       | 59 | Setting the temperature.....                  | 62 |
| 1.1 Description of the appliance ..... | 59 | 4.5 Automatic switch-off function .....       | 63 |
| 2. Important instructions              |    | 4.6 Switching off .....                       | 63 |
| Keep for future reference .....        | 60 | 5. Cleaning and maintenance .....             | 63 |
| 3. Intended use .....                  | 62 | 6. Storage.....                               | 64 |
| 4. Operation .....                     | 62 | 7. Disposal.....                              | 64 |
| 4.1 Safety .....                       | 62 | 8. What to do if you encounter problems?..... | 64 |
| 4.2 Commissioning .....                | 62 | 9. Technical specifications .....             | 64 |
| 4.3 Switching on .....                 | 62 | 10. Warranty / service .....                  | 64 |

4.4 .....

## Explanation of symbols

The following symbols are used on the appliance, in the user manual, on the packaging and on the appliance's rating plate:

|  |                                                                                                                                                                     |  |                                                 |
|--|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|-------------------------------------------------|
|  | <b>WARNING;</b> Warning of potential physical or health hazard.                                                                                                     |  |                                                 |
|  | <b>CAUTION;</b> Safety notice: potential damage to the appliance/accessory.                                                                                         |  |                                                 |
|  | <b>NOTE;</b> Reference to important information.                                                                                                                    |  |                                                 |
|  | Read the instructions!                                                                                                                                              |  | Do not insert needles!                          |
|  | Do not use when folded or pushed together!                                                                                                                          |  | Not suitable for children under 3 years of age. |
|  | Manufacturer                                                                                                                                                        |  |                                                 |
|  | The appliance is double-insulated and therefore complies with safety class 2.                                                                                       |  |                                                 |
|  | Dispose of the device in accordance with the EU Directive on the disposal of electrical and electronic equipment – WEEE (Waste Electrical and Electronic Equipment) |  |                                                 |
|  | Separate the packaging components and dispose of the waste in accordance with local regulations.                                                                    |  |                                                 |

|                                                                                   |                                                                                                                                                                             |                                                                                   |                   |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-------------------|
|   | Designation for the identification of the packaging material. A = material abbreviation, B = material number:<br>1–7 = plastics, 20–22 = paper and cardboard                |                                                                                   |                   |
|  | Separate the product and the packaging components and dispose of the waste in accordance with local regulations.                                                            |                                                                                   |                   |
|  | This product complies with the requirements of the applicable European and national directives.                                                                             |                                                                                   |                   |
|  | UKCA marking (UK Conformity Assessed)                                                                                                                                       |                                                                                   |                   |
|  | The products demonstrably comply with the requirements of the technical regulations of the Eurasian Economic Union (EAEU).                                                  |                                                                                   |                   |
|   | The materials used in this appliance comply with the high socio-ecological requirements of the Oeko-Tex Standard 100, as demonstrated by the Hohenstein Research Institute. |                                                                                   |                   |
|  | Maximum washing temperature 30 °C, extra gentle wash cycle                                                                                                                  |  | Do not iron       |
|                                                                                   |                                                                                                                                                                             |  | Do not bleach     |
|  | Do not dry clean                                                                                                                                                            |  | Do not tumble dry |


## 1. Contents of delivery

Check that the outer packaging of the appliance is intact and that all parts are present. Before using the appliance, check that the appliance and its accessories are not visibly damaged and remove all packaging material. If in doubt, we advise you not to use the appliance and to contact the retailer or the relevant customer service department.

- 1 Electric duvet
- 1 Switch
- 1 User manual

### 1.1 Description of the device

- 1. Plug
- 2. Switch
- 3. Slide switch (ON = I/OFF = 0)
- 4. Buttons for setting the temperature
- 5. Illustration of the temperature settings
- 6. Plug connection

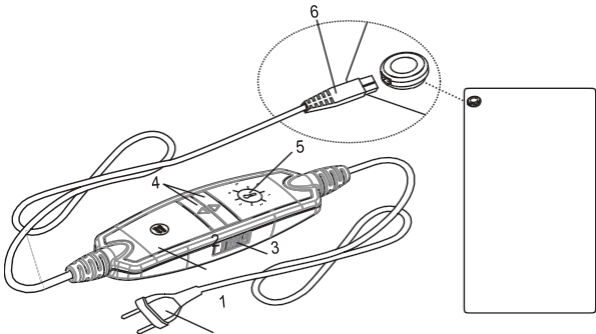

## 2. Important instructions: Keep for future reference



### **WARNING**

- Failure to follow the instructions below may result in personal injury or property damage (electric shock, burns, fire). The following safety guidelines and risk warnings are intended not only to protect your health or the health of others, but also to protect the product. Therefore, please observe the safety guidelines mentioned and pass on these instructions for use if you give the item to someone else.
- This electric blanket must not be used by people who are insensitive to heat or who require protection because they are unable to react to overheating (such as diabetics, people with skin changes due to illness or scarring in the area to be treated, and people who have taken painkillers or consumed alcohol).
- This electric blanket must not be used on very young children (0–3 years), as they are unable to react to overheating.
- Children aged over 3 and under 8 years may use this electric blanket under supervision. The switch must always be set to the lowest temperature setting.
- This electric blanket may be used by children aged 8 years and older and by persons with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, provided they use the electric blanket under supervision or have been instructed on its safe use and understand the resulting risks.
- Children must not play with the electric duvet.
- The appliance must not be cleaned or maintained by children unless this is done under supervision.
- This electric duvet is not intended for use in hospitals.
- This electric blanket is intended for domestic/private use only, not for commercial use.
- Do not insert needles into the appliance!
- Do not use the appliance if it is folded or creased.
- Do not use the appliance if it is wet.
- This electric blanket must only be used with the switch specified on the label.

- This electric blanket must only be connected to the mains voltage specified on the label.
- The electric and magnetic fields emitted by this electric duvet may, under certain circumstances, interfere with the operation of a pacemaker. However, the radiation levels are well below the limit values: electric field strength: max. 5000 V/m, magnetic field strength: max. 80 A/m, magnetic flux density: max. 0.1 millitesla. You should therefore consult your doctor or the pacemaker manufacturer before using this electric duvet.
- Do not pull on the cables or twist or kink them.
- If the cord and switch of this electric blanket are positioned incorrectly, you may become entangled in them, get caught in them, trip over them or step on them. The user must ensure that excessively long cords and cords in general are laid out safely.
- This electric blanket should be checked regularly for signs of wear or damage. If there are signs of wear or damage, if the electric blanket has not been used as intended, or if the electric blanket no longer heats up, it must be checked by the manufacturer before use.
- Under no circumstances should you open or attempt to repair the electric duvet (including accessories) yourself. If you do so, trouble-free operation can no longer be guaranteed. Failure to comply with this instruction will invalidate the warranty.
- If the power cord of this electric duvet becomes damaged, it must be removed. If the power cord cannot be disconnected from the electric duvet, the entire electric duvet must be removed.
- Do not expose switches and cables to direct sunlight.
- When this electric duvet is switched on,
  - sharp objects placed on it,
  - or placed on it, such as a hot water bottle or heating pad, etc.
- The electronic components in the switch become hot when the electric duvet is in use. The switch must not be covered or placed on the electric duvet whilst the electric duvet is switched on.
- Always follow the instructions in the following sections: Operation, Cleaning and maintenance, Storage.

- If you have any further questions regarding the use of our appliances, please contact our customer service team.

### 3. s for use



#### ATTENTION

This electric duvet is intended solely for warming the human body.

## 4. Operation

### 4.1 Safety




#### ATTENTION

- The electric blanket is equipped with a SAFETY SYSTEM. This electronic sensor technology prevents the electric blanket from overheating across its entire surface by automatically switching it off in the event of a fault.
- Please note that, for safety reasons, the electric blanket cannot be used again after a fault and must be sent to the specified service address.
- Under no circumstances should you connect the faulty electric top blanket to another switch of the same type. This would also cause the safety system in the switch to shut down permanently.

### 4.2 Commissioning

- First connect the switch to the electric top blanket by plugging in the plug.
- Then plug the power cord into the mains socket.

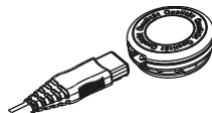

### 4.3 Switching on

Set the slide switch (3) on the right-hand side of the switch to the "I" (ON) position – see the illustration of the switch.

When the appliance is switched on, the temperature display is illuminated (5).

### 4.4 Setting the temperature on the

To increase the temperature, press the  button (4). To decrease the temperature, press the  button (4).

Level 0: OFF  
 Level 1: minimum heating  
 Levels 2–5: individually adjustable heating Level  
 6: maximum heating



#### NOTE

The electric duvet warms up quickest when you first switch on the highest temperature setting.



#### WARNING

If the electric top blanket is used for several hours, we recommend setting the switch to the lowest temperature setting to prevent the user's body from overheating and to avoid possible burns or heatstroke as a result.

#### 4.5 Automatic switch-off function ( )

This electric duvet switches off automatically after 3 hours. The temperature display flashes after the appliance has switched off.

To switch the electric duvet back on, set the ON/OFF slide switch on the side of the unit to the OFF (0) position for 5 seconds. After approximately 5 seconds, you can switch the unit back on.

#### 4.6 Switching off

Set the slide switch on the side of the unit to the "0" (OFF) position to switch off the electric duvet. The temperature setting display will then no longer be illuminated.



#### NOTE

Set the ON/OFF slide switch on the side of the control unit to the "0" (OFF) position and unplug the appliance from the mains socket when you are not using the electric duvet. Then disconnect the plug connection and thus the control unit from the electric duvet.

### 5. Cleaning and maintenance of the



#### WARNING

Before cleaning the appliance, unplug it from the mains. Then disconnect the controller from the electric duvet by unplugging it. Otherwise, you risk an electric shock.



#### CAUTION

The switch must never come into contact with water or other liquids. This could damage it.

- Use a dry, lint-free cloth to clean the switch. Do not use chemical cleaning agents or abrasives.
- Small stains on the electric duvet can be removed with a damp cloth or sponge and, if necessary, a little liquid mild detergent.



#### CAUTION

The electric top blanket must not be dry-cleaned, wrung out, mangled, ironed or tumble-dried.

- This electric duvet can be washed in the washing machine.
- Set the washing machine to a delicate cycle at 30 °C (wool cycle). Use a mild detergent and measure it out according to the manufacturer's instructions.



#### PLEASE NOTE

Frequent washing can affect the performance of the electric blanket. The electric blanket should therefore be machine-washed no more than 5 times during its entire lifetime.

- Immediately after washing, reshape the still-wet electric duvet to its original size and leave it to dry flat on a drying rack.



### PLEASE NOTE

- Do not use clothes pegs or other clips to attach the electric duvet to the drying rack. Otherwise, the electric duvet may be damaged.
- Do not reconnect the switch to the electric duvet until the plug and the electric duvet are completely dry. Otherwise, the electric duvet may be damaged.



### WARNING

Under no circumstances should you switch on the electric duvet to dry it in this way! You run the risk of an electric shock.

## 6. Storage

If you do not intend to use the electric duvet for a prolonged period, we recommend storing it in its original packaging. To do this, unplug the power cord from the socket.



### CAUTION

- Allow the electric blanket to cool down first. Otherwise, the electric blanket may be damaged.
- Do not place any objects on the electric duvet during storage to prevent sharp creases from forming.

## 7. Disposal

For environmental reasons, the appliance must not be disposed of with ordinary household waste at the end of its service life. Disposal can be arranged via specialist collection points in your country. Dispose of the appliance in accordance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). For further information, please contact the relevant waste disposal authorities in your local area.



## 8. What should you do if you encounter problems with ?

| Problem                                                                                                                                                                                                                                                                                           | Cause                                                               | Solution                                              |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------|-------------------------------------------------------|
| The temperature settings are not illuminated if <ul style="list-style-type: none"> <li>- the switch is fully connected to the electric top blanket</li> <li>- the plug is connected to a working socket</li> <li>- the slide switch on the side of the control unit is set to "I" (ON)</li> </ul> | The safety system has irreversibly switched off the electric duvet. | Send the electric duvet and the switch in for repair. |

## 9. Technical and e data

See the label with the type plate on the electric top blanket.

## 10. Warranty / service

Further information about the warranty and the warranty terms and conditions can be found in the warranty certificate provided.



**Read this user manual carefully. Observe the warnings and safety instructions. Keep the user manual for future reference. Make the user manual available to other users. Also include the user manual when passing the appliance on to someone else.**

## Table of contents

|                                                 |    |                                                      |    |
|-------------------------------------------------|----|------------------------------------------------------|----|
| 1. Scope of delivery .....                      | 66 | Temperature setting .....                            | 69 |
| 1.1 Product description .....                   | 66 | 4.5 Automatic switch-off .....                       | 69 |
| 2. Important instructions                       |    | 4.6 Switching off .....                              | 69 |
| Keep the user manual for future reference ..... | 67 | 5. Cleaning and maintenance .....                    | 70 |
| 3. Intended use .....                           | 68 | 6. Storage .....                                     | 70 |
| 4. Operation .....                              | 69 | 7. Disposal .....                                    | 71 |
| 4.1 Safety .....                                | 69 | 8. What should I do if there are any problems? ..... | 71 |
| 4.2 Commissioning .....                         | 69 | 9. Technical data .....                              | 71 |
| 4.3 Ignition .....                              | 69 | 10. Warranty / service .....                         | 71 |
| 4.4 .....                                       |    |                                                      |    |

## Key to symbols on the label

The following symbols are used on the appliance, in the user manual, on the packaging and on the appliance's type plate:

|  |                                                                                                    |  |                                                 |
|--|----------------------------------------------------------------------------------------------------|--|-------------------------------------------------|
|  | <b>WARNING;</b> Warning of risk of injury or harm to your health.                                  |  |                                                 |
|  | <b>IMPORTANT;</b> Safety instructions regarding potential damage to the appliance or accessories.  |  |                                                 |
|  | <b>NOTE;</b> Reference to important information.                                                   |  |                                                 |
|  | Read the instructions!                                                                             |  | Do not insert needles!                          |
|  | Must not be used when folded or stacked!                                                           |  | Not suitable for children under 3 years of age. |
|  | Manufacturer                                                                                       |  |                                                 |
|  | Class 2 safety appliance                                                                           |  |                                                 |
|  | Dispose of in accordance with the EC Directive on Waste Electrical and Electronic Equipment (WEEE) |  |                                                 |
|  | Separate the packaging components and dispose of them in accordance with local regulations.        |  |                                                 |

|                                                                                   |                                                                                                                                                              |                                                                                   |                   |
|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-------------------|
|   | Labelling for identification of packaging material. A = material code, B = material number: 1–7 = plastic, 20–22 = paper and cardboard                       |                                                                                   |                   |
|  | The product and packaging components must be separated and disposed of in accordance with local regulations.                                                 |                                                                                   |                   |
|  | This product complies with the requirements of the applicable European and national directives.                                                              |                                                                                   |                   |
|  | UK Conformity Assessment                                                                                                                                     |                                                                                   |                   |
|  | The products are demonstrably in compliance with the requirements of the technical regulations of the Eurasian Economic Union.                               |                                                                                   |                   |
|   | The textiles used in this appliance meet the high human ecological standards of the Oeko-Tex Standard 100, as verified by the Hohenstein Research Institute. |                                                                                   |                   |
|  | Maximum washing temperature 30 °C, very gentle cycle                                                                                                         |  | Do not iron       |
|                                                                                   |                                                                                                                                                              |  | Do not bleach     |
|  | Do not dry clean                                                                                                                                             |  | Do not tumble dry |


1. Contents of delivery

Check that the appliance’s packaging is undamaged and that all contents are in the box. Before use, check that the appliance and accessories have no visible damage and that all packaging material has been removed. Do not use the appliance if in doubt, and contact your dealer or the service address provided.

- 1 Electric blanket
- 1 Contact
- 1 Instructions for use

1.1 Description of the '' product

- 1. Connector
- 2. Control section
- 3. Slide switch (ON = I / OFF = 0)
- 4. Buttons for setting the temperature
- 5. Illuminated display of temperature settings
- 6. Connector

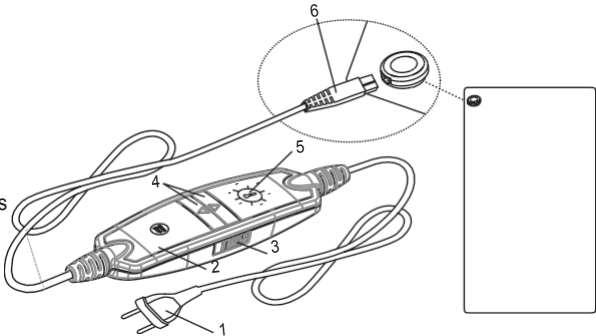

## 2. Important instructions

### Keep the user manual for future reference



#### **WARNING**

- Failure to follow the instructions below may result in personal injury or property damage (electric shock, burns, fire). The following safety and hazard warnings are intended not only to protect your health and that of others, but also to protect the product. Therefore, please observe these safety instructions and ensure that these instructions are included if you pass the product on to someone else.
- The electric blanket must not be used on heat-sensitive individuals or others requiring special care, as they are unable to react to overheating (e.g. diabetics, people with skin conditions or scarred areas at the site of application, or following the consumption of painkillers or alcohol).
- The heated blanket must not be used on very young children (0–3 years), as they are unable to react to overheating.
- The heated blanket may be used by children aged over 3 and under 8 years when supervised, but the control unit must always be set to the lowest temperature.
- The heated blanket may be used by older children aged 8 years and over, as well as by people with reduced physical, sensory or mental capabilities or lack of experience and knowledge, provided they are under supervision, have been instructed in the safe use of the bedspread and understand the associated risks.
- Children must not play with the electric blanket.
- Cleaning and user maintenance must not be carried out by children unless they are under supervision.
- The electric blanket is not intended for use in hospitals.
- The electric blanket is intended for domestic use only, not for commercial use.
- Do not insert needles into it.
- Must not be used when folded or compressed.
- Do not use when wet.
- The electric blanket must only be used with the plug shown on the label.
- The electric blanket must only be connected to the mains voltage specified on the label.

- The electric and magnetic fields emitted by the electric blanket may interfere with the functioning of a pacemaker. However, they are well below the limit values: electric field strength: max. 5000 V/m, magnetic field strength: max. 80 A/m, magnetic flux density: max. 0.1 milli-tesla. If you have a pacemaker, please consult your doctor and the pacemaker manufacturer before using the electric blanket.
- Avoid pulling on the cables or twisting or kinking them sharply.
- If the electric blanket's cable and control unit are positioned incorrectly, there is a risk of becoming entangled in them, being strangled, tripping over them or stepping on them. The user must ensure that any excess cable and cables in general are secured safely.
- Check the electric blanket frequently for signs of wear or damage. If such signs are found, if the electric blanket has been used incorrectly, or if it no longer heats up, it must be inspected by the manufacturer before being used again.
- Under no circumstances must the electric blanket (including accessories) be opened or repaired, as otherwise proper functioning can no longer be guaranteed. Failure to comply with this will invalidate the warranty.
- If the power cord for this electric blanket is damaged, it must be disposed of. If it cannot be removed, the electric blanket must be disposed of.
- Avoid exposing switches and cables to direct sunlight.
- While the electric blanket is switched on, do not
  - not place any sharp objects on it,
  - place any heat sources such as a hot water bottle, heating pad or similar on it.
- The electronic components in the plug become hot when the electric blanket is in use. The plug must therefore not be covered or left on the electric blanket whilst it is in use.
- Always follow the instructions in the following sections: Operation, cleaning and maintenance, storage.
- If you have any questions regarding the use of our appliances, please contact our customer service.

### 3. Intended use



#### **IMPORTANT**

This electric blanket is intended solely for warming the human body.

## 4. Operation

### 4.1 Safety



#### IMPORTANT

- The electric blanket is equipped with a SAFETY SYSTEM. This electronic sensor technology prevents the electric blanket from overheating across its entire surface by automatically switching it off in the event of a fault.
- Please note that, for safety reasons, the electric blanket must no longer be used after a fault and must be sent to the specified service address.
- Under no circumstances should you connect the defective electric blanket to another control unit of the same type. This will also cause the safety system in the control unit to perform a final shutdown.

### 4.2 Commissioning

- First connect the plug to the electric blanket by inserting the connector.
- Then plug the plug into the socket.



### 4.3 Switching on

Move the slide switch (3) on the right-hand side of the control to the 'I' (ON) position – see fig. Control. When switched on, the temperature display is illuminated (5).

### 4.4 Setting the e

You increase the temperature by pressing the 'Δ' button (4). You decrease the temperature by pressing the '∇' button (4).

Step 0: OFF

Step 1: Minimum heat

Steps 2–5: Individual heat

Step 6: Maximum heat



#### NOTE

You will achieve the fastest heating of the electric blanket by first setting it to the highest temperature setting.



#### WARNING

If the electric blanket is used for several hours, we recommend setting the switch to the lowest temperature setting to avoid overheating the body and thus prevent burns or heatstroke.

### 4.5 Automatic cut-

This electric blanket switches off automatically after 3 hours. The temperature setting indicator flashes after it has switched off. If you wish to switch the electric blanket back on, first move the on/off slide switch on the side to the OFF (0) position for 5 seconds. After approx. 5 seconds, you can switch it back on.

### 4.6 Switching off

Move the slide switch on the side of the unit to position '0' (OFF) to switch off the electric blanket. The temperature setting display will then no longer be lit.



#### NOTE

If the electric blanket is not in use, move the on/off slide switch on the side to position '0' (OFF) and unplug the appliance from the mains socket. Then disconnect the connector plug and thus the control unit from the electric blanket.

## 5. Cleaning and maintenance



### **WARNING**

Always unplug the appliance from the mains socket before cleaning. Then disconnect the connector plug and thus the socket from the electric blanket. Failure to do so may result in an electric shock.



### **IMPORTANT**

The plug must never come into contact with water or other liquids. Otherwise, it may be damaged.

- Use a dry, lint-free cloth to clean the plug. Never use chemical cleaning agents or scouring pads.
- Small stains on the electric blanket can be removed with a damp cloth or sponge and, if necessary, a little liquid detergent.



### **IMPORTANT**

Please note that the electric blanket must not be dry-cleaned, wrung out, tumble-dried, rolled up or ironed.

- This heated blanket is machine washable.
- Set the washing machine to a special gentle cycle at 30°C (wool wash). Use a mild detergent and measure it out according to the manufacturer's instructions.



### **IMPORTANT**

Please note that washing the electric blanket too often will wear it out. The electric blanket should therefore be machine-washed no more than 5 times during its entire lifetime.

- Immediately after washing, pull the still-damp electric blanket into its original shape and lay it flat on a drying rack.



### **IMPORTANT**

- Do not use clothes pegs or similar items to secure the electric blanket to the drying rack. Otherwise, the electric blanket may be damaged.
- Only reconnect the plug to the electric blanket once the plug, the electric blanket and the fabric cover are completely dry. Otherwise, the electric blanket may be damaged.



### **WARNING**

Under no circumstances switch on the electric blanket to dry it! Otherwise, there is a risk of electric shock.

## 6. Storage

If you do not intend to use the electric blanket for a prolonged period, we recommend that you store it in its original packaging. To do this, disconnect the connector and thus the plug from the electric blanket.



### **IMPORTANT**

- Allow the electric blanket to cool down first. Otherwise, the electric blanket may be damaged.
- Do not place any objects on the electric blanket whilst it is in storage. This will prevent it from becoming creased.

## 7. Disposal

For environmental reasons, the appliance must not be disposed of with ordinary household waste when it has reached the end of its useful life. Disposal can be arranged at the relevant local collection point. The appliance must be disposed of in accordance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). Please contact your local council's technical department if you have any further questions.



## 8. What should I do if there are problems?

| Problem                                                                                                                                                                                                                             | Cause                                                                | Solution                                                      |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------|---------------------------------------------------------------|
| The temperature settings do not light up when<br>- the control unit is fully connected to the electric blanket.<br>- the plug is inserted into a working socket.<br>- the slide switch on the side is set to the "I" (ON) position. | The safety system has permanently switched off the electric blanket. | Send the electric blanket and the plug to the service centre. |

## 9. Technical data

See the type plate label on the electric blanket.

## 10. Warranty /service

Further details regarding the warranty and warranty conditions can be found in the accompanying warranty booklet.



**Read this user manual carefully. Follow the warning and safety information. Keep the user manual for future reference. Ensure that the user manual is available to other users. If the product is passed on to someone else, the user manual must accompany the product.**

## Contents

|                                                   |    |                                               |    |
|---------------------------------------------------|----|-----------------------------------------------|----|
| 1. Package contents.....                          | 73 | Setting the temperature.....                  | 76 |
| 1.1 Product description.....                      | 73 | 4.5 Automatic switch-off.....                 | 76 |
| 2. Important information                          |    | 4.6 Switch off.....                           | 76 |
| Keep the user manual so that you can use it later |    | 5. Cleaning and maintenance.....              | 77 |
| .....                                             | 74 | 6. Storage.....                               | 77 |
| 3. Intended use.....                              | 75 | 7. Waste sorting.....                         | 78 |
| 4. Use.....                                       | 76 | 8. What should I do if a problem arises?..... | 78 |
| 4.1 Safety.....                                   | 76 | 9. Technical data.....                        | 78 |
| 4.2 Usage.....                                    | 76 | 10. Warranty / service.....                   | 78 |
| 4.3 Connection.....                               | 76 |                                               |    |

## Key

### 4.4 .....

The following symbols are used on the product, in the user manual, on the packaging and on the rating plate:

|  |                                                                                                                 |  |                                                      |
|--|-----------------------------------------------------------------------------------------------------------------|--|------------------------------------------------------|
|  | <b>WARNING;</b> Warns of a risk of personal injury or danger to health.                                         |  |                                                      |
|  | <b>NOTE:</b> Warns of a risk of damage to the device or its accessories.                                        |  |                                                      |
|  | <b>NOTE;</b> Indicates important information.                                                                   |  |                                                      |
|  | Read the instructions!                                                                                          |  | Do not insert needles into the pad!                  |
|  | Must not be used when folded or pushed together!                                                                |  | Not to be used by children under three years of age! |
|  | Manufacturer                                                                                                    |  |                                                      |
|  | Class 2 safety-rated appliance                                                                                  |  |                                                      |
|  | Dispose of the product in accordance with the EC Directive on waste electrical and electronic equipment (WEEE). |  |                                                      |
|  | Sort the packaging components and dispose of them in accordance with local regulations.                         |  |                                                      |

|                                                                                                                                                                                                                                                                                                                         |                                                                                                                                                                    |                                                                                   |                   |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-------------------|
|                                                                                                                                                                                                                                         | Markings for identifying packaging materials. A = material abbreviation, B = material number:<br>1–7 = plastic, 20–22 = paper and cardboard                        |                                                                                   |                   |
|                                                                                                                                                                                                                                        | Separate the product and packaging components and dispose of them in accordance with local regulations.                                                            |                                                                                   |                   |
|                                                                                                                                                                                                                                        | This product complies with current European and national guidelines.                                                                                               |                                                                                   |                   |
|                                                                                                                                                                                                                                        | UKCA mark                                                                                                                                                          |                                                                                   |                   |
|                                                                                                                                                                                                                                        | The products have been proven to meet the requirements of the EAEU's technical regulations.                                                                        |                                                                                   |                   |
|  <p> <b>OEKO-TEX®</b><br/>         CONFIDENCE IN TEXTILES<br/> <b>STANDARD 100</b><br/>         by Hohenstein<br/>         06.0.43510 HOHENSTEIN HTL<br/> <small>Geprüft auf Schadstoffe.<br/>www.oeko-tex.com/standard100</small> </p> | The textiles used in this appliance meet the high human ecological requirements of the Oeko-Tex Standard 100, as established by the Hohenstein Research Institute. |                                                                                   |                   |
|                                                                                                                                                                                                                                        | Maximum washing temperature<br>30 °C, very gentle cycle                                                                                                            |  | Do not iron       |
|                                                                                                                                                                                                                                                                                                                         |                                                                                                                                                                    |  | Do not bleach     |
|                                                                                                                                                                                                                                        | Do not dry clean                                                                                                                                                   |  | Do not tumble dry |


1. Package contents

Check that the product packaging is undamaged and that all parts are included. Before use, you should check that the product and accessories have no visible damage and that all packaging material has been removed. Do not use it if you are in any doubt; instead, contact the retailer or our service address.

- 1 Heating blanket
- 1 Control unit
- 1 User manual

1.1 Product description

- 1. Contact
- 2. Switch
- 3. Slider (ON = I/OFF = 0)
- 4. Button for temperature setting
- 5. Illuminated display of temperature settings
- 6. Connection

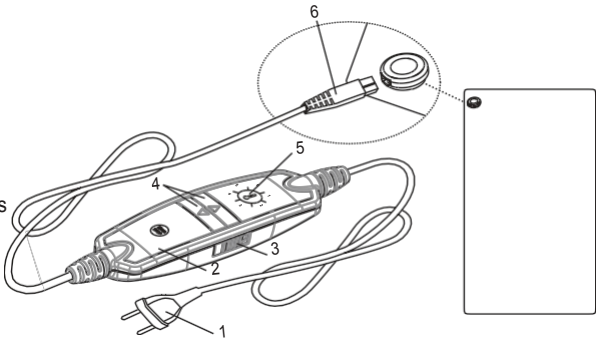

## 2. Important information

### Keep the user manual so that it can be used for future reference



#### **WARNING**

- Failure to follow the instructions below may result in personal injury or property damage (electric shock, burns, fire). The following safety instructions and warnings protect not only your health and that of others, but also the product itself. Follow the safety instructions and ensure the user manual accompanies the product if it is to be used by anyone else.
- This heated blanket must not be used by people who are sensitive to heat or others requiring special care, as they may be unable to react to overheating (for example, diabetics, people with skin conditions caused by illness, people with scars in the treatment area, or people who have taken medication or consumed alcohol).
- The heated blanket must not be used by very young children (0–3 years) as they are unable to react to overheating.
- The heated blanket may be used by children aged 3 to 8 years provided they are supervised and the temperature control is always set to the lowest setting.
- The electric blanket may be used by children over 8 years of age and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, provided they are supervised or have been instructed on how to use the product safely and understand the risks involved.
- Do not allow children to play with the electric blanket.
- Cleaning and general maintenance must not be carried out by children unless supervised by an adult.
- The electric blanket is not intended for commercial use or for use in hospitals.
- This electric blanket is intended for domestic use only and must not be used for commercial purposes.
- Do not insert any needles into the product.
- Must not be used folded or rolled up.
- Do not use when wet.
- The heated blanket must only be used with the control unit specified on the label.
- The heated blanket must only be connected to the mains voltage specified on the label.

- The electric and magnetic fields emitted by the heated blanket may sometimes interfere with the functioning of a pacemaker. However, they are well below the limit values for electric field strength: max. 5,000 V/m, magnetic field strength: max. 80 A/m, magnetic flux density: max. 0.1 milli-Tesla. Consult your doctor and the pacemaker manufacturer before using the electric blanket.
- Do not pull on the cables, twist them, or bend or fold them sharply.
- If the heating blanket's cable and controls are positioned incorrectly, there is a risk of them becoming trapped, strangled, tripped over or stepped on. The user must ensure that any unused cable length and the cable in general are routed safely.
- Check the electric blanket regularly for signs of damage or wear. If such signs are present, if the electric blanket has been used incorrectly, or if it no longer heats up, it must be inspected by the manufacturer before being used again.
- Never open or repair the electric blanket (or its accessories) yourself, as this will invalidate the guarantee of its proper functioning. Failure to follow these instructions will void the guarantee.
- If the heating blanket's power cord is damaged, the cord must be discarded. If the cord cannot be unplugged, the heating blanket must be discarded.
- Do not expose the switch or cables to direct sunlight.
- While the electric blanket is switched on,
  - no objects with sharp edges be placed on it
  - no heat sources, such as hot water bottles, heating pads or similar items, be placed on it.
- The electronic components in the control unit heat up when the electric blanket is in use. The control unit must therefore not be covered or placed on top of the electric blanket whilst it is in use.
- It is essential that you follow the instructions in the following sections: Use, cleaning and care, storage.
- If you would like to know more about how to use our products, please feel free to contact our customer service team.

### 3. Intended use



#### **IMPORTANT!**

This electric blanket must only be used to warm the human body.

## 4. Use

### 4.1 Safety



- The heated blanket is equipped with a SAFETY SYSTEM. This electronic sensor technology prevents the entire surface of the heated blanket from overheating by automatically switching off in the event of a fault.
- Please note that, for safety reasons, the heated blanket can no longer be used after a fault has occurred and must be sent to the specified service address.
- Never connect the faulty heated blanket to another control unit of the same type. This will cause it to switch off via the safety system in the control unit.

### 4.2 Use

- First, connect the control unit to the electric blanket by plugging in the plug.
- Then plug the power plug into the socket.



### 4.3 Switching on

Set the slide switch (3) on the right-hand side of the control unit to the "I" (ON) position, as shown in the diagram of the control unit. The temperature settings are illuminated when the product is switched on (5).

### 4.4 Adjusting the temperature

Press the "△" button (4) to increase the temperature. Press the "▽" button (4) to decrease the temperature.

Level 0: OFF

Level 1: Minimum heat

Levels 2–5: Individual heat

Level 6: Maximum heat



#### NOTE

The electric blanket heats up quickest if you set it to the highest temperature setting first.



## WARNING

If the heated blanket is used for several hours, we recommend setting the lowest temperature level via the control unit to prevent the user from becoming too hot and to avoid burns.

### 4.5 Automatic shut-off

The heated blanket switches off automatically after 3 seconds. The temperature level indicator flashes when it is switched off. Set the ON/OFF slide switch on the control unit to OFF (0) for five seconds to switch the heated blanket back on. After approximately five seconds, you can start the heated blanket again.

### 4.6 Turning off

Set the slider on the side of the control unit to the "0" (OFF) position to switch off the electric blanket. The temperature indicator will then go out.



#### PLEASE NOTE

When the electric blanket is not in use, set the ON/OFF slide switch to position "0" (OFF) and unplug the power plug from the socket. Then unplug the control unit from the electric blanket.

## 5. Cleaning and maintenance



### **WARNING**

Always unplug the power cord from the mains socket before cleaning. Then disconnect the plug and, in doing so, disconnect the control unit from the electric blanket. Risk of electric shock.



### **NOTE**

The control unit must never come into contact with water or other liquids. Otherwise, it may be damaged.

- Clean the control unit with a dry, lint-free cloth. Do not use any chemical cleaning agents or all-purpose cleaners.
- Minor stains on the electric blanket can be removed with a damp cloth or sponge and, if necessary, a little liquid detergent.



### **NOTE**

Please note that the electric blanket must not be dry-cleaned, wrung out, tumble-dried, mangled or ironed.

- The heated blanket is machine washable.
- Set the washing machine to a gentle cycle at 30°C (wool wash). Use a mild detergent and measure it out according to the manufacturer's instructions.



### **NOTE**

Please note that the heated blanket will wear out if washed too often. The heated blanket should therefore be machine-washed no more than five times during its entire lifespan.

- Immediately after washing, the still-damp heated blanket should be stretched back to its original dimensions. Then leave it to dry flat on a drying rack.



### **NOTE**

- Do not use clothes pegs or similar items to secure the heated blanket to the drying rack. The blanket may be damaged.
- Do not reconnect the control unit to the heated blanket until the connector and the blanket are completely dry. Otherwise, the blanket may be damaged.



### **WARNING**

Never plug in the electric blanket to dry it! Risk of electric shock.

## 6. Storage

If you do not intend to use the electric blanket for a long period of time, we recommend that you store it in its original packaging. Unplug the power cord and remove the control unit from the electric blanket.



### **NOTE**

- Allow the heating pad to cool down first. Otherwise, the pad may be damaged.
- Do not place any objects on the heating pad during storage to prevent it from bending sharply.

## 7. Waste sorting

For environmental reasons, the product must not be disposed of with household waste. Instead, take it to a recycling centre. The product must be disposed of in accordance with the EU Directive on waste electrical and electronic equipment (WEEE). If you have any questions regarding waste disposal, please contact your local authority.



## 8. What should I do if a problem arises with ?

| Problem                                                                                                                                                                                                                                                                                                     | Cause                                                                          | Action                                                       |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------|--------------------------------------------------------------|
| The temperature indicators do not light up when <ul style="list-style-type: none"><li>- the control unit is fully connected to the electric blanket</li><li>- the mains plug is connected to a working socket</li><li>- the slide switch on the side of the control unit is set to level "I" (ON)</li></ul> | The safety system has switched off the electric blanket and it cannot be used. | Send the electric blanket and control unit in for servicing. |

## 9. Technical data

See the rating plate on the electric blanket.

## 10. Warranty /service

Further information about the warranty and warranty terms can be found in the accompanying warranty leaflet.



**Read this user manual carefully. Follow the warnings and safety instructions. Keep the user manual for future reference. Ensure that it is also available to other users. If you pass the product on to others, the user manual must be included.**

## Contents

|                                        |    |                                               |    |
|----------------------------------------|----|-----------------------------------------------|----|
| 1. Contents .....                      | 80 | Set the temperature .....                     | 83 |
| 1.1 Description of the appliance ..... | 80 | 4.5 Automatic switch-off .....                | 83 |
| 2. Important information               |    | 4.6 Switch off .....                          | 83 |
| Keep for future reference .....        | 81 | 5. Cleaning and maintenance .....             | 84 |
| 3. Intended use .....                  | 82 | 6. Storage .....                              | 84 |
| 4. Operation .....                     | 83 | 7. Waste management .....                     | 85 |
| 4.1 Safety .....                       | 83 | 8. What to do if you encounter problems ..... | 85 |
| 4.2 Usage .....                        | 83 | 9. Technical data .....                       | 85 |
| 4.3 Turn on .....                      | 83 | 10. Warranty / service .....                  | 85 |
| 4.4 .....                              |    |                                               |    |

## Key to symbols

The following symbols are used on the device itself, in the user manual, on the packaging and on the device's labelling:

|  |                                                                                                 |  |                                                 |
|--|-------------------------------------------------------------------------------------------------|--|-------------------------------------------------|
|  | <b>WARNING;</b> Warning of risk of injury or danger to your health.                             |  |                                                 |
|  | <b>NOTE;</b> Safety information regarding possible damage to the appliance or accessories.      |  |                                                 |
|  | <b>NOTE;</b> Note regarding important information.                                              |  |                                                 |
|  | Read the instructions!                                                                          |  | Do not insert needles into the product!         |
|  | The mat must not be used when folded or pushed together!                                        |  | Not suitable for children under 3 years of age. |
|  | Manufacturer                                                                                    |  |                                                 |
|  | Class 2 appliance                                                                               |  |                                                 |
|  | Dispose of in accordance with the EU Waste Electrical and Electronic Equipment (WEEE) Directive |  |                                                 |
|  | Separate the packaging components and dispose of them in accordance with local regulations.     |  |                                                 |

|                                                                                   |                                                                                                                                                                 |                                                                                   |                   |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-------------------|
|   | Marking to identify the packaging material. A = material abbreviation, B = material number: 1–7 = plastic, 20–22 = cardboard and paper                          |                                                                                   |                   |
|  | Separate the product and packaging components, and dispose of them in accordance with applicable regulations.                                                   |                                                                                   |                   |
|  | This product complies with all requirements of the applicable European and national directives.                                                                 |                                                                                   |                   |
|  | Conformity assessment mark from the United Kingdom                                                                                                              |                                                                                   |                   |
|  | The products comply with the requirements of the EAWU's technical regulations.                                                                                  |                                                                                   |                   |
|   | The textiles used in this appliance meet the high human ecological requirements of the Oeko-Tex Standard 100, as verified by the Hohenstein Research Institute. |                                                                                   |                   |
|  | Maximum washing temperature 30 °C very gentle process                                                                                                           |  | Do not iron       |
|                                                                                   |                                                                                                                                                                 |  | Do not bleach     |
|  | Do not dry clean                                                                                                                                                |  | Do not tumble dry |


1. Contents

Check that the appliance’s packaging is undamaged and that the contents are complete. Before use, check that the appliance and accessories show no visible damage and that all packaging has been removed. Do not use the appliance if you think it may be damaged. Instead, contact your local dealer or customer service.

- 1 Electric blanket
- 1 Bryter
- 1 User manual

1.1 Description of the

- 1. Mains plug
- 2. Switch
- 3. Slide switch (ON = I / OFF = 0)
- 4. Temperature setting buttons
- 5. Illuminated indicator for temperature settings
- 6. Plug connection

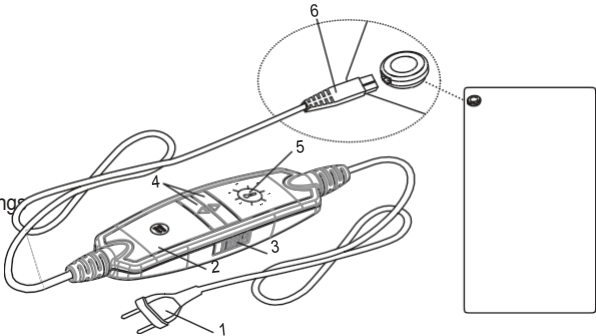

## 2. Important information

### Keep for future reference



#### **WARNING**

- Failure to follow the instructions may result in personal injury or property damage (electric shock, skin burns, fire). The safety instructions below are intended to protect your own health and that of others, as well as to protect the product. Therefore, these safety instructions must be followed and must be included if you pass the product on to a third party.
- This electric blanket must not be used by people who are insensitive to heat, nor by people who are particularly vulnerable because they cannot react to overheating (e.g. diabetics, people with conditions caused by skin changes or scarring in the area of use, or those who have taken painkillers or alcohol).
- This electric blanket must not be used by children aged between 0 and 3 years, as such young children are unable to react to overheating.
- The heated blanket can be used by children aged 3 to 8 years under adult supervision. The switch must always be set to the minimum temperature.
- This heated blanket can be used by children aged 8 years and older, as well as by people with reduced physical, sensory or mental capabilities, or by people who lack experience and knowledge, provided they are supervised or have received training in the safe use of the product and are aware of the risks involved.
- Children must not play with the product.
- Children must not clean or maintain the product without supervision.
- This electric blanket is not intended for use in hospitals.
- This electric blanket is intended for use in domestic/private settings only, not for professional use.
- Do not stick pins into the electric blanket!
- Do not use the electric blanket when it is folded or compressed.
- Do not use when wet.
- This electric blanket must only be used with the switch specified on the label.
- The electric blanket must only be connected to the mains voltage specified on the label.

- The electric and magnetic fields generated by this electric heated blanket may, under certain circumstances, interfere with a pacemaker. However, they remain below the limit values: Electric field strength: max. 5000 V/m; magnetic field strength: max. 80 A/m; magnetic flux density: max. 0.1 millitesla. Consult your doctor and the manufacturer of the pacemaker before using the electric blanket.
- Do not pull, twist or kink the cables.
- The cable and switch on the electric blanket may pose a risk of entanglement, suffocation and tripping if positioned incorrectly. The user must ensure that excess cables and cables in general are placed in a safe location.
- Check the electric blanket regularly for signs of wear or damage. If you notice any such signs, if the electric blanket has been used incorrectly, or if it no longer heats up, have it checked by the manufacturer before reconnecting it.
- Do not attempt to open or repair the electric blanket yourself (including any accessories). If you do, we can no longer guarantee that the appliance will function correctly. Failure to comply with this rule will invalidate the warranty.
- If the power cord for this electric blanket is damaged, it must be discarded. If it is not detachable, the electric blanket must be discarded.
- Do not expose switches and cables to direct sunlight.
- When the electric blanket is switched on,
  - do not place objects with sharp edges on it,
  - and no heat sources, such as hot water bottles, heating pads or similar items, must be placed on it.
- The electronic components in the switch heat up when the electric blanket is in use. The switch must therefore not be covered or placed on top of the electric blanket whilst it is in use.
- It is important that you follow the instructions in the following sections: Operation, cleaning and maintenance, and storage.
- If you have any other questions regarding the use of one of our products, please contact our customer service team.

### 3. Proper use



#### NOTE

This electric blanket is intended solely for warming the human body.

## 4. Operation

### 4.1 Safety




#### NOTE

- The electric blanket is equipped with a SAFETY SYSTEM. The system's sensor technology prevents the electric blanket from overheating across its entire surface thanks to automatic shut-off in the event of a fault.
- After a fault, the electric blanket can no longer be used for safety reasons; it must be sent to the specified service address for repair.
- Never connect the faulty electric blanket to another switch of the same type. This would also result in a permanent disconnection due to the safety system in the switch.

### 4.2 Usage

- Do not connect the switch to the electric blanket until you have assembled the plug connector.
- Then plug the plug into the socket.

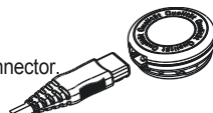

### 4.3 Switch on

Set the slide switch (3) on the right-hand side of the switch to the 'I' (ON) position – see illustration of switch. When the product is switched on, the temperature setting indicator (5) lights up.

### 4.4 Adjusting the temperature

Press the “△” button (4) to increase the temperature. Press the “▽” button (4) to decrease the temperature.

- Step 0: OFF  
Step 1: Minimum heat  
Levels 2–5: Individual heat  
Level 6: Maximum heat



#### NOTE

The quickest way to heat up the blanket is to select the highest temperature setting.



### WARNING

If the electric blanket is used for several hours, we recommend setting the temperature to the lowest level to avoid overheating the body and possible subsequent skin burns or heatstroke.

### 4.5 Automatic shut-off

This electric blanket switches off automatically after 3 hours. The temperature setting indicator flashes when the switch-off is complete.

To switch the electric blanket back on, first set the ON/OFF slide switch on the side of the switch to the OFF (0) and wait 5 seconds. After approx. 5 seconds, you can switch the product back on.

### 4.6 Turn off

Set the slide switch on the side of the control unit to position '0' (OFF) to switch off the electric blanket. The temperature setting indicator will go out.



#### NOTE

If the electric blanket is not in use, set the ON/OFF slide switch on the side to the “0” (OFF) position and unplug the appliance from the socket. Then disconnect the plug connector and thus the switch from the electric blanket.

## 5. Cleaning and maintenance



### WARNING

Always unplug the appliance from the socket before cleaning. Then disconnect the plug connector and, in doing so, switch off the electric blanket. Failure to do so may result in an electric shock.



### NOTE

The switch must never come into contact with water or other liquids. If this happens, it may be damaged.

- Use a dry, lint-free cloth to clean the electric blanket and the switch. Do not use chemical cleaning agents or abrasive cleaners.
- Small stains on the electric blanket can be removed with a damp cloth or a little liquid detergent.



### NOTE

Please note that the electric blanket must not be dry-cleaned, wrung out, tumble-dried, rolled up or ironed.

- The electric blanket is machine washable.
- Set the washing machine to a gentle cycle at 30°C (wool cycle). Use a mild detergent and follow the manufacturer's dosage instructions.



### NOTE

Please note that the heated blanket will wear out if washed too frequently. The heated blanket should therefore only be machine-washed a maximum of 5 times during its entire lifetime.

- Stretch the electric blanket back into its original shape after washing whilst it is still damp, and leave it to dry flat on a drying rack.



### NOTE

- Do not use clothes pegs or similar items to attach the electric blanket to the drying rack. This may damage the electric blanket.
- Do not connect the switch to the electric blanket until the plug and the electric blanket are completely dry. Doing so may damage the electric blanket.



### WARNING

Do not switch on the electric blanket to dry it! Doing so poses a risk of electric shock.

## 6. Storage

If the electric blanket is not going to be used for a while, we recommend storing it in its original packaging. To do this, disconnect the plug and switch from the electric blanket.



### NOTE

- Remember that the electric blanket must cool down first. Otherwise, you risk damaging the electric blanket.
- Do not place any objects on the electric blanket whilst it is in storage, as this may cause sharp creases.

## 7. Waste disposal

For environmental reasons, the appliance must not be disposed of with normal household waste at the end of its service life. Disposal must take place via the relevant collection points. The appliance must be disposed of in accordance with the WEEE Directive on waste electrical and electronic equipment – WEEE (Waste Electrical and Electronic Equipment). If you have any questions, please contact the relevant local authorities.



## 8. What to do in the event of problems

| Problem                                                                                                                                                                                                                              | Cause                                                                | Solution                                                   |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------|------------------------------------------------------------|
| The temperature settings do not light up when<br>- the switch is fully connected to the electric blanket<br>- the mains plug is connected to a working socket<br>- the slide switch on the side of the switch is set to the "I" (ON) | The safety system has permanently switched off the electric blanket. | Send the electric blanket and the switch in for servicing. |

## 9. Technical data

See the type plate on the electric blanket.

## 10. Warranty / service

You will find detailed information about the warranty and warranty terms in the enclosed warranty sheet.



**Read this user manual carefully. Follow the warnings and safety instructions. Keep the user manual for future reference. Ensure that the user manual is available to other users. If you pass the appliance on to someone else, include the user manual with the appliance.**

## Contents

|                                  |    |                                        |    |
|----------------------------------|----|----------------------------------------|----|
| 1. Contents of the package ..... | 87 | Adjusting the temperature .....        | 90 |
| 1.1 Product description .....    | 87 | 4.5 Automatic power-off function ..... | 90 |
| 2. Important instructions        |    | 4.6 Switching off .....                | 90 |
| Keep for future reference .....  | 88 | 5. Cleaning and care .....             | 91 |
| 3. Intended use .....            | 89 | 6. Storage .....                       | 92 |
| 4. Use .....                     | 90 | 7. Disposal .....                      | 92 |
| 4.1 Safety .....                 | 90 | 8. Problems during use .....           | 92 |
| 4.2 Commissioning .....          | 90 | 9. Technical specifications .....      | 92 |
| 4.3 Power connection .....       | 90 | 10. Warranty / service .....           | 92 |

4.4 .....

## Explanation of symbols

The following symbols are used on the device, in its user manual, on the packaging and on the type plate:

|  |                                                                                                               |  |                                                         |
|--|---------------------------------------------------------------------------------------------------------------|--|---------------------------------------------------------|
|  | <b>WARNING;</b> Warning of a risk of injury or a health hazard.                                               |  |                                                         |
|  | <b>CAUTION;</b> Warning of potential damage to the device or equipment.                                       |  |                                                         |
|  | <b>INSTRUCTION;</b> Note regarding important information.                                                     |  |                                                         |
|  | Read the instructions!                                                                                        |  | Do not pierce with needles!                             |
|  | Do not use whilst folded or compressed!                                                                       |  | Children under 3 years of age must not use this device. |
|  | Manufacturer                                                                                                  |  |                                                         |
|  | Class 2 device                                                                                                |  |                                                         |
|  | Dispose of the device in accordance with the EU's WEEE (Waste Electrical and Electronic Equipment) Directive. |  |                                                         |
|  | Remove the packaging components and dispose of them in accordance with local regulations.                     |  |                                                         |

|                                                                                   |                                                                                                                                                                                       |                                                                                   |                   |
|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-------------------|
|   | Identification marking for packaging material.<br>A = material abbreviation, B = material number:<br>1–7 = plastics, 20–22 = paper and cardboard                                      |                                                                                   |                   |
|  | Remove the packaging components from the product and dispose of them in accordance with local regulations.                                                                            |                                                                                   |                   |
|  | This product complies with the requirements of current European and national regulations.                                                                                             |                                                                                   |                   |
|  | UK Conformity Assessment Mark                                                                                                                                                         |                                                                                   |                   |
|  | These products have been certified as compliant with the technical standards of the Eurasian Economic Union.                                                                          |                                                                                   |                   |
|   | The textiles used in this appliance meet the strict environmental and ecological requirements of the Oeko-Tex Standard 100, as certified by the German Hohenstein Research Institute. |                                                                                   |                   |
|  | Wash at a maximum temperature of 30 °C on a very gentle cycle                                                                                                                         |  | Do not iron       |
|                                                                                   |                                                                                                                                                                                       |  | Do not bleach     |
|  | Do not dry clean                                                                                                                                                                      |  | Do not tumble dry |


1. Contents of the package

Check that the packaging is undamaged and that the delivery contains all parts. Before use, ensure that there is no visible damage to the appliance or accessories and that all packaging materials have been removed. If you are unsure about the condition of the device, do not use it. Contact your retailer or the customer service address provided.

- 1 Heating blanket
- 1 Controller
- 1 User manual

1.1 Description of the device

- 1. Mains plug
- 2. Controller
- 3. Slide switch (on = I / off = 0)
- 4. Buttons for temperature control
- 5. Heating level indicator lights
- 6. Connector

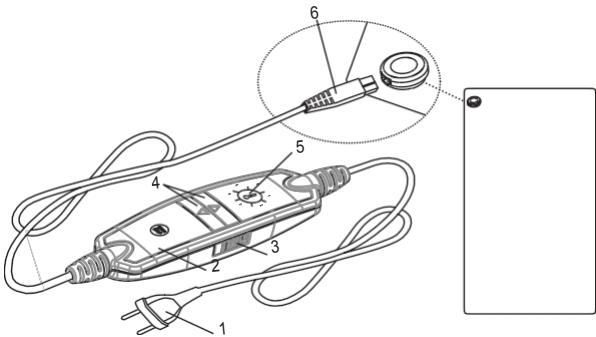

## 2. Important instructions for Keep for future reference regarding



### **WARNING**

- Failure to follow the instructions below may result in personal injury or property damage (electric shock, burns, fire). The following safety instructions and warnings have been drawn up not only to protect the health of the user and bystanders, but also to safeguard the device. Therefore, please follow these instructions and pass on this user manual if you pass the product on to someone else.
- This heated blanket must not be used by people who cannot feel heat, nor by people requiring care who are unable to react to overheating (e.g. diabetics or people with skin changes or scars in the area of use due to illness, or after taking pain-relieving medication or consuming alcohol).
- This heated blanket must not be used on small children (aged 0–3 years), as they are unable to react to overheating.
- The heated blanket may be used by children aged over 3 and under 8 under supervision; in such cases, however, the switch must always be set to the lowest temperature.
- Children over 8 years of age and persons with reduced physical, sensory or mental capabilities, or who lack the necessary experience and knowledge, may use the heated blanket if they are supervised and instructed on the safe use of the appliance and understand the risks involved.
- Children must not play with the electric blanket.
- Children must not clean or maintain the appliance without supervision.
- This electric blanket is not intended for hospital use.
- This electric blanket is intended solely for private domestic use, not for commercial use.
- Do not insert needles into the appliance.
- Do not use the appliance when folded or creased.
- Do not use the appliance when wet.
- The electric blanket must only be used with the controller specified on the label.
- The electric blanket must only be connected to the mains voltage specified on the label.

- The electric and magnetic fields generated by the electric blanket may interfere with the operation of a pacemaker. However, the field strengths are well below the limit values: electric field strength max. 5000 V/m, magnetic field strength max. 80 A/m, and the magnetic flux density is max. 0.1 millitesla. Always consult your doctor and the manufacturer of your pacemaker before using the electric blanket.
- Do not pull, bend or twist the cables.
- If placed carelessly, the heating blanket's cable and connectors may pose a risk of entanglement, strangulation, tripping or being run over. The user must ensure that excess cable and cables in general are always positioned safely.
- Check the electric blanket regularly for wear or damage. If any such issues are detected, if the electric blanket has been used improperly, or if it no longer heats up, it must be sent to the manufacturer for inspection before being switched on again.
- Under no circumstances should you open or repair the electric blanket (or its accessories) yourself, as this will invalidate the guarantee of the device's proper functioning. Failure to comply with this instruction will result in the warranty becoming void.
- If the power cord of this electric blanket is damaged, it must be disposed of properly. If the power cord cannot be replaced, the electric blanket must be disposed of properly.
- Do not expose switches and cables to direct sunlight.
- When the electric blanket is switched on, do not place
  - sharp objects,
  - heat sources, such as hot water bottles, heating pads or similar items.
- The electronic components of the controller heat up when the electric blanket is in use. The controller must therefore not be covered or placed on top of the electric blanket whilst in use.
- Please strictly follow the instructions contained in the following sections: Use, Cleaning and Care, Storage.
- If you have any questions regarding the use of our devices, please contact our customer service.

### 3. Proper use of the



#### **WARNING**

This heated blanket is intended solely for warming the human body.

## 4. Use

### 4.1 Safety




#### WARNING

- The heated blanket is equipped with a SAFETY SYSTEM. This sensor technology prevents the blanket from overheating across its entire surface by cutting off the power supply in the event of a fault.
- Please note that, for safety reasons, the electric blanket must not be used once a fault has occurred; instead, it must be sent to the specified service address.
- Never connect a faulty heating blanket to another controller of the same type. This would also result in the controller's safety system permanently switching off the device.

### 4.2 Commissioning

- First, connect the controller to the electric blanket using the plug connector.
- Then plug the power cord into a socket.

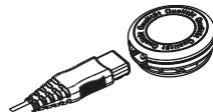

### 4.3 Switching the power on

Set the slide switch (3) on the right-hand side of the controller to the "I" (on) position – see the Controller diagram. When the power is on, the lights indicating the heat settings will be lit (5).

### 4.4 Adjusting the temperature

Increase the temperature by pressing the "△" button (4). Decrease the temperature by pressing the "▽" button (4).

Level 0: no heating (OFF)

Level 1: minimum heat

Levels 2–5: individually adjustable heat

Level 6: maximum heat



#### INSTRUCTIONS

The heated blanket heats up fastest when the highest heat setting is selected initially.



#### WARNING

If the electric blanket is used for several hours, we recommend selecting the lowest heat setting on the control panel. This prevents the body from overheating and the potential resulting burns or heatstroke.

### 4.5 Automatic

The electric blanket switches off automatically after 3 hours. The lights indicating the heat settings will flash when the device switches off.

To restart the electric blanket, first set the slide switch on the side of the controller, which is used to switch the device on and off, to the "0" (off) position for 5 seconds. After approximately 5 seconds, you can switch the device back on.

### 4.6 Turning the power off

Switch off the electric blanket by setting the slide switch on the side of the control unit to the "0" (off) position. The lights indicating the heat settings will go out.



#### INSTRUCTIONS

If the electric blanket is not in use, set the slide switch on the side of the controller to the "0" position (off) and unplug the mains plug from the socket. Then disconnect the connector and the controller from the electric blanket.

## 5. Cleaning and maintenance of the



### **WARNING**

Always unplug the mains lead from the socket before cleaning the appliance. Finally, disconnect the plug and thus the controller from the electric blanket. Otherwise, there is a risk of electric shock.



### **CAUTION**

The controller must never come into contact with water or other liquids. Otherwise, it may be damaged.

- Use a dry, lint-free cloth to clean the controller. Do not use chemical cleaning agents or abrasive materials.
- Small stains can be removed from the electric blanket using a damp cloth or sponge and, if necessary, a small amount of liquid detergent.



### **CAUTION**

Please note that the duvet must not be dry-cleaned, wrung out, tumble-dried, mangled or ironed.

- The heated blanket is machine washable.
- Select a particularly gentle 30 °C wash cycle (wool wash) on the washing machine. Use a mild detergent and follow the manufacturer's instructions.



### **PLEASE NOTE**

Please note that washing the thermal blanket too frequently will wear it out. The thermal blanket should therefore be machine-washed no more than five times during its entire lifetime.

- Immediately after washing, stretch the damp duvet back into its original shape and leave it to dry on a drying rack, spread out flat.



### **ATTENTION**

- Do not attach the duvet to the drying rack using clothes pegs or similar items. Otherwise, the duvet may be damaged.
- Only connect the regulator to the heating blanket once the plug and the heating blanket are completely dry. Otherwise, the heating blanket may be damaged.



### **WARNING**

Under no circumstances should you switch on the electric blanket for drying purposes! Otherwise, there is a risk of electric shock.

## 6. Storage

If the heated blanket is not to be used for a long period, it is recommended that you store it in its original packaging. To do this, disconnect the plug and the controller from the heated blanket.



### CAUTION

- Allow the electric blanket to cool down first. Otherwise, the electric blanket may be damaged.
- Do not place any objects on top of the electric blanket during storage, to prevent it from becoming creased.

## 7. Disposal

For environmental reasons, a device that has been taken out of service must not be disposed of with ordinary household waste. Dispose of the device by taking it to an appropriate collection and recycling point. The equipment must be disposed of in accordance with the EU's WEEE Directive (Waste Electrical and Electronic Equipment). For further information, please contact your local waste management authorities.



## 8. -related issues during use

| Problem                                                                                                                                                                                                                                                    | Reason                                                                        | Solution                                                |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------|---------------------------------------------------------|
| The heating level indicator lights are not lit, even though<br>- the controller is properly connected to the electric blanket<br>- the mains plug is plugged into a working socket<br>- the slide switch on the side of the controller is set to 'I' (on). | The safety system has irreversibly cut off the power to the electric blanket. | Send the electric blanket and controller for servicing. |

## 9. Technical

Technical specifications are indicated on the electric blanket's type plate.

## 10. Warranty /servicing

Further details regarding the warranty and warranty conditions can be found on the warranty card supplied.



UK Importer: Beurer UK Ltd.  
Suite 9, Stonecross Place • Yew Tree Way • WA3 2SH Golborne • United Kingdom



Beurer GmbH • Söflinger Str. 218 • 89077 Ulm, Germany • [www.beurer.com](http://www.beurer.com)  
[www.beurer-gesundheitsratgeber.com](http://www.beurer-gesundheitsratgeber.com) • [www.beurer-healthguide.com](http://www.beurer-healthguide.com)

